

68–455 Removal and installation of rear side wall

Removal

- 1** Remove crank arm (72–110).
- 2** Remove rear floor lining.
- 3** Unscrew three philips head screws on lining.
- 4** Move side wall in downward direction out of groove.
- 5** Remove side wall.

Installation

- 6** For installation proceed vice versa.