



Removal


- 1 Remove rear seat and rear backrest (91-170).
- 2 Remove screws of cover plate (refer to arrows 1).
- 3 Remove cover plate, separating plate from sealing rubber (attached to side wall with clips)
- 4 Remove screw (2) on side wall.
- 5 Remove switch for window opener (3).
- 6 Pull off lateral molding strip on shutter in forward direction.
- 7 Remove three screws (4) from side wall on wheel housing rear (refer to arrow 4).

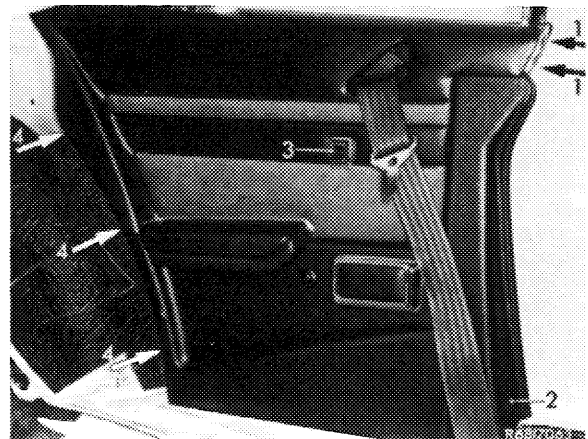

- 8 Push side wall top (5) out of clips with plastic wedge (6).

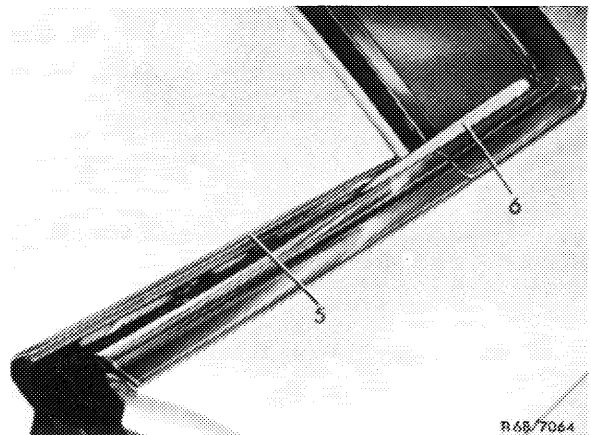


9 Remove screw from safety belt (7) on side member.

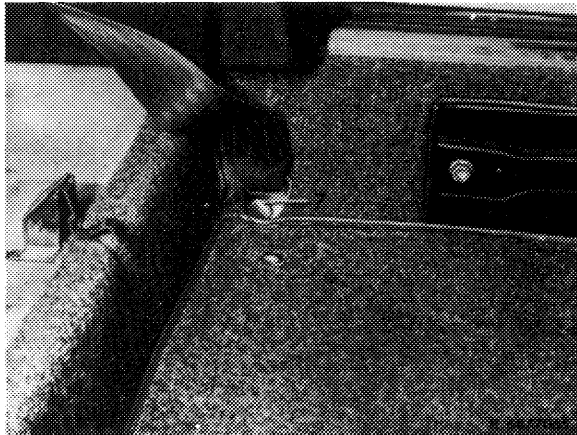

10 Pull vacuum hose (8) behind side wall from switch.

11 Remove side wall.

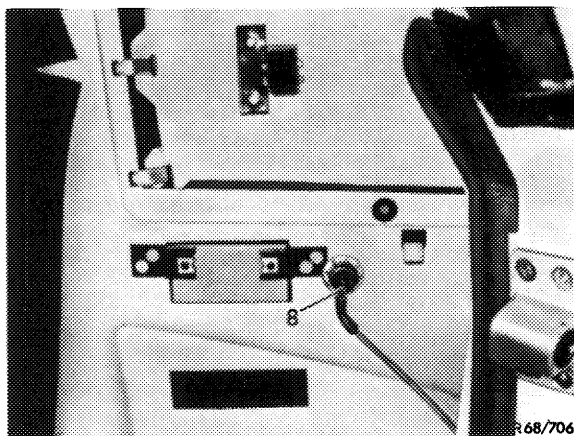

Installation

12 For installation proceed vice versa.