

Removal

- 1** Unscrew sheet metal screw (1) holding compensating tank to partition.
- 2** Remove screws from partition.
- 3** Remove partition.

Installation

- 4** For installation proceed vice versa.

