



Removal


- 1 Remove cover molding (1) at lock end (72-130).
- 2 Remove cover molding (2) at hinge end.
- 3 Remove escutcheon (3) on door lock.
- 4 Remove window crank (72-110).
- 5 Remove inset (4) on inside door actuation (72-120)
- 6 Unscrew screw (5) at front of arm rest.

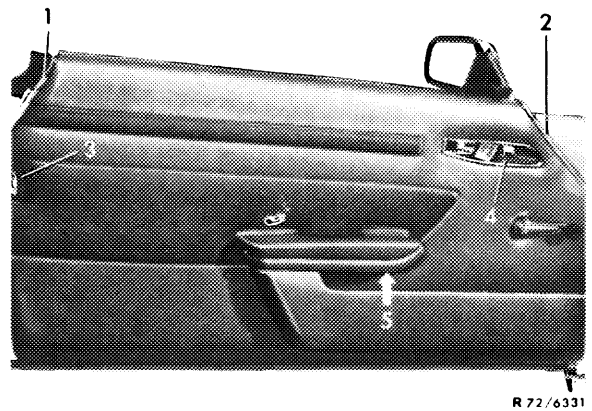


- 7 Pull door lining at bottom and rear from inside door panel, while lifting the clips (6) individually by means of a plastic wedge.

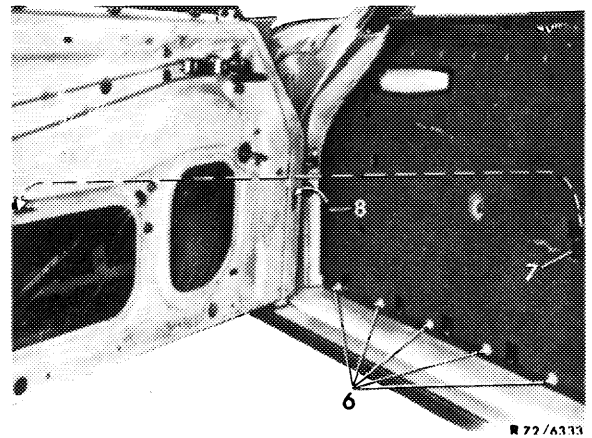

- 8 Push door lining with a plastic wedge against upper edge out of clips in upward direction.

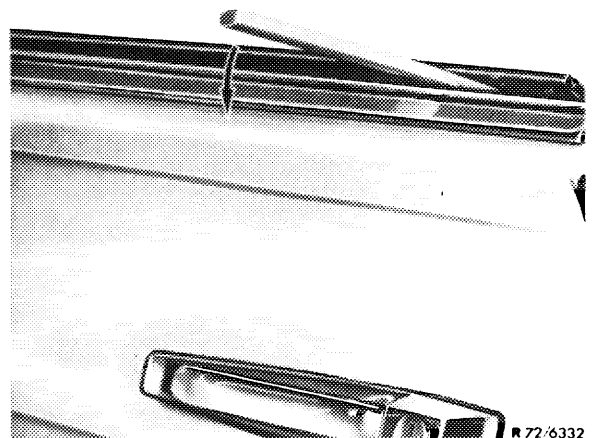

9 Separate door lining first on rear hook (7) and then on front hook (8) in upward direction.

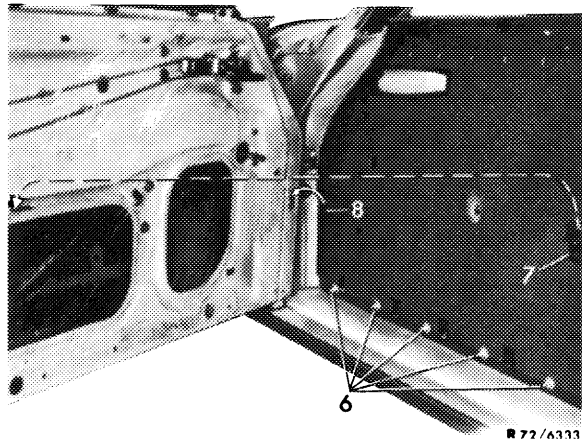

Installation

10 For installation proceed vice versa.