


72-110 Removal and installation of window crank

Removal

- 1 Raise padding (2) at knob end.
- 2 Pull padding toward knob and separate from recess (3).
- 3 Remove window crank from shaft (1) of crank unit including spacing washer and rosette.

Installation

- 4 For installation proceed vice versa.

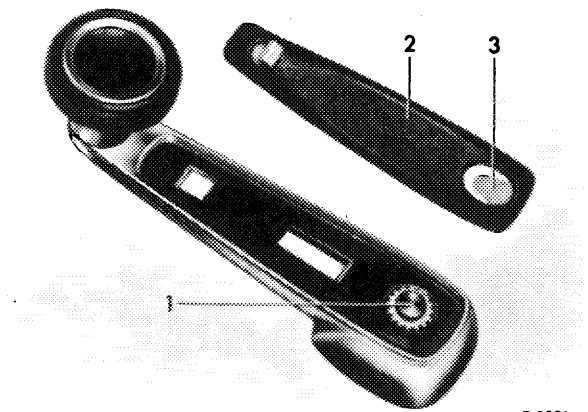

R-3996