

72–160 Removal and installation of inside sealing strip

Removal

- 1 Remove door lining (72–100).
- 2 Remove clips for sealing strip in upward direction.
- 3 Remove sealing strip.

Installation

- 4 For installation proceed vice versa.