



Removal

- 1 Remove window guide rear (72–200).
- 2 Pull crank window out toward the rear.

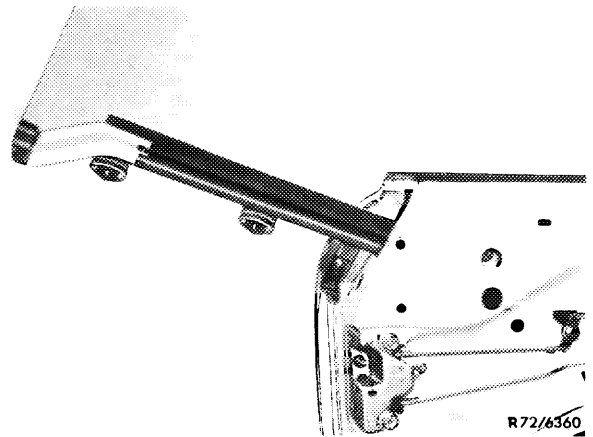

- 3 Tilt crank window and remove with care.

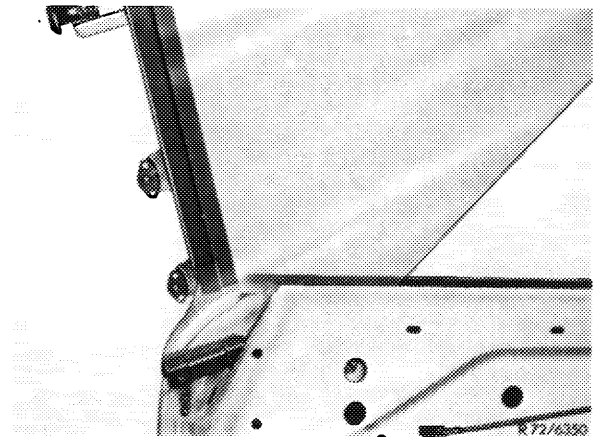

Installation

- 4 For installation proceed vice versa.

Adjust crank window prior to installing door lining (72–195).