

75–110 Removal and installation of hinged lever for trunk lid and top well cover

Removal

- 1** Remove trunk lid (75–100).
- 2** Remove torsion bars (75–130 or 135).
- 3** Unbend locking tooth hex. screw on bearing bolt.
- 4** Knock out bearing bolt slightly with plastic hammer and pull off with pliers.

Installation

- 5** For installation proceed vice versa.