

### Removal


---

#### Lefthand End

- 1 Remove locking ring (1) from bolt (2) and disconnect push rod (3).
- 2 Remove screws (4) from lower half of lock (5).
- 3 Remove lower half of lock (5).

#### Righthand End

- 4 Removal similar to lefthand end, but instead of push rod disconnect top well lid cable control.

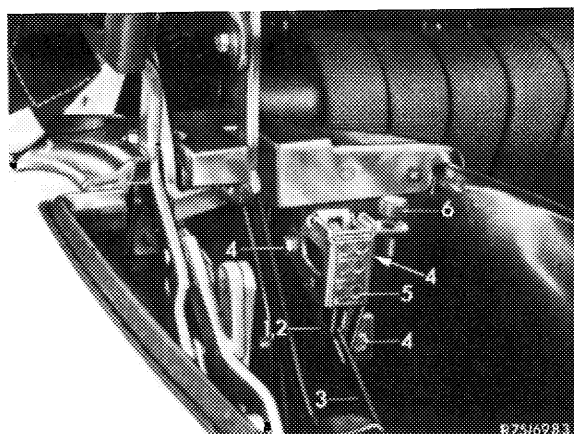

### Installation

---

- 5 For installation proceed vice versa.

Adjust stop screw (6) on lower half of lock in such a manner that lid closes under moderate pressure.