


77–320 Removal and installation of top lock on top well


Removal

- 1 Remove top from top well.
- 2 Remove protective padding from crank lever (1) (72–110).
- 3 Remove crank lever (1) and actuating lever (2).
- 4 Remove lower half of lock left and right (75–220).

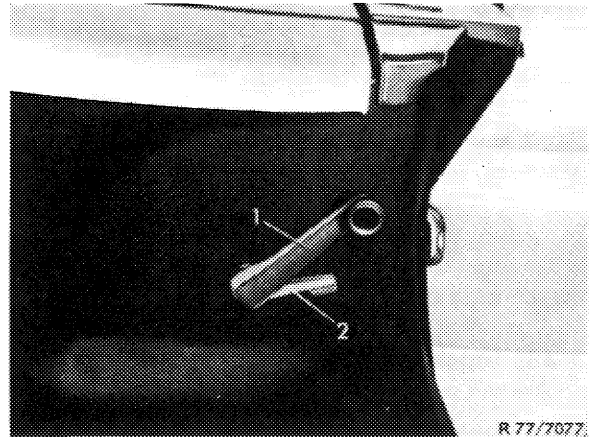


- 5 Identify location of center lock (6) in relation to top well.


- 6 Remove screws (5) and lock (6).

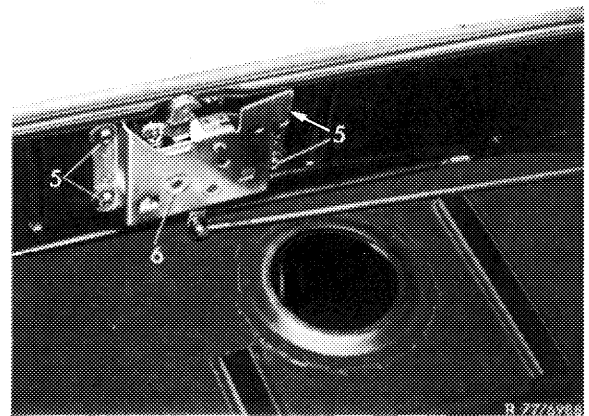

- 7 Remove fastening screws (7) on guide bearing (8) and remove guide bearing from top well.

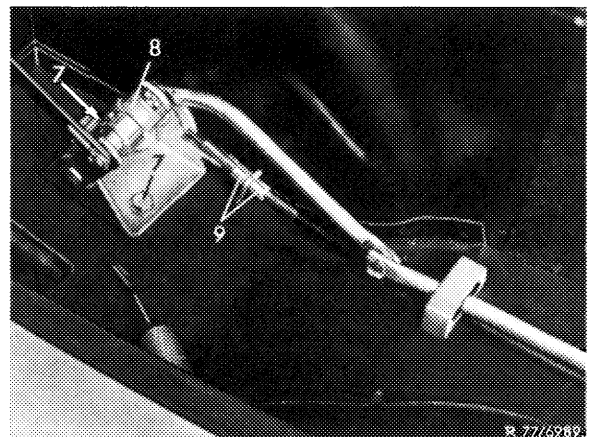

- 8 Remove lock washer (10) on guide lever (11).
- 9 Remove guide lever (11) and disconnect top well lid cable control (12).

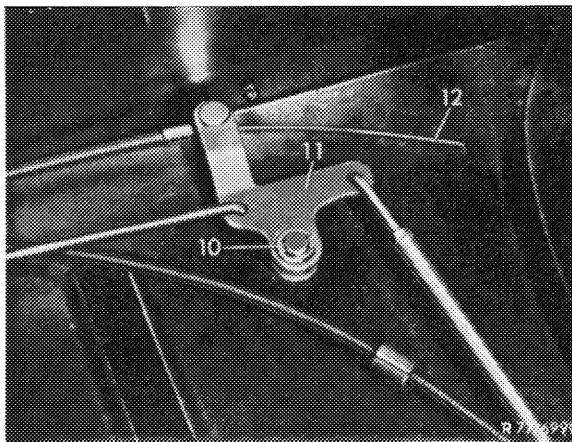

Installation

- 10 For installation proceed vice versa.

Secure knurled nut (9) for longitudinal adjustment of bowden wire with Loctite TL 270.

- 11 Adjust top well lock in its height in such a manner that the draw hook is under tension when the top is closed.

Check: Top should be seated free of play in draw hook when raised.

- 12 Install actuating lever (2) in such a manner that the handle plate faces the driving direction.

