


80-901 Functional diagram central interlock and air-conditioning system

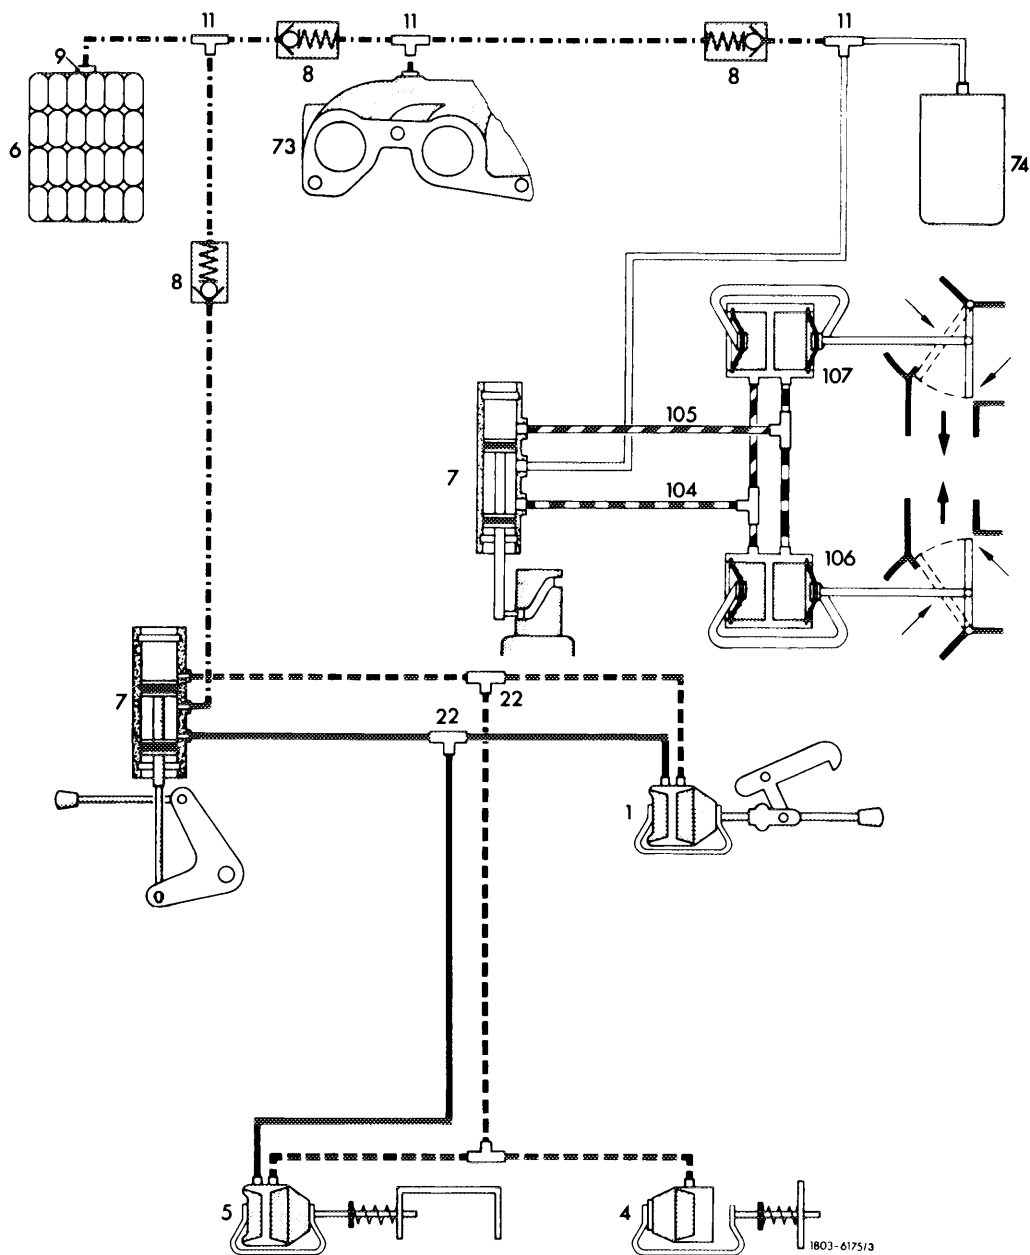

- 1 Vacuum element (front passenger door)
- 4 Vacuum element (flap for tank filler neck)
- 5 Vacuum element (trunk lid)
- 6 Vacuum supply tank
- 7 Vacuum switch
- 8 Check valve
- 9 Seal
- 11 Distributor
- 22 Distributor
- 73 Intake pipe
- 74 Vacuum supply tank (air-conditioner)
- 104 Control line (cooling circulating air)
- 105 Control line (cooling outside)
- 106 Vacuum element right (air-conditioner)
- 107 Vacuum element left (air-conditioner)

- Unlocking line
- - - - - Locking line
- · · · · Suction line
- Suction line (air-conditioner)
- Control line (cooling outside air)
- Control line (cooling circulating air)