


# 80-902 Functional diagram central and backrest interlock with air-conditioning system

Model 107.02

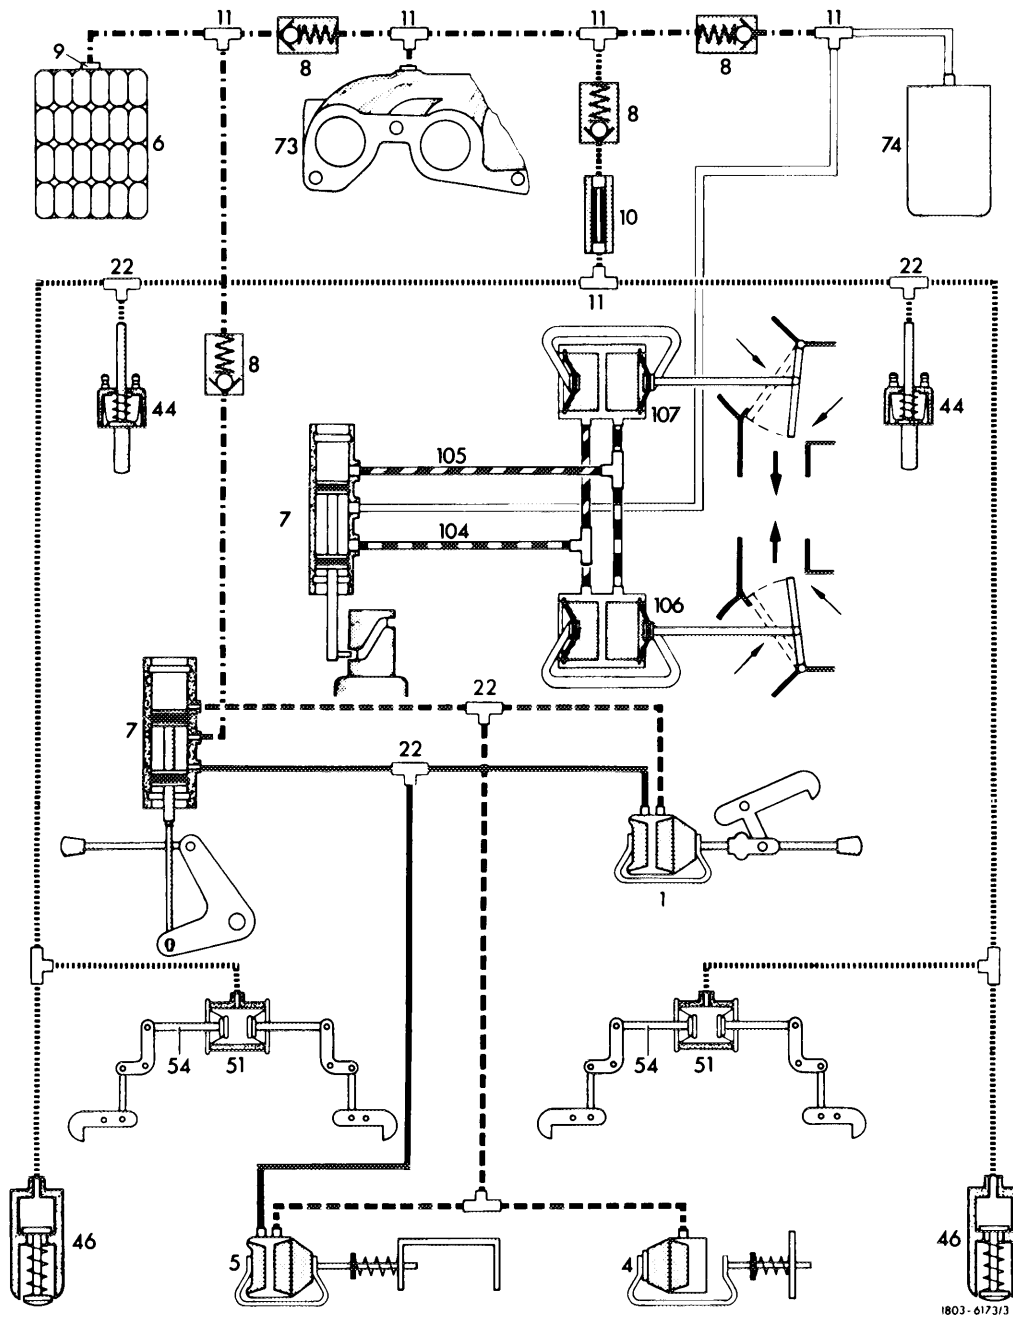

1803-6173/3

- Unlocking line
- - - - Locking line
- · · · Suction line
- · — · Suction line (air-conditioner)
- · — · Control line (cooling outside air)
- · — · Control line (cooling circulating air)
- · · · Control line

- |  |  |
|--|--|
| 1 Vacuum element (front passenger door)      | 44 Door contact vacuum switch              |
| 4 Vacuum element (flap for tank filler neck) | 46 Vacuum switch (rear compartment)        |
| 5 Vacuum element (trunk lid)                 | 51 Vacuum element (seat)                   |
| 6 Vacuum supply tank                         | 54 Actuating rod                           |
| 7 Vacuum switch                              | 73 Intake manifold                         |
| 8 Check valve                                | 74 Vacuum supply tank (air-conditioner)    |
| 9 Seal                                       | 104 Control line (cooling circulating air) |
| 10 Choke                                     | 105 Control line (cooling outside air)     |
| 11 Distributor                               | 106 Vacuum element right (air-conditioner) |
| 22 Distributor                               | 107 Vacuum element left (air-conditioner)  |