


Removal

- 1 Remove lamp carrier of right or left rear lamp unit (82-252).
- 2 Unscrew fastening screws (1) on both license plate lamps. Remove glass with gasket and pull lamp carrier down at left.
- 3 Remove cover at inside on rear center piece.

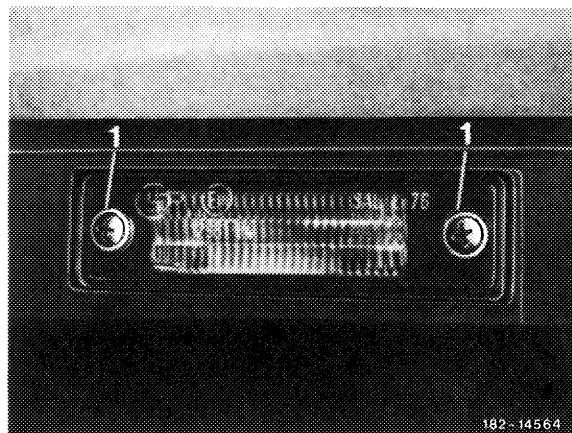

- 4 Pull cable with coupling inwards upon removal of rubber grommet (1). Remove righthand and lefthand license plate lamp from inside.

Installation

- 5 For installation proceed vice versa.

