


## 82-610 Removal and installation of wiper arm

---

### Removal


---

- 1 Lift wiper arm from windshield.
- 2 Disengage detent of covering cap by slightly lifting.

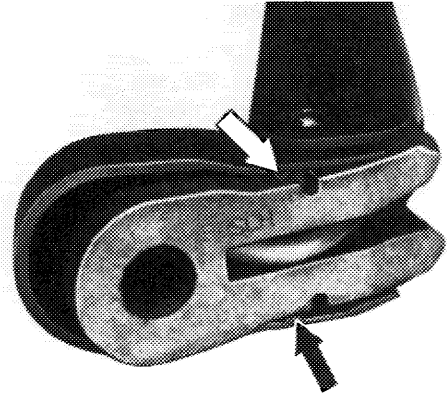

182-14128

- 3 Place wiper arm again against windshield glass while simultaneously completely lifting covering cap (1).
- 4 Unscrew fastening nut (2) and pull wiper arm from bearing shaft.

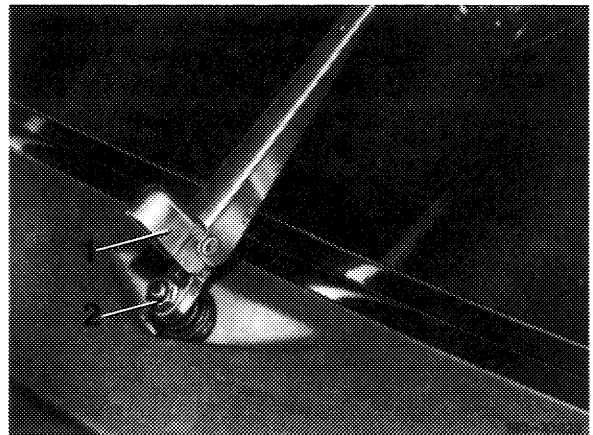

### Installation

---

- 5 For installation proceed vice versa.