

Removal

- 1** Unscrew two nuts on rear center piece in trunk and two screws on rear fender left and right.
- 2** Remove complete bumper toward the rear.

Disassembly

- 3** Unscrew nuts of protective rubber rail left and right from inside bumper.
- 4** Pull off protective rubber rail.
- 5** Remove cover for bumper joint left and right.
- 6** Remove two screws each on joint of panelling under bumper.
- 7** Remove screws on panelling of bumper and remove panelling.
- 8** Remove screws on bumper shells and remove shells.
- 9** Disassemble reinforcement.

Assembly

- 10** For assembly proceed vice versa.

Installation

- 11** For installation proceed vice versa.

Watch out for rubber discs of bumper holding bracket (body seal).