

## **88—410 Removal and installation of air flow grille under bumper**

---

### **Removal**

---

- 1** Loosen fog lamp with holding bracket from bumper.
- 2** Remove screws on air grille and remove grille.

### **Installation**

---

- 3** For installation proceed vice versa.