

### Seat Rail with Height Adjustment



---

- 1 Remove driver's seat (91—100).
- 2 Pull up lock and remove seat rails toward rear.

### Seat Fittings

---

- 1 Remove driver's seat (91—100).
- 2 Remove cap from hand wheel.
- 3 Turn spring washer (2) with screw driver toward the left and remove hand wheel.

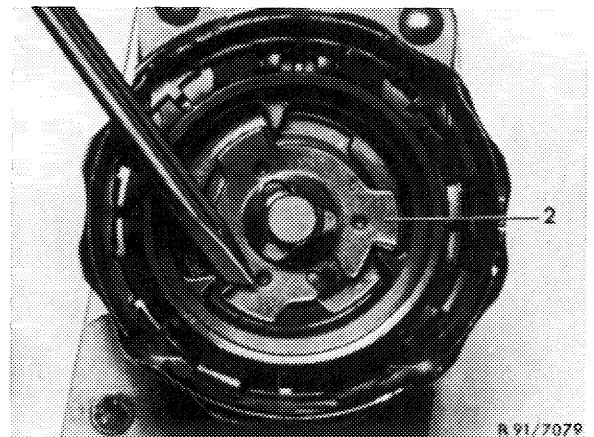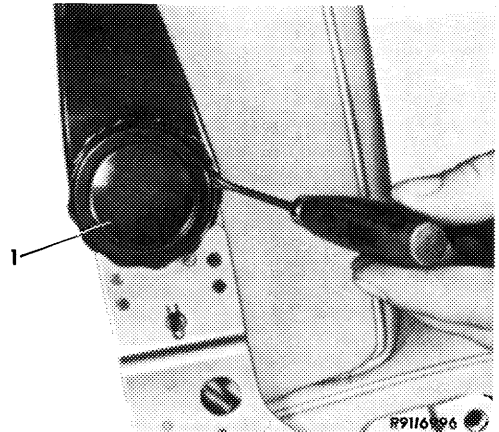

- 4 Remove cover molding top.
- 5 Unscrew Phillips head screws (2 each) on seat fittings.
- 6 Lift seat fittings and disconnect Bowden wire.

Prior to assembly of seat fittings, adjust Bowden wire in such a manner that lever of backrest lock completely releases locking lever upon actuation.

**Caution!** The two Phillips head screws on seat fittings are coated with locking paint, so that an impact screw driver should be used for loosening these screws.