



Removal

- 1** Push safety hook (1) toward rear and lift rear seat at front.
- 2** Lift off rear seat cushion in forward direction.

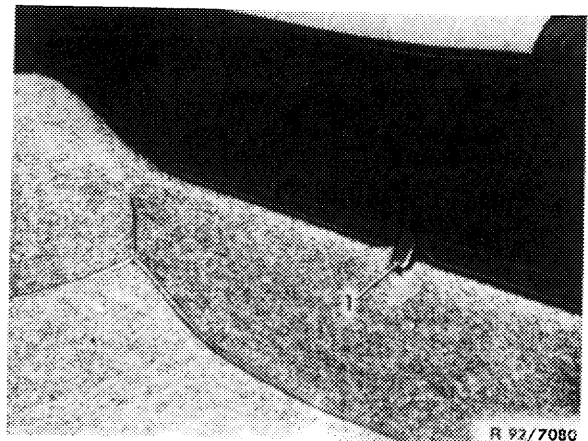

- 3** Remove the two nuts (2) right and left below on back seat rest.
- 4** Push back seat rest upwards and remove.

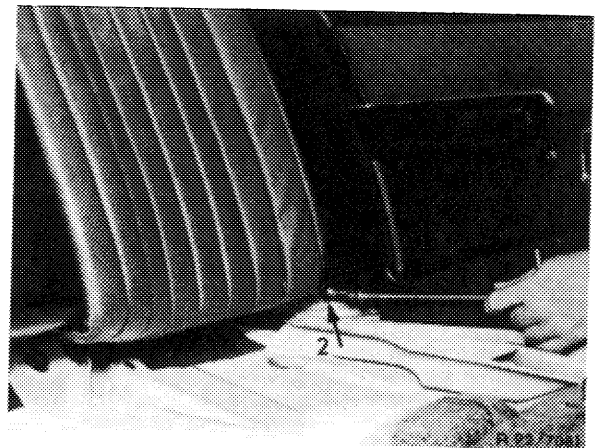

Installation

- 5** For installation proceed vice versa.