


### Removal

---

1 Remove cover (1) on blower.

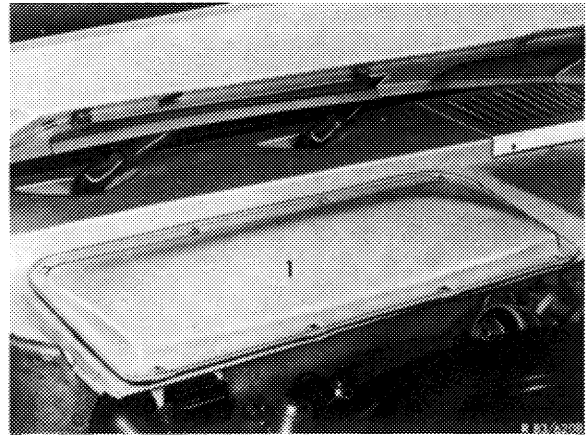


2 Loosen the four collar nuts (2) of blower attachment.

3 Pull plug (3) for series resistance (4) from front wall.

4 Remove series resistance.

5 Lift connecting cable and remove blower (5) from shaft.

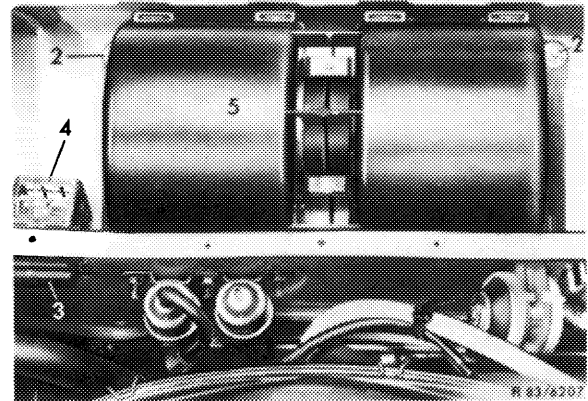

### Installation

---

6 For installation proceed vice versa.

Make sure that the sealing frame is not damaged.