



Removing control unit


- 1 Disconnect battery.
- 2 Remove radio.
- 3 Remove ashtray with holder.
- 4 Carefully pull covering for controls at bottom (arrow) out of holders.

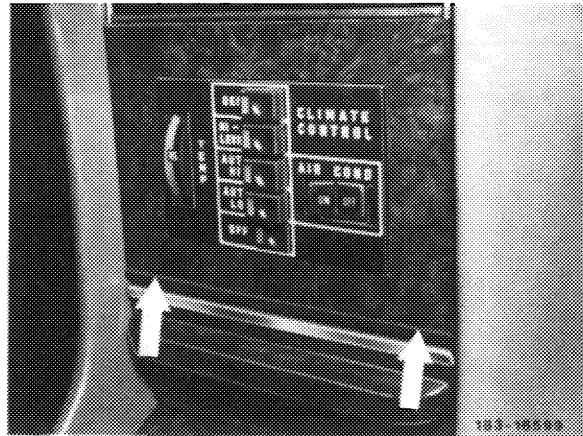

- 5 Loosen lefthand and righthand screw (62). Unscrew screw (62) at top and carefully pull out control unit.

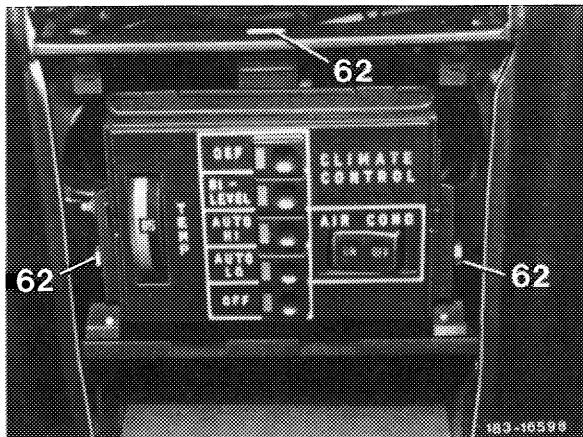

- 6 Pull electric plug from "ON/OFF" switch of refrigerant compressor (3), as well as vacuum plug connection on pushbutton switch.

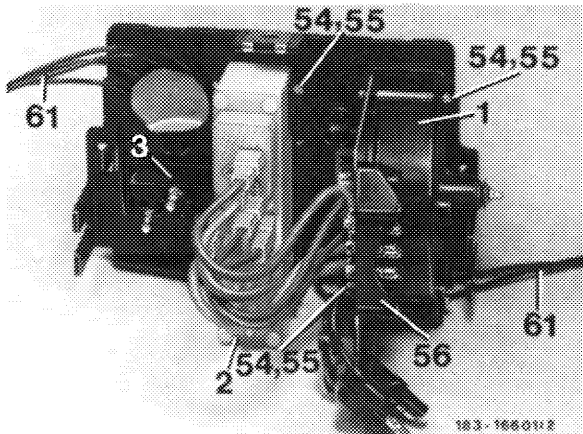

- | | |
|---------------------------------------------|-----------------|
| 1 Temperature dial | 54 Lock |
| 2 Pushbutton switch | 55 Holding pins |
| 3 "ON/OFF" switch of refrigerant compressor | 56 Plug |
| | 61 Light wire |

7 Pull off light wire (61) and separate double coupler for temperature dial and instrument lights.


8 Remove three lamps (60) for lighting instruments from control unit.

Removing pushbutton switch

9 Pull off electric flat plug.

10 Remove locks (54) and pull out holding pins (55).

- | | |
|---------------------------------------------|----------------|
| 1 Temperature dial | 54 Lock |
| 2 Pushbutton switch | 55 Holding pin |
| 3 "ON/OFF" switch of refrigerant compressor | 56 Plug |
| | 61 Light wire |

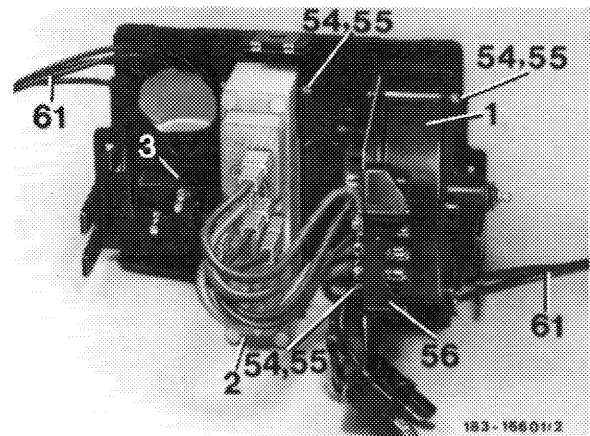


11 Pull pushbutton switch (2) out of control unit.

Installing pushbutton switch

- 12 Place pushbutton switch (2) into control unit and attach by means of holding pins (55).
- 13 Mount lock (54).
- 14 Attach electric flat plug.


- | | |
|---------------------|---------------------|
| 2 Pushbutton switch | c Color code red |
| a Color code green | d Color code yellow |
| b Color code grey | e Color code blue |

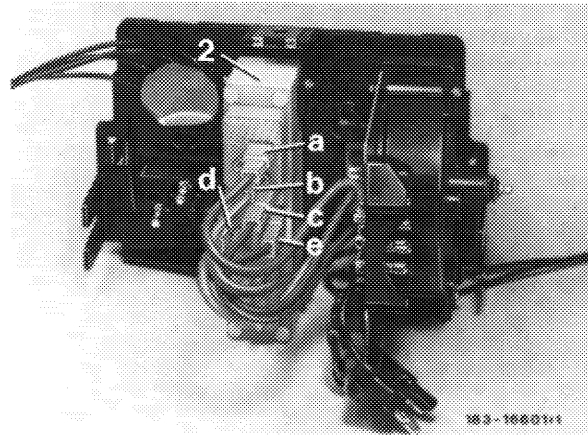

Removing temperature dial

- 15 Unscrew electric plug (56) from temperature dial (1).

- | | |
|---------------------------------------------|----------------|
| 1 Temperature dial | 54 Lock |
| 2 Pushbutton switch | 55 Holding pin |
| 3 "ON/OFF" switch of refrigerant compressor | 56 Plug |
| | 61 Light wire |

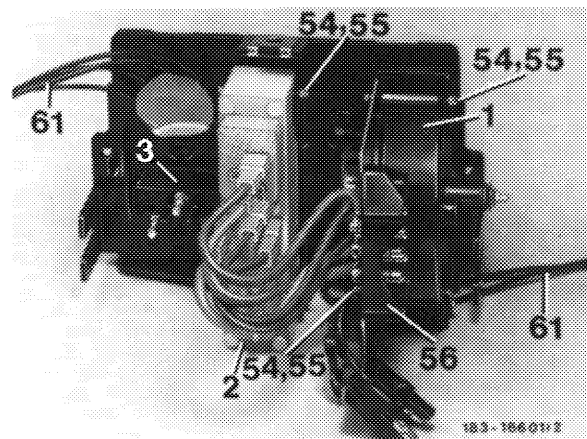


- 16 Remove locks (54) and pull out holding pins (55).
- 17 Pull temperature dial out of control unit.

Installation temperature dial

- 18 Place temperature dial (1) into control unit and attach by means of holding pins (55).
- 19 Mount locks (54).
- 20 Screw electric plug (56) to temperature dial (1).

Removing and installing "ON/OFF" switch for refrigerant compressor


21 "ON/OFF" switch (3) for refrigerant compressor is held in control unit by spring clamps. For removal, push switch out of control unit at the rear.

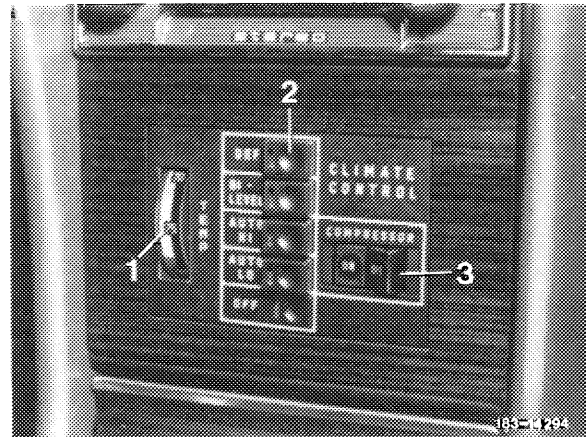

Installing control unit

22 Insert light wire (61) into control unit and connect double coupling.

23 Mount electric plug for "ON/OFF" switch, vacuum plug connection on pushbutton switch, and plug electric lamps for instrument lights to sockets in control unit.

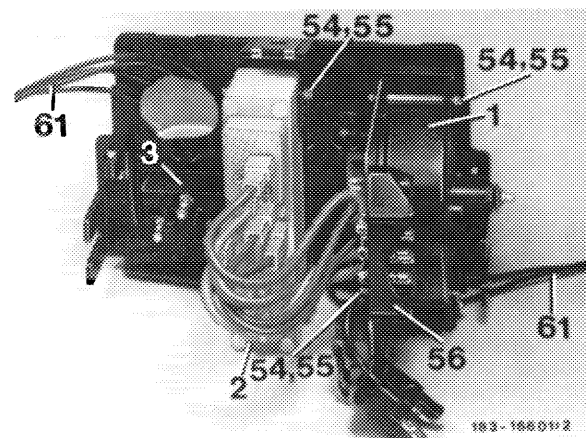

24 Insert control unit into housing and attach by means of three screws (62).

25 Mount encasing for control unit.

26 Install ashtray with holder.

27 Install radio.

28 Connect battery and check operation of automatic climate control.

