

83–655 Removal and installation of vacuum switch for refrigerant compressor (at “BI-LEVEL” only)


Data

Switch closes with vacuum higher than

78.5 mbar vacuum (0.08 atu)

Removal

- 1 Remove glove box (68–140).
- 2 Lift lock from vacuum switch (23 or 81) with a screwdriver.
- 3 Pull off vacuum line and electric plug.
 - 5 10-point plug connection for tester
 - 18 Double contact relay
 - 19 Vacuum switch (main switch, green)
 - 20 Vacuum switch (refrigerant compressor, yellow)
 - 23 Vacuum switch for refrigerant compressor (only at “BI-LEVEL”)
 - 28 Switchover valve legroom flap
 - 29 Switchover valve fresh air flap
 - 80 Switchover valve “BI-LEVEL” (at “DEF”)
 - 81 Vacuum switch (at “BI-LEVEL” only)

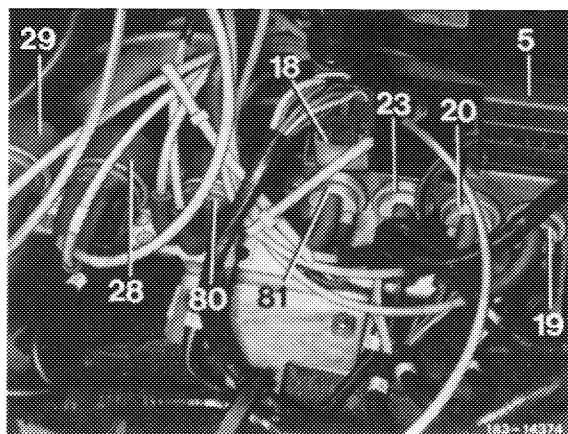

Installation

- 4 Check vacuum switch (23 or 81) (83–628).
- 5 Plug vacuum line and electric plug to vacuum switch.
- 6 Attach vacuum switch (23 or 81) with rubber washer and lock to holder.
- 7 Install glove box (68–140).