

## 83–690 Removal and installation of temperature switch for heating water pump

---

### Data

---


Cutout point (heating water pump off)	26 °C (79 °F)
Cut-in point (following coutout)	16 °C (61 °F)

---

### Removal


---

1 Unscrew all screws on closing cover (arrow) above blower and remove closing cover (22).

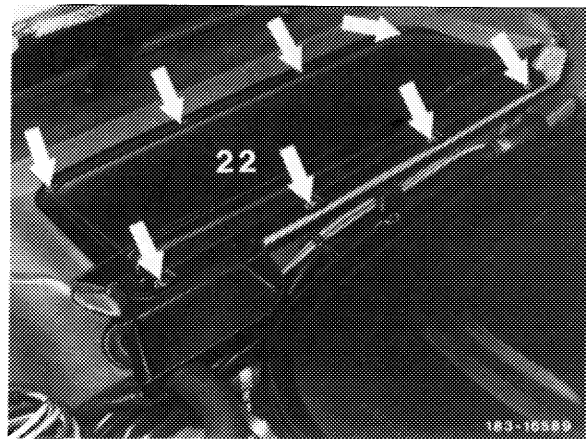

2 Drain coolant.

3 Loosen hose strap from heating water hose (23) and pull off heating water hose.

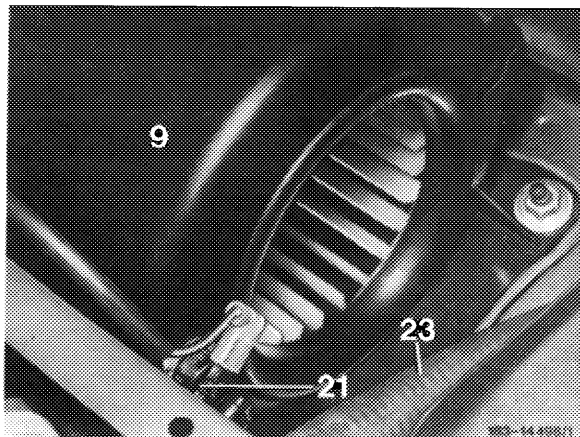

4 Pull electric flat plug from temperature switch (21).

5 Unscrew two screws on temperature switch (21) and pull temperature switch out of blower housing.


## Installation

---

6 Insert temperature switch (21) into blower housing and attach with two screws.

7 Plug heating water hose (23) on heating water pipe and attach with hose strap.

8 Add coolant and check hose connection for leaks.

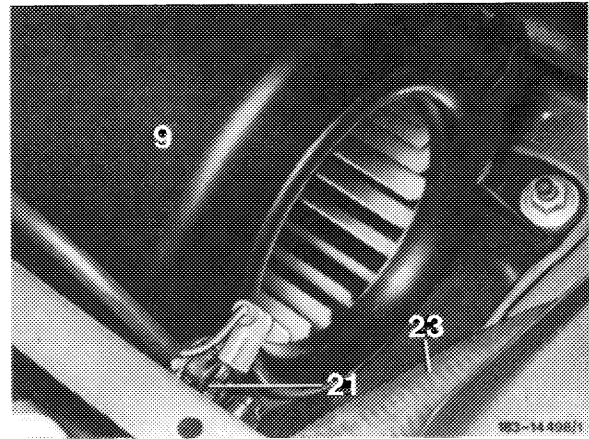

9 Mount electric flat plug and check temperature switch (21) with heating water pump for operation.

10 Mount closing cover (22) by means of fastening screws.

