


Removal

- 1 Remove cover under instrument panel right.
- 2 Pull 12-pole coupler (arrow) from electronic switching unit (9) for temperature control.
- 3 Loosen cable clamp (79) and unscrew holder (80).
- 4 Pull holder (80) downwards and unscrew switching unit (9).

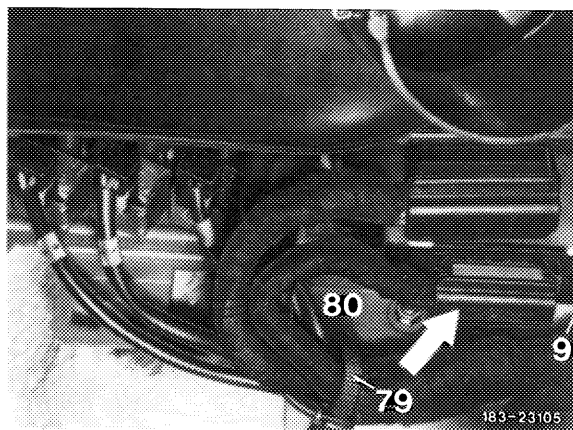

- 3 For installation proceed vice versa.
- 4 Check automatic climate control for function.