

Removal

- 1 Remove glove box (68-140).

- 2 Unscrew electronic switching unit for blower control (19) from holder and pull off electric coupler.

- 3 For installation proceed vice versa.

- 4 Check automatic climate control for function.

