

## COMPONENT LOCATIONS

<b>AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION</b>		Page-Figure
Air Injection Relay .....	Above passenger's footwell	
Air Pump Clutch .....	Below alternator .....	209-2
Coolant Temperature Switch .	RH rear of engine	
Fuse Block .....	Behind RH kick panel .....	100-1
Idle Speed Adjuster		
Solenoid .....	Top center of engine .....	201-2
Idle Speed Control Unit .....	Above passenger's footwell	
Lambda Electronic Control		
Module (ECM) .....	Above passenger's footwell .....	206-1
Switch-Over Valve Solenoid	LH front wheel well	
Washer Motor .....	Below washer fluid reservoir	
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	
G107 .....	LH radiator support .....	204-1

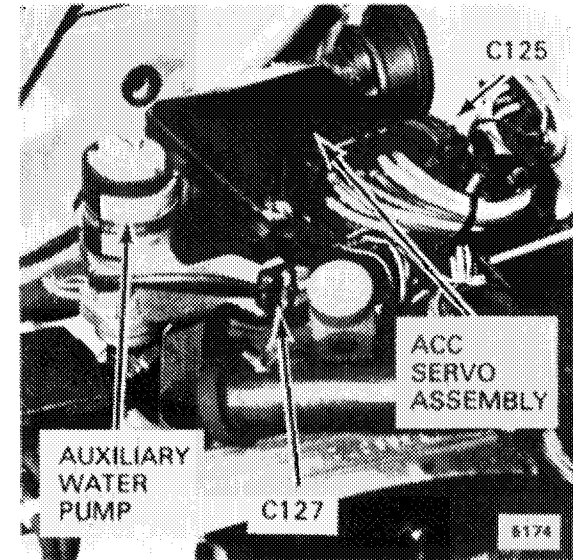


Figure 1 - Right Rear of Engine

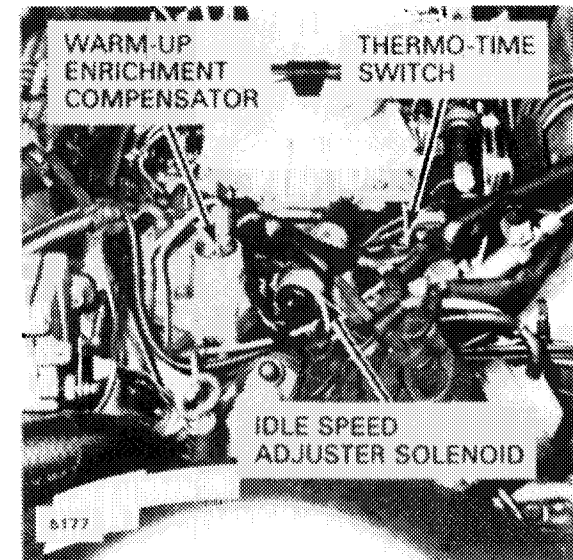


Figure 2 - Top of Engine

## COMPONENT LOCATIONS

### BACKUP LIGHTS/TRANSMISSION KICKDOWN

		Page-Figure
Fuse Box .....	Behind RH kick panel .....	100-1
Kickdown Solenoid .....	RH front of transmission .....	209-3
Kickdown Switch .....	Under accelerator pedal	
<b>Starter Lockout/Backup</b>		
Light Switch.....	LH side of transmission .....	209-4
C104 (14 pins) .....	To right of parking brake support	
C146 (6 pins).....	RH side of driver's footwell	
G103 .....	Below LH rear lights .....	204-2
G104 .....	RH rear wheel well .....	210-2

### CHARGING SYSTEM

Alternator .....	Front of engine	
Battery .....	RH side of trunk	
Fuse Box .....	Behind RH kick panel .....	100-1
Ignition Switch .....	Instrument panel, right of steering column .....	202-2
Starter Assembly .....	Lower RH rear of engine	
C101 (1 terminal) .....	RH front wheel well	
C105 (2 terminals) .....	RH front wheel well	
G100 .....	To LH rear of battery .....	205-2

### CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Antenna Motor/Relay .....	Behind LH rear wheel well.....	203-1
Antenna Switch .....	Above center console	
Fuse Box .....	Behind RH kick panel .....	100-1
C104 (14 pins) .....	To right of parking brake support	

(Chart continued on next page)

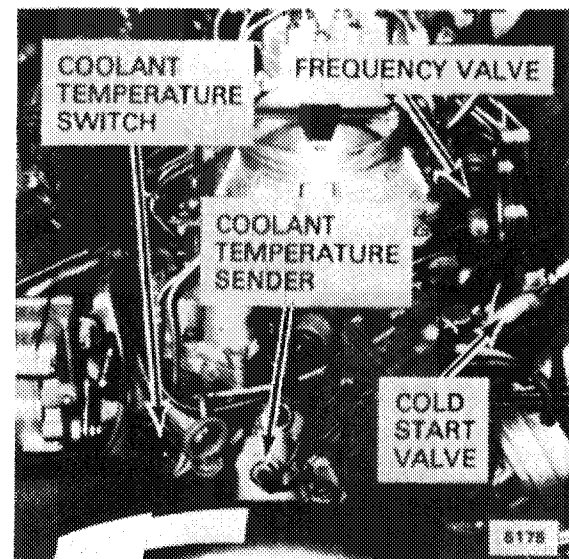


Figure 1 - Top of Engine

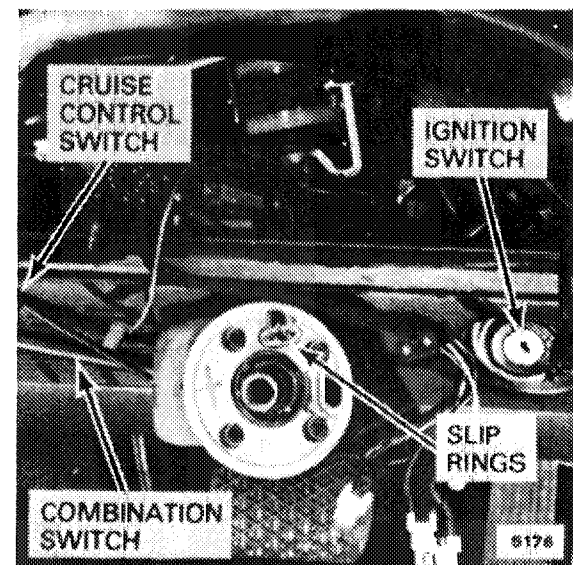


Figure 2 - LH Side of Instrument Panel

## COMPONENT LOCATIONS

### CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA (continued) Page-Figure

C135 (6 pins).....	Behind LH rear wheel well.....	203-1
C151 (15 pins) .....	Back of instrument cluster .....	210-3
G102 .....	Behind instrument cluster	
G103 .....	Below LH rear lights .....	204-2

### COURTESY LIGHTS

Diagnostic Plug.....	Top of LH front wheel well .....	205-1
Door Switches .....	In each door jamb	
Front Dome Light and Switch .....	Above rear view mirror assembly	
Fuse Box .....	Behind RH kick panel .....	100-1
Parking Brake Switch .....	On parking brake support	
Warning Module .....	To right of parking brake support.....	207-1
Wiper Motor .....	In center of fresh air duct	
C116 (2 terminals) .....	LH front wheel well .....	208-1
C131 (2 pins).....	LH front wheel well	
G102 .....	Behind instrument cluster	

### GLOVE BOX LIGHT/COURTESY LIGHTS

Fuse Box .....	Behind RH kick panel .....	100-1
Glove Box Light Switch .....	LH side of glove box	
Rear Dome Light Switch .....	On upper console	
C104 (14 pins) .....	To right of parking brake support	
G102 .....	Behind instrument cluster	

### HEADLIGHTS/FOG LIGHTS

Combination Switch .....	Upper LH side of steering column.....	202-2
Fuse Box .....	Behind RH kick panel .....	100-1
Wiper Motor .....	In center of fresh air duct	
C106 (14 pins) .....	To left of brake pedal support	
C141 (6 pins).....	Behind LH headlight assembly	
C142 (6 pins).....	Behind RH headlight assembly	
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	
G107 .....	LH radiator support .....	204-1

### HEATED SEATS

Fuse Box .....	Behind RH kick panel .....	100-1
Seat Heaters .....	In each seat cushion	
Seat Heater Switches .....	On center console	
G102 .....	Behind instrument cluster	

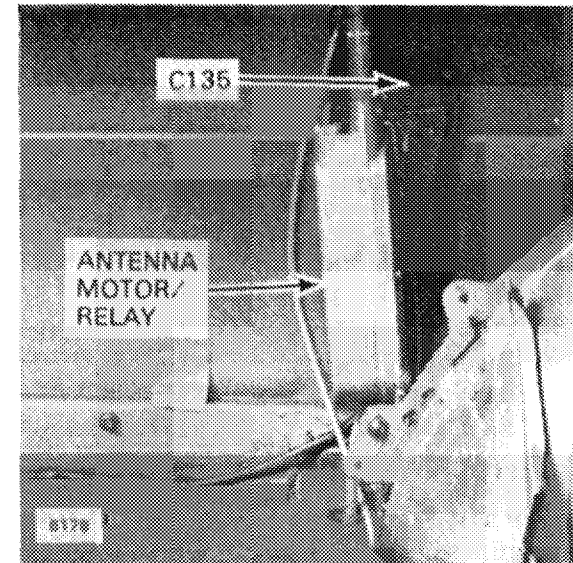


Figure 1 - Behind LH Rear Wheel Well

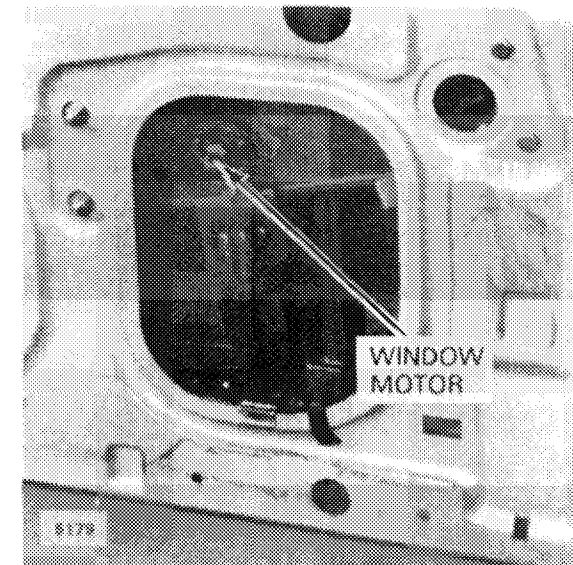


Figure 2 - Driver's Door

## COMPONENT LOCATIONS

### HORNS/AUXILIARY FAN

	Page-Figure	
Auxiliary Fan Coolant Temperature Switch .....	In water outlet, top front of engine	
Auxiliary Fan Motor .....	Front of radiator	
Auxiliary Fan Relay .....	In fuse box .....	206-2
Fuse Box .....	Behind RH kick panel .....	100-1
Horn Switch .....	In steering wheel	
Receiver Drier Temperature Switch .....	LH side of radiator .....	204-1
Slip Rings .....	Behind center of steering wheel .....	202-2
C106 (14 pins) .....	To left of brake pedal support	
G101 .....	RH front fender, behind headlights	
G107 .....	LH radiator support .....	204-1

### IGNITION/FUEL DELIVERY

Diagnostic Plug .....	Top of LH front wheel well .....	205-1
Electronic Fuel Pump Relay ..	To left of top of fuse box .....	206-2
Fuel Pump .....	Under car, behind differential .....	209-6
Ignition Coil .....	Between LH front wheel well and LH headlight	208-1
Ignition Distributor .....	On front top of engine	
Ignition Switching Unit .....	Ahead of LH front wheel well .....	208-1
Lambda Voltage Supply Relay .....	In fuse box .....	206-2
Resistors .....	LH front wheel well .....	210-4
Warm-Up Enrichment Compensator .....	Top front of engine .....	201-2
C104 (14 pins) .....	To right of parking brake support	
C105 (2 terminals) .....	RH front wheel well	
C116 (2 terminals) .....	LH front wheel well .....	208-1
G101 .....	RH front fender, behind headlights	
G102 .....	Behind instrument cluster	
G104 .....	RH rear wheel well .....	210-2
G106 .....	Ignition coil mounting bracket	

### ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

Fuse Box .....	Behind RH kick panel .....	100-1
Hazard Warning Switch/Flasher .....	On center console	
C151 (15 pins, round) .....	On rear of instrument cluster .....	210-3
C152 (4 pins) .....	On rear of instrument cluster .....	210-3
G102 .....	Behind instrument cluster	

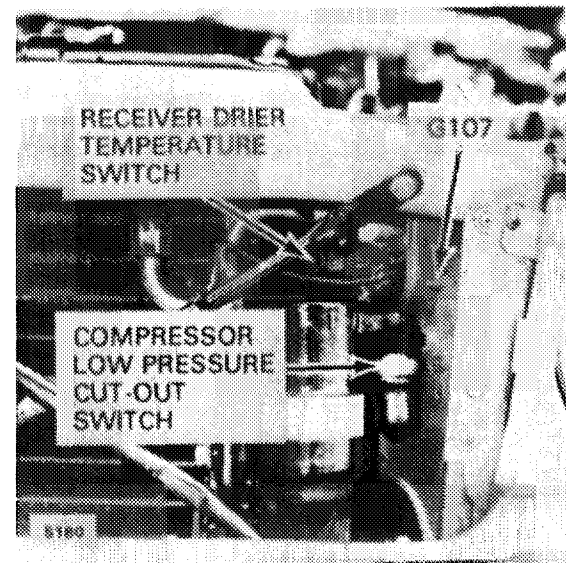


Figure 1 - LH Radiator Support

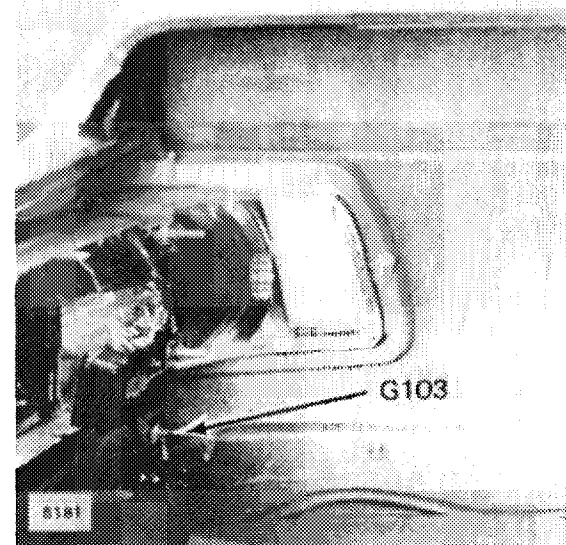


Figure 2 - Below LH Rear Lights

## COMPONENT LOCATIONS

### LAMBDA CONTROL

Page-Figure

Diagnostic Plug .....	Top of LH front wheel well .....	205-1
Frequency Valve .....	Between LH valve cover and flow sensor ..	202-1
Fuse Box .....	Behind RH kick panel .....	100-1
Lambda Electronic Control		
Module (ECM) .....	Passenger's footwell, behind access panel .....	206-1
Lambda Voltage Supply		
Relay .....	In fuse box .....	206-2
Oil Temperature Switch .....	Beside oil filter .....	210-1
Over Voltage Protection		
Unit .....	To left of top of fuse box .....	206-2
Oxygen Sensor .....	On exhaust pipe, below primary catalyst	
Throttle Switch .....	On side of throttle valve housing	
C105 (2 terminals) .....	RH front wheel well	
C143 (coaxial) .....	Near oxygen sensor	
C144 (3 pins) .....	On washer reservoir	
C145 (1 pin) .....	Behind LH headlights .....	205-1
G102 .....	Behind instrument cluster	
G108 .....	Front of engine, at lifting bracket .....	210-5

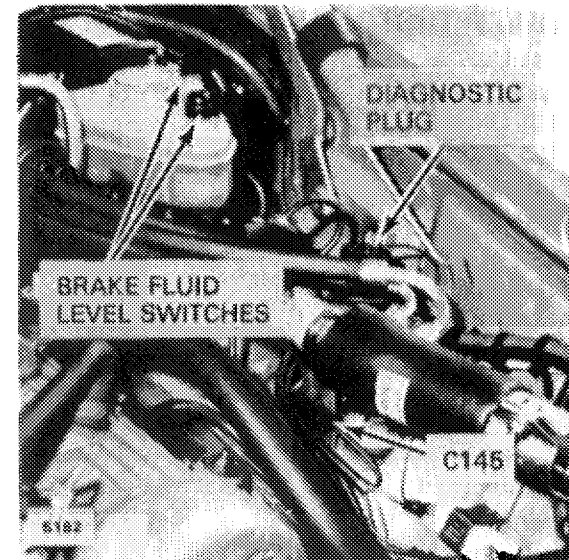


Figure 1 - LH Front Wheel Well

### LIGHTS: MARKER/LICENSE/TRUNK

Fuse Box .....	Behind RH kick panel .....	100-1
C104 (14 pins) .....	To right of parking brake support	
C135 (6 pins) .....	Behind LH rear wheel well .....	203-1
C141 (6 pins) .....	Behind LH headlight assembly	
C142 (6 pins) .....	Behind RH headlight assembly	
G101 .....	RH front fender, behind headlights	
G103 .....	Below LH rear lights .....	204-2
G104 .....	RH rear wheel well .....	210-2
G107 .....	LH radiator support .....	204-1

### LIGHTS: PARK/TAIL

Fuse Box .....	Behind RH kick panel .....	100-1
C104 (14 pins) .....	To right of parking brake support	
C141 (6 pins) .....	Behind LH headlight assembly	
C142 (6 pins) .....	Behind RH headlight assembly	
G101 .....	RH front fender, behind headlights	
G103 .....	Below LH rear lights .....	204-2
G104 .....	RH rear wheel well .....	210-2
G107 .....	LH radiator support .....	204-1

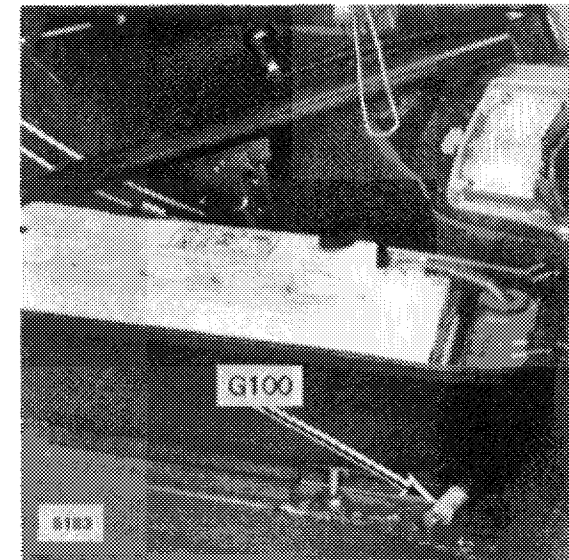


Figure 2 - RH Side of Trunk

## COMPONENT LOCATIONS

### POWER DISTRIBUTION

	Page-Figure
Fuse Box .....	Behind RH kick panel ..... 100-1
Starter Assembly .....	Lower RH rear of engine
C104 (14 pins) .....	To right of parking brake support
C105 (2 terminals) .....	RH front wheel well
C146 (6 pins).....	RH side of driver's footwell
G100 .....	LH rear corner of battery ..... 205-2

### POWER WINDOWS

Console Switch Group .....	On center console
Front Window Switches .....	Below each front window
Fuse Box .....	Behind RH kick panel ..... 100-1
Rear Window Switches .....	Below each rear window
Window Motors .....	Below each window..... 203-2
Window Relay .....	LH side of passenger's footwell
C107 (6 pins).....	Under console
C108 (2 pins).....	Under console
G102 .....	Behind instrument cluster

### REAR DEFOGGER/SLIDING ROOF

Fuse Box .....	Behind RH kick panel ..... 100-1
Rear Defogger Switch .....	On upper console
Rear Defogger Timer Relay ..	To right of parking brake support
Sliding Roof Motor.....	Above LH rear wheel well ..... 209-1
Sliding Roof Switch.....	On upper console
C104 (14 pins) .....	To right of parking brake support
G102 .....	Behind instrument cluster
G104 .....	RH rear wheel well ..... 210-2

### START

Cold-Start Valve .....	Near front of LH valve cover ..... 202-1
Electronic Fuel Pump Relay	To left of top of fuse box ..... 206-2
Fuse Box.....	Behind RH kick panel ..... 100-1
Ignition Switch.....	Instrument panel, right of steering column.. 202-2
Starter Assembly .....	Lower RH rear of engine
Starter Lockout/Backup	
Light Switch.....	LH side of transmission ..... 209-4
Thermo-Time Switch .....	Top of engine, in front of air horn..... 201-2
C101 (2 terminals) .....	RH front wheel well
C105 (2 terminals) .....	RH front wheel well
G100 .....	LH rear corner of battery ..... 205-2

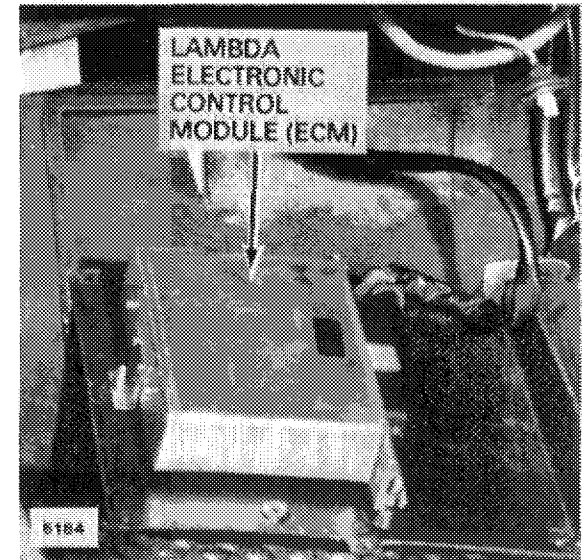


Figure 1 - Passenger's Footwell

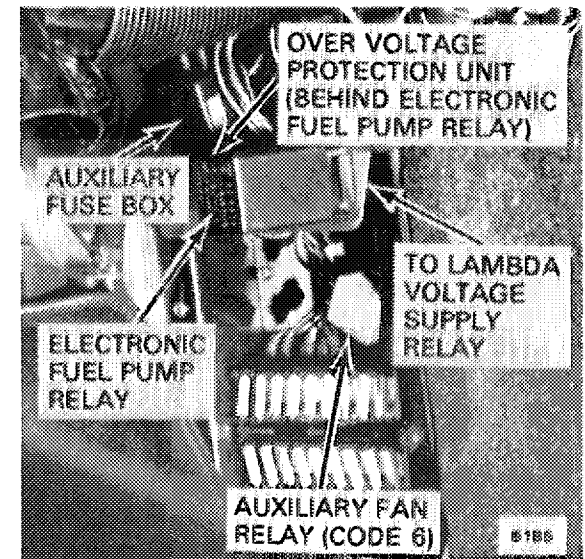


Figure 2 - RH Kick Panel



## COMPONENT LOCATIONS

### STOPLIGHTS/CRUISE CONTROL

	Page-Figure	
Brake Switch .....	Top of brake pedal support	
Cruise Control Actuator .....	RH front corner of engine compartment .....	210-5
Cruise Control Amplifier .....	Between parking brake and brake support .....	207-1
Cruise control Switch .....	Upper LH side of steering column .....	202-2
Fuse Box .....	Behind RH kick panel .....	100-1
C104 (14 pins) .....	To right of parking brake support	
C140 (6 pins).....	Near cruise control amplifier	
C151 (15 pins, round) .....	On rear of instrument cluster .....	210-3
C152 (4 pins).....	On rear of instrument cluster .....	210-3
C164 (8 pins).....	Behind RH headlights	
G101 .....	Behind RH headlights	
G102 .....	Behind instrument cluster	
G103 .....	Below LH rear light assembly .....	204-2
G104 .....	RH rear wheel well .....	210-2

### TURN SIGNAL/HAZARD LIGHTS

Combination Switch .....	Upper LH side of steering column .....	202-2
Fuse Box .....	Behind RH kick panel .....	100-1
Hazard Warning Switch/ Flasher .....	On center console	
C104 (14 pins) .....	To right of parking brake support	
C106 (14 pins) .....	To left of brake pedal support	
C141 (6 pins).....	Behind LH headlight assembly	
C142 (6 pins).....	Behind RH headlight assembly	
C151 (15 pins, round) .....	On rear of instrument cluster .....	210-3
C152 (4 pins).....	On rear of instrument cluster .....	210-3
G101 .....	Behind RH headlights	
G102 .....	Behind instrument cluster	
G103 .....	Below LH rear lights .....	204-2
G104 .....	RH rear wheel well .....	210-2
G107 .....	LH radiator support .....	204-1

### WARNING INDICATORS/GAUGES/CLOCK

Brake Wear Sensors.....	In each front brake pad	
Coolant Temperature Sender	On H <sub>2</sub> O outlet .....	202-1
Diagnostic Plug .....	Top of LH front wheel well .....	205-1
Fuel Gauge Sender		
(380 SL) .....	Behind rear seat, under top boot	
(380 SLC).....	Under package tray	
Fuse Box .....	Behind RH kick panel .....	100-1
Ignition Distributor .....	On front top of engine	

(Chart continued on next page)

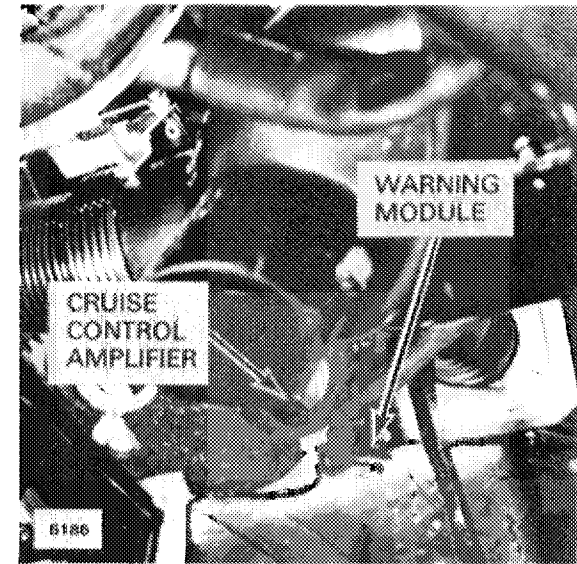


Figure 1 - Above Brake Pedal

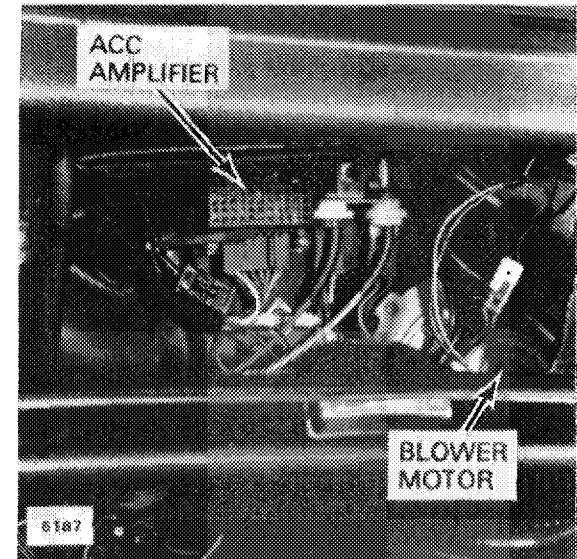


Figure 2 - Behind Glove Box

## COMPONENT LOCATIONS

<b>WARNING INDICATORS/GAUGES/CLOCK</b> (continued)		Page-Figure
Ignition Switching Unit.....	Ahead of LH front wheel well.....	208-1
Impulse Transmitter.....	Rear of LH side of transmission.....	209-4
Oil Pressure Sender.....	Above oil filter	
Wiper Motor.....	In center of fresh air duct	
C104 (14 pins).....	To right of parking brake support	
C116 (2 terminals).....	On front of LH front wheel well.....	208-1
C131 (2 pins).....	On top of LH front wheel well	
C132 (2 pins).....	Behind RH front wheel well	
C146 (6 pins).....	RH side of driver's footwell	
C151 (15 pins, round).....	On rear of instrument cluster.....	210-3
C152 (4 pins).....	On rear of instrument cluster.....	210-3
G101.....	RH front fender, behind headlights	
G102.....	Behind instrument cluster	
G104.....	RH rear wheel well.....	210-2
G106.....	Ignition coil mounting bracket	

### WARNING SYSTEM

<b>Brake Fluid Level</b>		
Switches.....	Brake fluid reservoir.....	205-1
Brake Wear Sensors.....	In each front brake pad	
Door Switches.....	In each door jamb	
Driver's Seatbelt Switch.....	Part of driver's seatbelt assembly	
Fuse Box.....	Behind RH kick panel.....	100-1
Key Warning Switch.....	Part of ignition switch.....	208-2
Parking Brake Switch.....	On parking brake support	
Warning Module.....	Above brake pedal.....	207-1
Wiper Motor.....	In center of fresh air duct	
C131 (2 pins).....	On top of LH front wheel well	
C151 (15 pins, round).....	On rear of instrument cluster.....	210-3
C152 (4 pins).....	On rear of instrument cluster.....	210-3
C166 (2 pins).....	Under driver's seat	
G102.....	Behind instrument cluster	

### WIPER/WASHER

Combination Switch.....	Upper LH side of steering column.....	202-2
Fuse Box.....	Behind RH kick panel.....	100-1
Interval Wipe Control.....	Behind instrument cluster	
Washer Motor.....	Below washer fluid reservoir	
Wiper Motor.....	In center of fresh air duct	
C106 (14 pins).....	To left of brake pedal support	
G101.....	RH front fender, behind headlights	
G102.....	Behind instrument cluster	

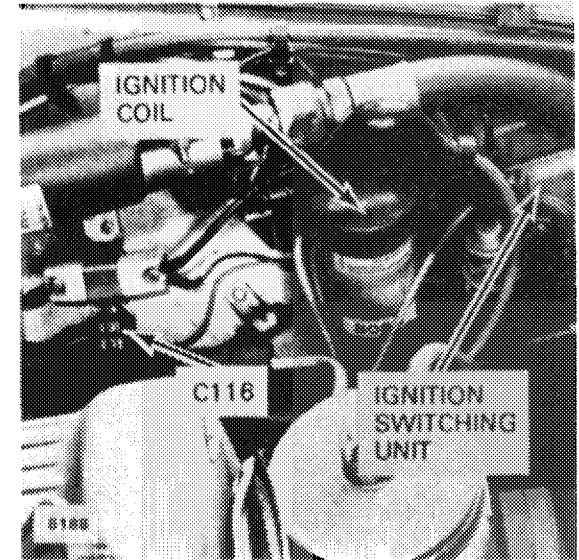


Figure 1 - LH Front Wheel Well

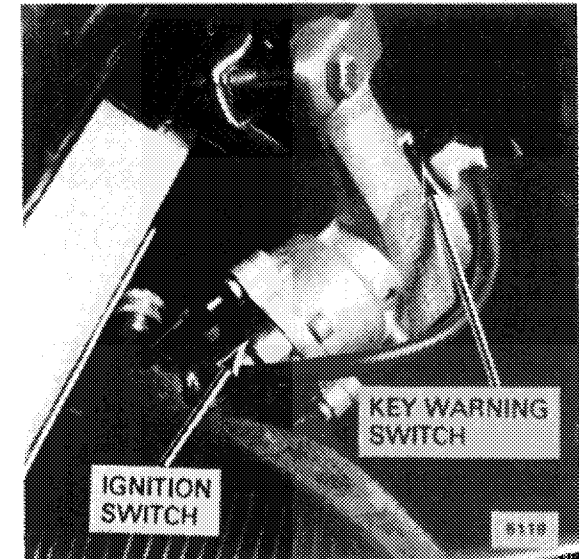


Figure 2 - Behind Instrument Panel



## COMPONENT LOCATIONS

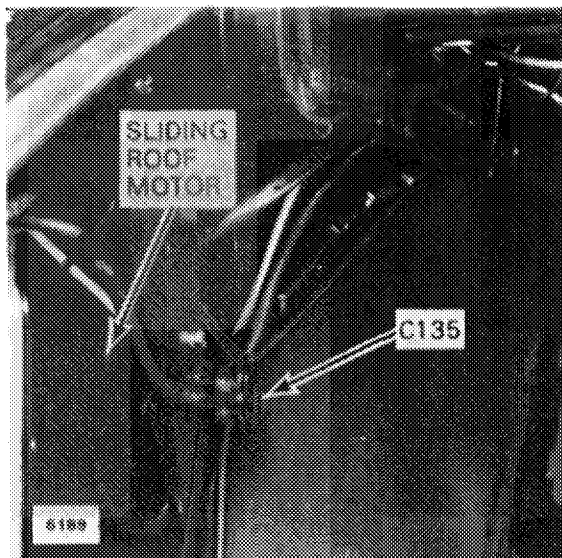


Figure 1 - Behind LH Rear Wheel Well (SLC only)

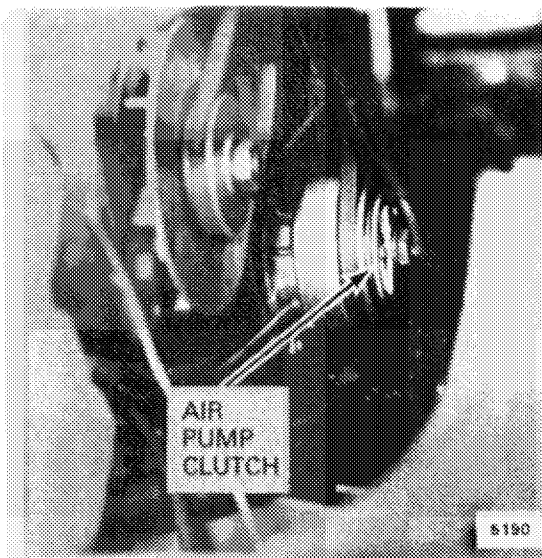


Figure 2 - Lower Front of Engine

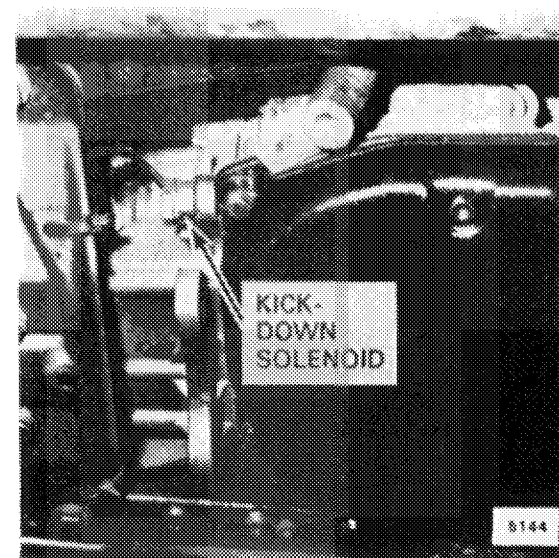


Figure 3 - RH Side of Transmission

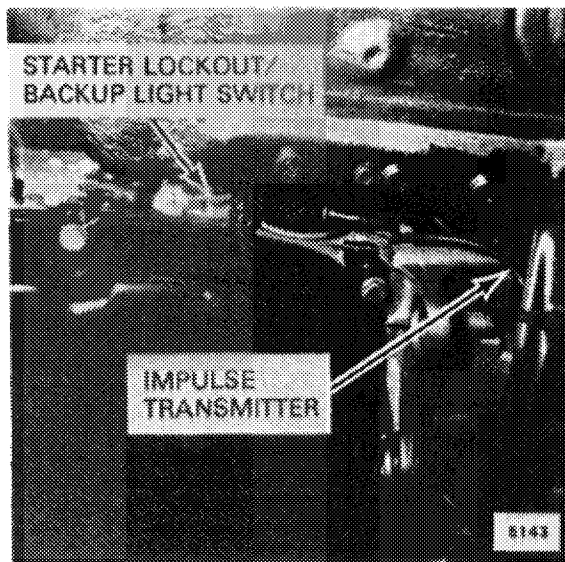


Figure 4 - LH Side of Transmission

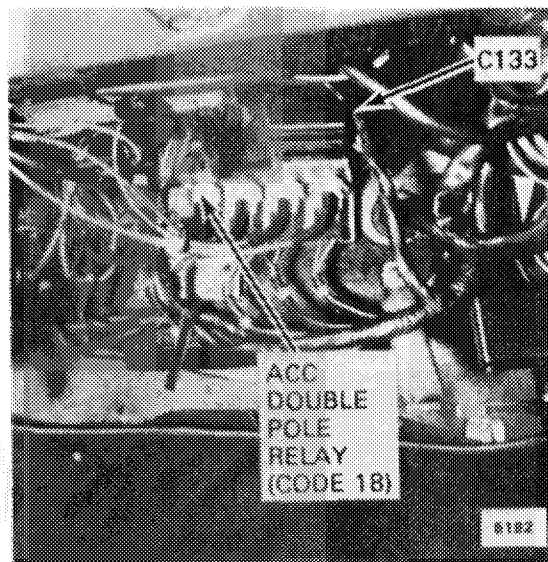


Figure 5 - Behind Glove Box

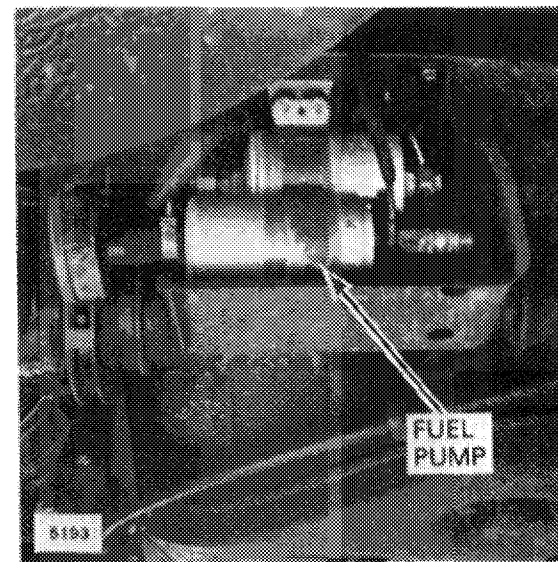


Figure 6 - Behind Differential

## COMPONENT LOCATIONS

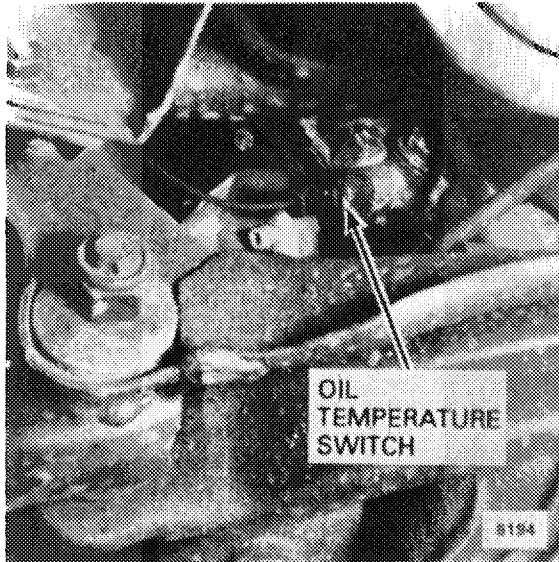


Figure 1 - Base of Oil Filter

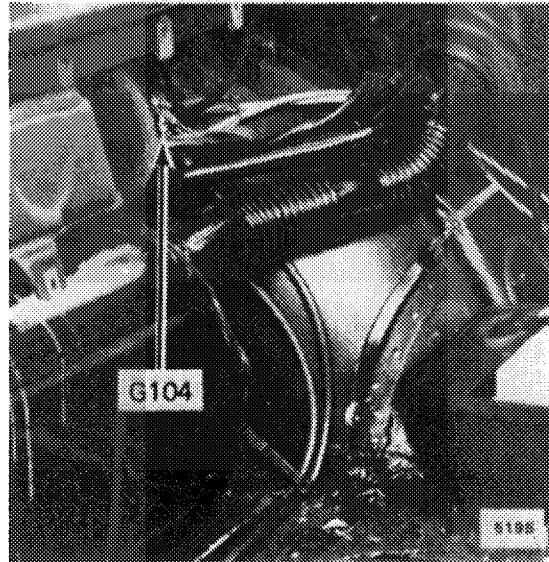


Figure 2 - Front RH Side of Trunk

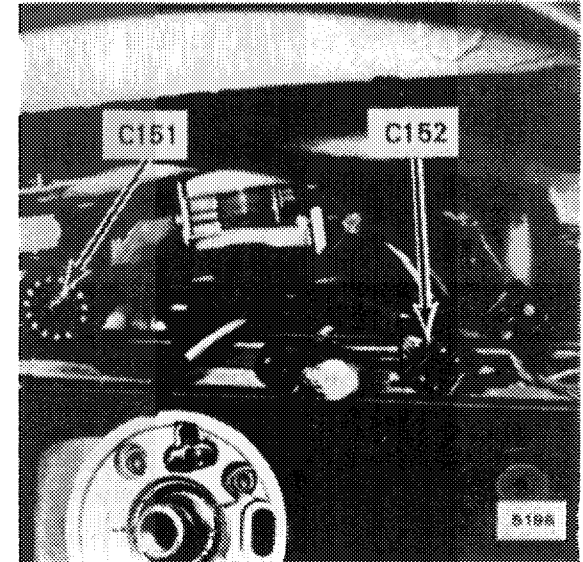


Figure 3 - Behind Instrument Cluster

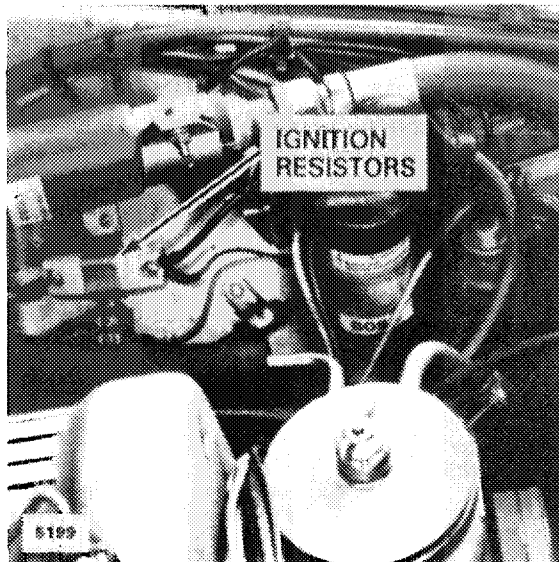


Figure 4 - LH Front Wheel Well

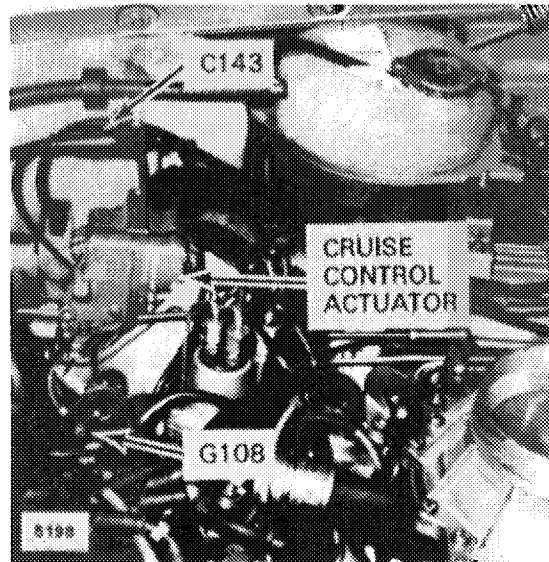


Figure 5 - RH Front of Engine