

COMPONENT LOCATIONS

AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION Page-Figure

Air Pump Clutch	Below alternator	209-2
Coolant Temperature Switch .	RH rear of engine	209-5
Fuse Block	Behind RH kick panel	100-1
Idle Speed Adjuster		
Solenoid	Top center of engine	201-2
Idle Speed Control Unit	Above passenger's footwell behind glove box.	201-1
Lambda Electronic Control		
Module (ECM)	Behind passenger's front kick panel	206-1
Switchover Valve Solenoid ..	LH front wheel well	208-1
Washer Motor	Below washer fluid reservoir	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	204-1

BACKUP LIGHTS/GLOVE BOX LIGHT/REAR DOME LIGHT

Fuse Box	Behind RH kick panel	100-1
Starter Lockout/Backup		
Light Switch	LH side of transmission	209-4
C104 (14 pins)	To right of parking brake support	
C146 (6 pin)	RH side of driver's footwell	
G102	Behind instrument cluster	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2

CHARGING SYSTEM

Battery	RH side of trunk	205-2
Fuse Box	Behind RH kick panel	100-1
Ignition Switch	Instrument panel, right of steering column	202-2
Starter Assembly	Lower RH rear of engine	
C101 (2 terminals)	RH front wheel well	206-2
C105 (2 terminals)	RH front wheel well	207-2
G100	To LH rear of battery	205-2

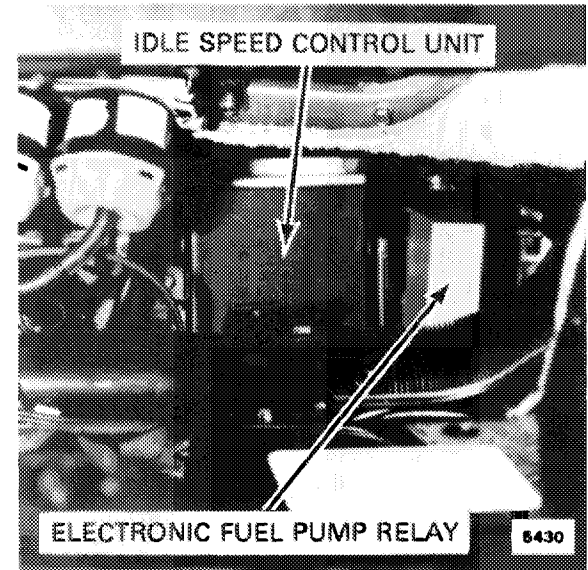


Figure 1 - Behind Glove Box

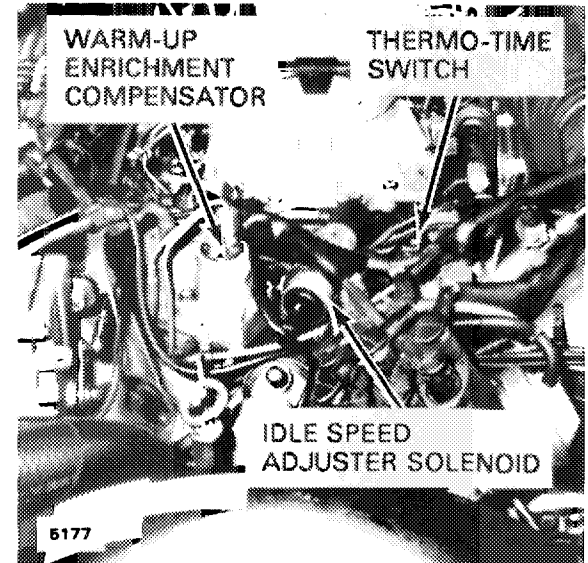


Figure 2 - Top of Engine

COMPONENT LOCATIONS

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE Page-Figure

Fuse Box	Behind RH kick panel	100-1
Hazard Switch	On center console	
Flasher	In center console forward of shift lever	
C124 (1 terminal)	Behind upper console	
C146 (6 pins).....	RH side of driver's footwell	
C151 (15 pins, round).....	On rear of instrument cluster	210-3
C152 (4 pins).....	On rear of instrument cluster	210-3
G102	Behind instrument cluster	

LAMBDA CONTROL

Diagnostic Plug	Top of LH front wheel well	205-1
Frequency Valve	Between LH valve cover and air flow sensor ..	202-1
Fuse Box	Behind RH kick panel	100-1
Lambda Electronic Control		
Module (ECM)	Behind passenger's front kick panel	206-1
Oil Temperature Switch	Beside oil filter	210-1
Oxygen Sensor	On exhaust pipe, below primary catalyst	
Throttle Switch	On side of throttle valve housing	
C105 (2 terminals)	RH front wheel well	207-2
C143 (coaxial)	Near oxygen sensor.....	210-5
C144 (3 pins).....	On washer reservoir	
G102	Behind instrument cluster	
G108	Front of engine, at lifting bracket	210-5

LIGHTS: MARKER/LICENSE/TRUNK

Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C135 (6 pins).....	Behind LH rear wheel well.....	203-1
C141 (6 pins).....	Behind LH headlight assembly	
C142 (6 pins).....	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2
G107	LH radiator support	204-1

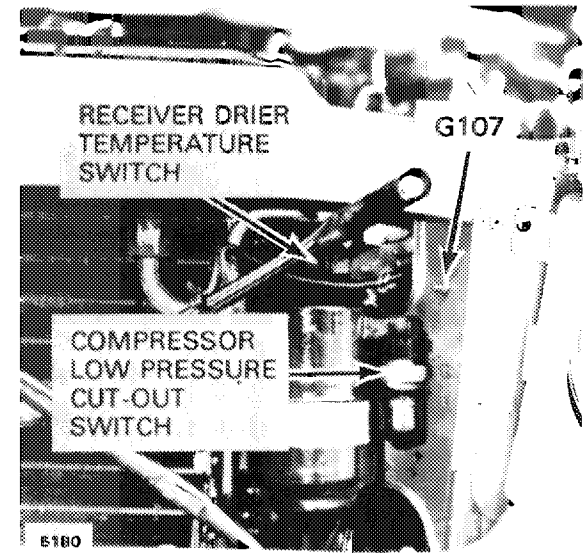


Figure 1 - LH Radiator Support

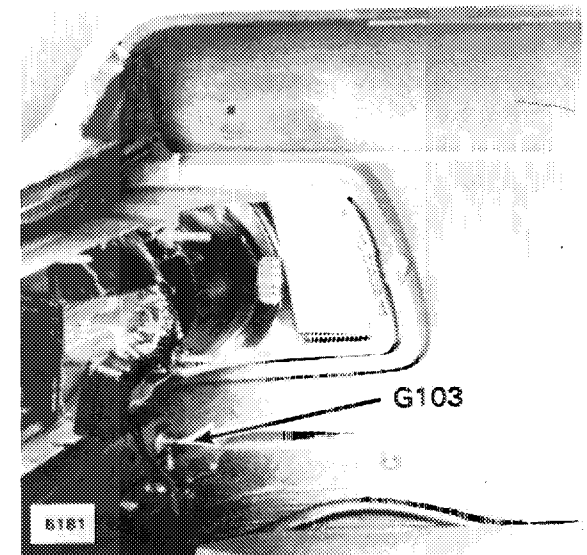


Figure 2 - Below LH Rear Lights

COMPONENT LOCATIONS

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Page-Figure

Antenna Motor/Relay	Behind LH rear wheel well.....	203-1
Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C135 (6 pins).....	Behind LH rear wheel well.....	203-1
C151 (15 pins)	Back of instrument cluster	210-3
G102	Behind instrument cluster	
G103	Below LH rear lights	204-2

COURTESY LIGHTS

Diagnostic Plug	Top of LH front wheel well	205-1
Door Switches	In each door jamb	
Fuse Box	Behind RH kick panel	100-1
Parking Brake Switch	On parking brake support	
Warning Module	To right of parking brake support	
Wiper Motor	Rear LH corner of engine	207-1
C116 (2 terminals)	LH front wheel well	
C131 (2 pins).....	LH front wheel well	207-1
G102	Behind instrument cluster	

HEADLIGHTS/FOG LIGHTS

Combination Switch	Upper LH side of steering column.....	202-2
Fuse Box	Behind RH kick panel	100-1
Wiper Motor	Rear LH corner of engine	207-1
C106 (14 pins)	To left of brake pedal support	
C141 (6 pins).....	Behind LH headlight assembly	
C142 (6 pins).....	Behind RH headlight assembly	
C146 (6 pins).....	RH side of driver's footwell	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	
G107	LH radiator support	204-1

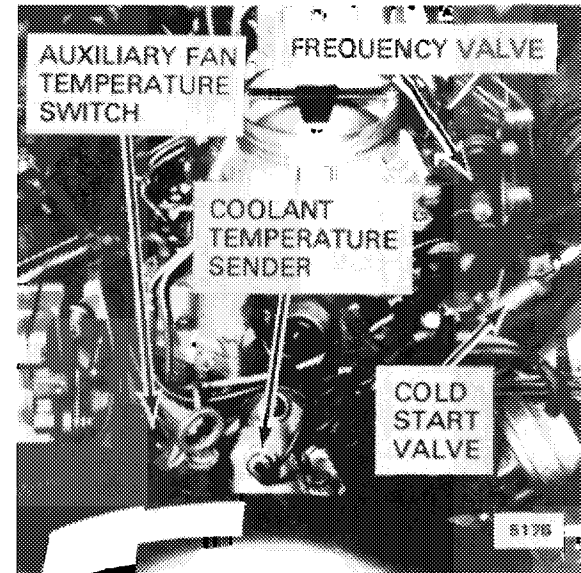


Figure 1 - Top of Engine

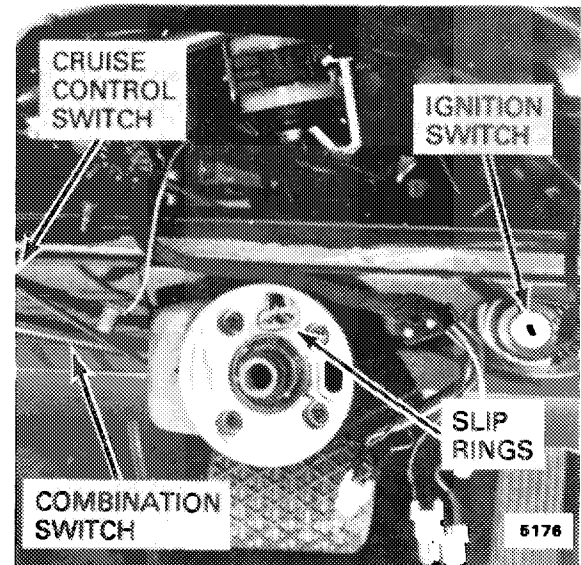


Figure 2 - LH Side of Instrument Panel

COMPONENT LOCATIONS

HEATED SEATS

		Page-Figure
Fuse Box	Behind RH kick panel	100-1
Seat Heaters	In each seat cushion	
Seat Heater Switches	On center console	
G102	Behind instrument cluster	

HORNS/AUXILIARY FAN

Auxiliary Fan		
Temperature Switch	In water outlet, top front of engine	202-1
Auxiliary Fan Motor	Front of radiator	
Fuse Box	Behind RH kick panel	100-1
Horn Switch	In steering wheel	
Receiver Drier Temperature Switch		
Switch	LH side of radiator	204-1
Slip Rings	Behind center of steering wheel	202-2
C106 (14 pins)	To left of brake pedal support	
G101	RH front fender, behind headlights	
G107	LH radiator support	204-1

IGNITION/FUEL DELIVERY/TRANSMISSION KICKDOWN

Diagnostic Plug	Top of LH front wheel well	205-1
Electronic Fuel Pump Relay ..	Behind glove box	201-1
Fuel Pump	Under car, behind differential	209-1
Ignition Coil	Between LH front wheel well and LH headlight	208-1
Ignition Switching Unit	Ahead of LH front wheel well	208-1
Transmission Kick-Down Solenoid		
Solenoid	RH front of transmission	209-3
Transmission Kick-Down Switch		
Switch	Under accelerator pedal	
Warm-Up Enrichment Compensator		
Compensator	Top front of engine	201-2
C104 (14 pins)	To right of parking brake support	
C105 (2 terminals)	RH front wheel well wheel well	207-2
C116 (2 terminals)	LH front wheel well	
C146 (6 pins)	RH side of driver's footwell	

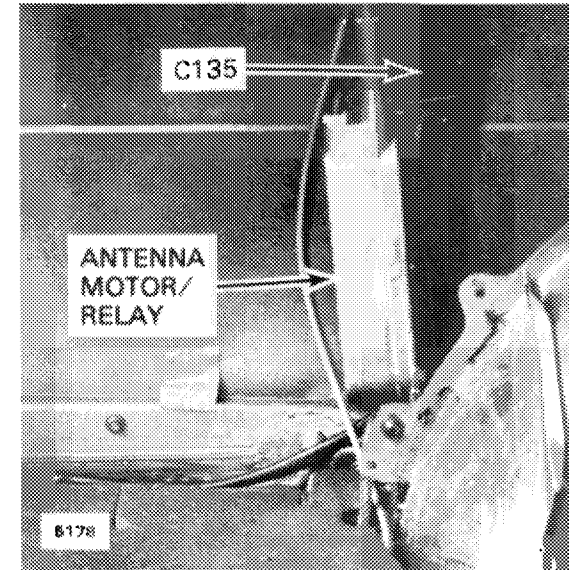


Figure 1 - Behind LH Rear Wheel Well

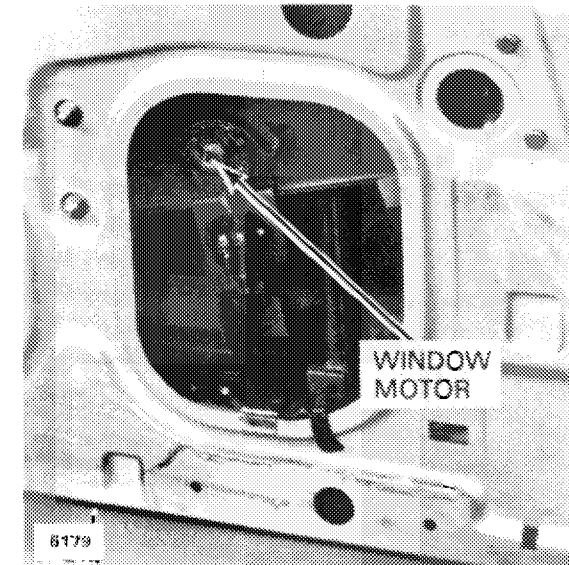


Figure 2 - Driver's Door

COMPONENT LOCATIONS

LIGHTS: PARK/TAIL

		Page-Figure
Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C141 (6 pins)	Behind LH headlight assembly	
C142 (6 pins)	Behind RH headlight assembly	
G101	RH front fender, behind headlights	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2
G107	LH radiator support	204-1

POWER DISTRIBUTION

Fuse Box	Behind RH kick panel	100-1
Starter Assembly	Lower RH rear of engine	
C101 (2 terminals)	RH front wheel well	206-2
C104 (14 pins)	To right of parking brake support	
C105 (2 terminals)	RH front wheel well	207-2
G100	LH rear corner of battery	205-2

POWER WINDOWS

Fuse Box	Behind RH kick panel	100-1
Window Motors	Below each window	203-2
Window Relay	LH side of passenger's footwell	
G102	Behind instrument cluster	

REAR DEFOGGER

Fuse Box	Behind RH kick panel	100-1
Rear Defogger Timer Relay ..	To right of parking brake support	
C104 (14 pins)	To right of parking brake support	
G102	Behind instrument cluster	
G104	RH rear wheel well	210-2

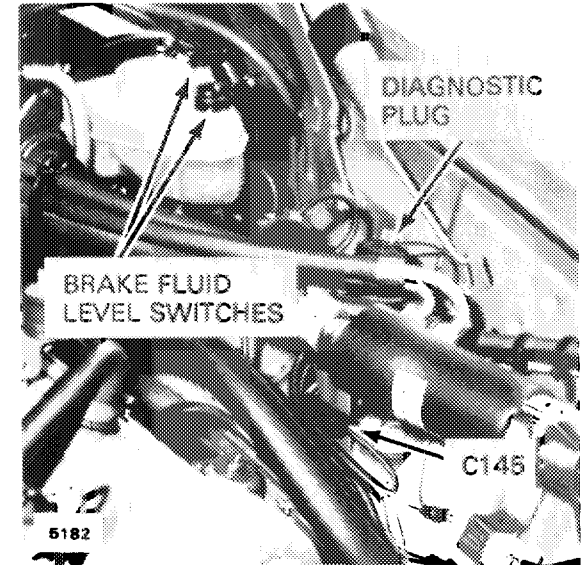


Figure 1 - LH Front Wheel Well

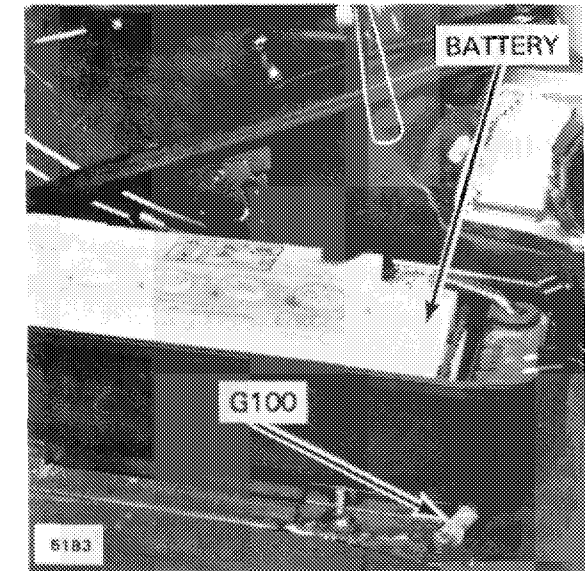


Figure 2 - RH Side of Trunk

COMPONENT LOCATIONS

START

		Page-Figure
Cold-Start Valve	Near front of LH valve cover	202-1
Electronic Fuel Pump Relay	Behind glove box	201-1
Fuse Box	Behind RH kick panel	100-1
Ignition Switch	Instrument panel, right of steering column..	202-2
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup		
Light Switch	LH side of transmission	209-4
Thermo-Time Switch	Top of engine, in front of air horn	201-2
C101 (2 terminals)	RH front wheel well	206-2
C105 (2 terminals)	RH front wheel well	207-2
G100	LH rear corner of battery	205-2



Figure 1 - Passenger's Footwell

STOPLIGHTS/CRUISE CONTROL

Brake Switch	Top of brake pedal support	
Cruise Control Actuator	RH front corner of engine compartment	210-4
Cruise Control Amplifier	Between parking brake and brake support	
Cruise Control Switch	Upper LH side of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
C104 (14 pins)	To right of parking brake support	
C140 (6 pins)	Near cruise control amplifier	
C146 (6 pins)	RH side of driver's footwell	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins)	On rear of instrument cluster	210-3
C164 (8 pins)	Behind RH headlights	
G101	Behind RH headlights	
G102	Behind instrument cluster	
G103	Below LH rear light assembly	204-2
G104	RH rear wheel well	210-2

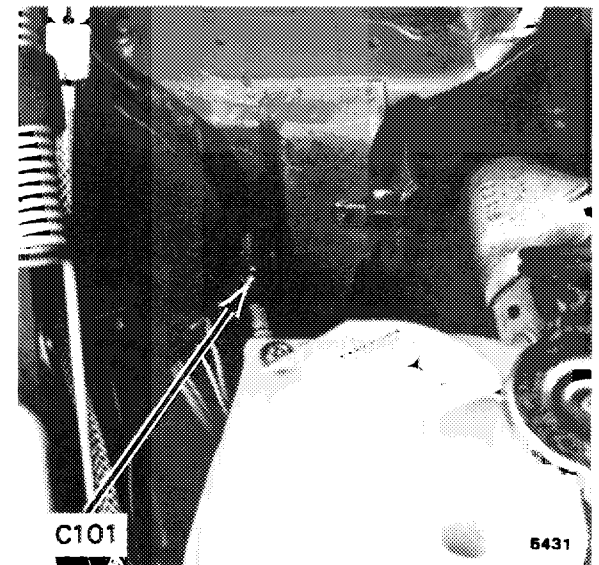


Figure 2 - Rear RH Corner Of Engine

TURN SIGNAL/HAZARD LIGHTS

Combination Switch	Upper LH side of steering column	202-2
Flasher	In center console forward of shift lever	
Fuse Block	Behind RH kick panel	100-1
Hazard Switch	On center console	
C104 (14 pins)	To right of parking brake support	
C106 (14 pins)	To left of brake pedal support	
C141 (6 pins)	Behind LH headlight assembly	
C142 (6 pins)	Behind RH headlight assembly	

(Chart continued on next page)

COMPONENT LOCATIONS

TURN SIGNAL/HAZARD LIGHTS (continued)

		Page-Figure
C146 (6 pins)	RH side of driver's footwell	100-1
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins)	On rear of instrument cluster	210-3
G101	Behind RH headlights	
G102	Behind instrument cluster	
G103	Below LH rear lights	204-2
G104	RH rear wheel well	210-2
G107	LH radiator support	204-1

WARNING INDICATORS/GAUGES/CLOCK

Brake Wear Sensors	In each front brake	
Coolant Temperature Sender	On water outlet	202-1
Diagnostic Plug	Top of LH front wheel well	205-1
Fuel Gauge Sender (380 SL)	Behind rear seat, under top boot	
Fuse Box	Behind RH kick panel	100-1
Ignition Distributor	On front top of engine	
Ignition Switching Unit	Ahead of LH front wheel well	208-1
Impulse Transmitter	Rear of LH side of transmission	209-4
Oil Pressure Sender	Above oil filter	
Wiper Motor	Rear LH corner of engine	207-1
C104 (14 pins)	To right of parking brake support	
C116 (2 terminals)	On front of LH front wheel well	
C131 (2 pins)	On top of LH front wheel well	207-1
C132 (2 pins)	Behind RH front wheel well	
C146 (6 pins)	RH side of driver's footwell	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins)	On rear of instrument cluster	210-3
G102	Behind instrument cluster	
G104	RH rear wheel well	210-2
G106	Ignition coil mounting bracket	



Figure 1 - Above Brake Pedal

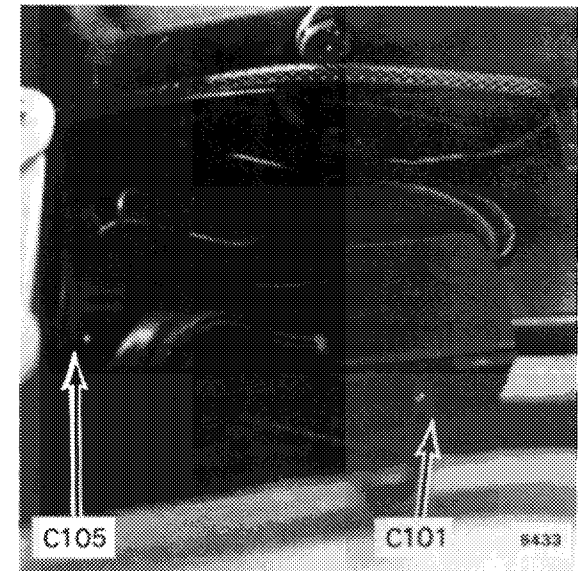


Figure 2 - RH Front Wheel Well

COMPONENT LOCATIONS

WARNING SYSTEM

		Page-Figure
Brake Fluid Level		
Switches	Brake fluid reservoir	205-1
Brake Wear Sensors	In each front brake pad	
Door Switches	In each door jamb	
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	Behind RH kick panel	100-1
Key Warning Switch	Part of ignition switch	208-2
Parking Brake Switch	On parking brake support	
Warning Module	Above brake pedal	
Wiper Motor	Rear LH corner of engine	207-1
C131 (2 pins)	On top of LH front wheel well	
C151 (15 pins, round)	On rear of instrument cluster	210-3
C152 (4 pins)	On rear of instrument cluster	210-3
C166 (2 pins)	Under driver's seat	
G102	Behind instrument cluster	

WIPER/WASHER

Combination Switch	Upper LH side of steering column	202-2
Fuse Box	Behind RH kick panel	100-1
Interval Wipe Control	Behind instrument cluster	
Washer Motor	Below washer fluid reservoir	
Wiper Motor	Rear LH corner of engine	207-1
C106 (14 pins)	To left of brake pedal support	
G101	RH front fender, behind headlights	
G102	Behind instrument cluster	

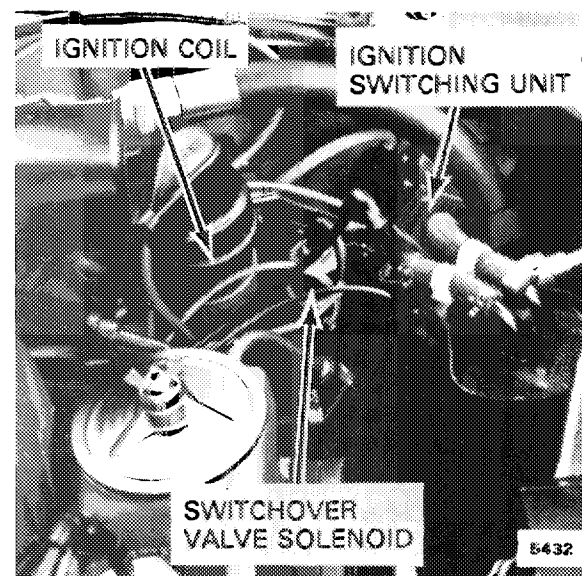


Figure 1 - LH Front Wheel Well

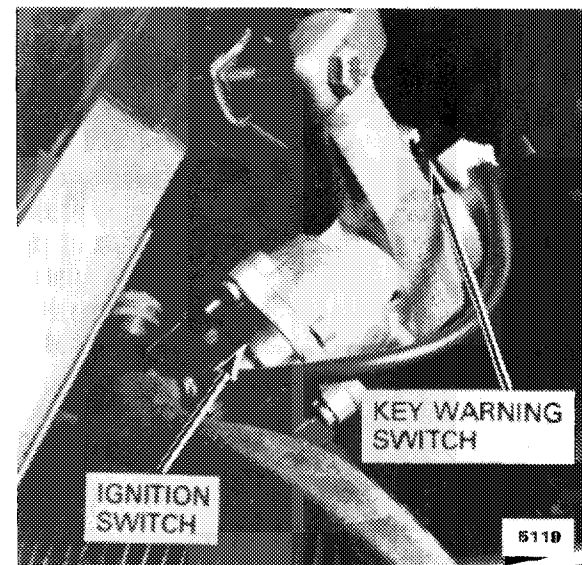


Figure 2 - Behind Instrument Panel

COMPONENT LOCATIONS

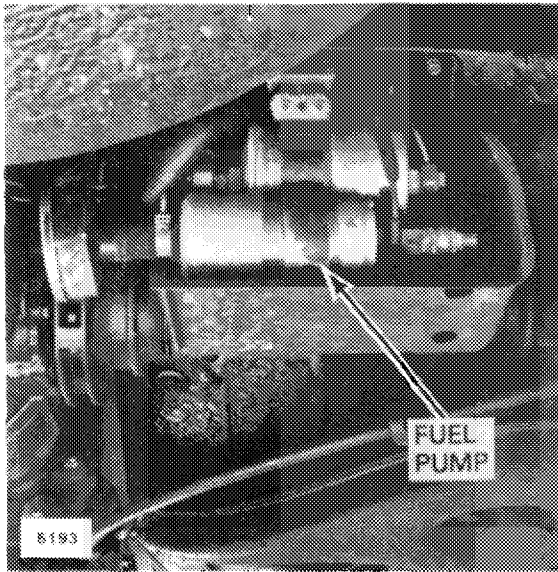


Figure 1 - Behind Differential

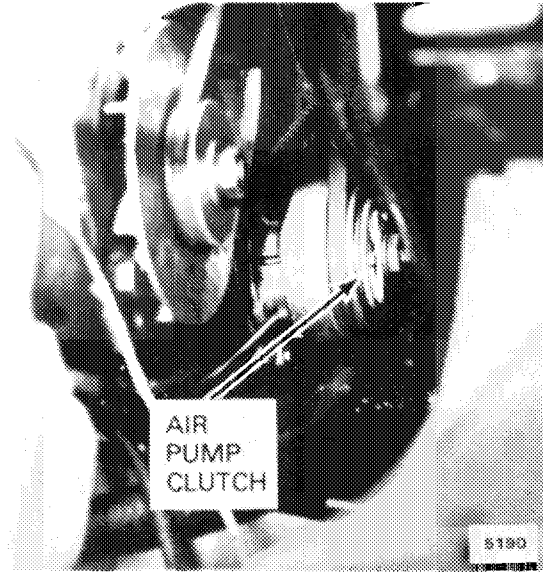


Figure 2 - Lower Front of Engine

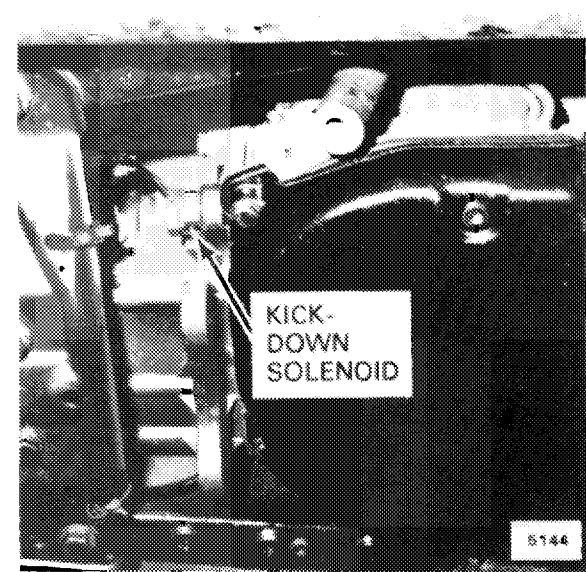


Figure 3 - RH Side of Transmission

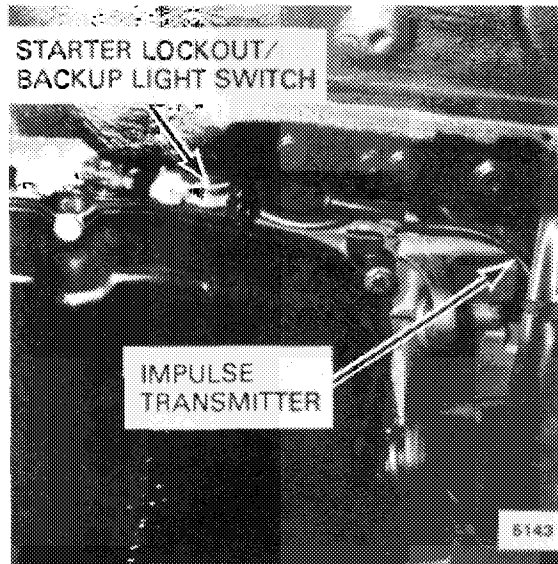


Figure 4 - LH Side of Transmission

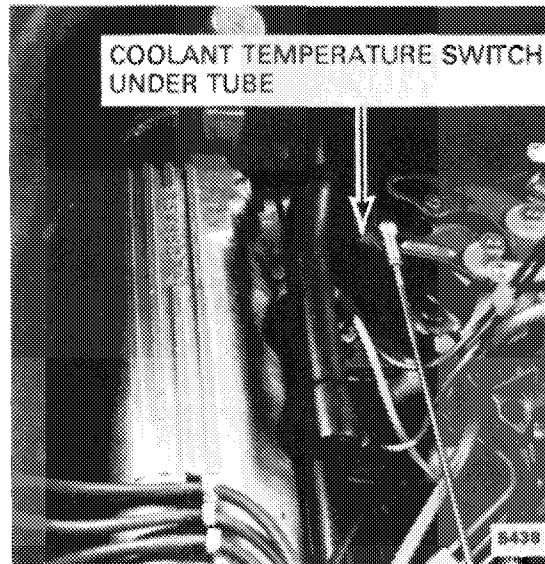


Figure 5 - RH Rear of Engine

COMPONENT LOCATIONS

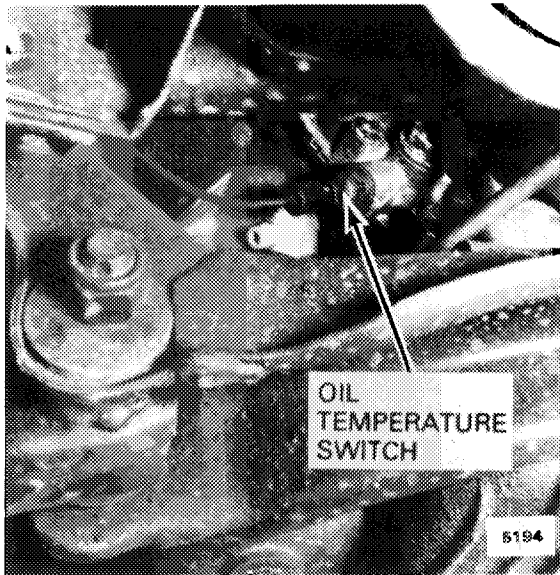


Figure 1 - Base of Oil Filter

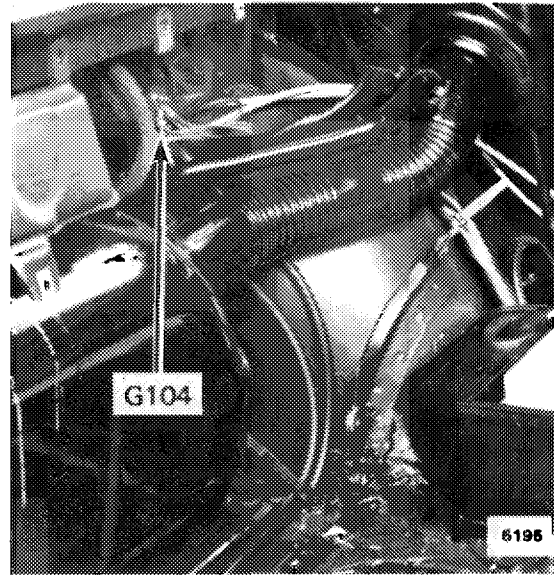


Figure 2 - Front RH Side of Trunk

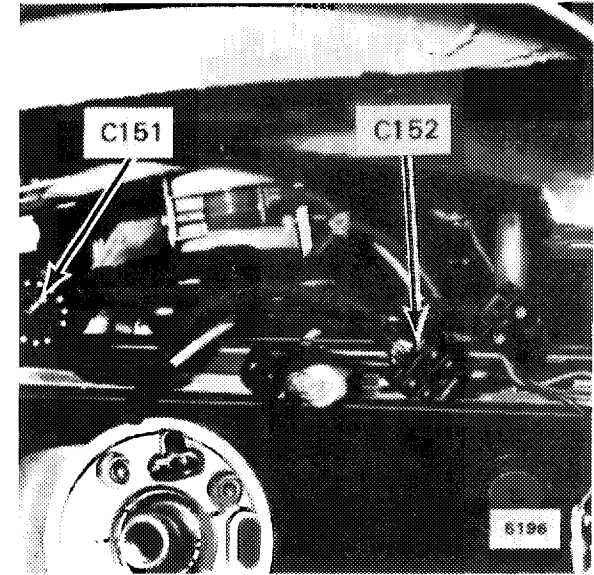


Figure 3 - Behind Instrument Cluster

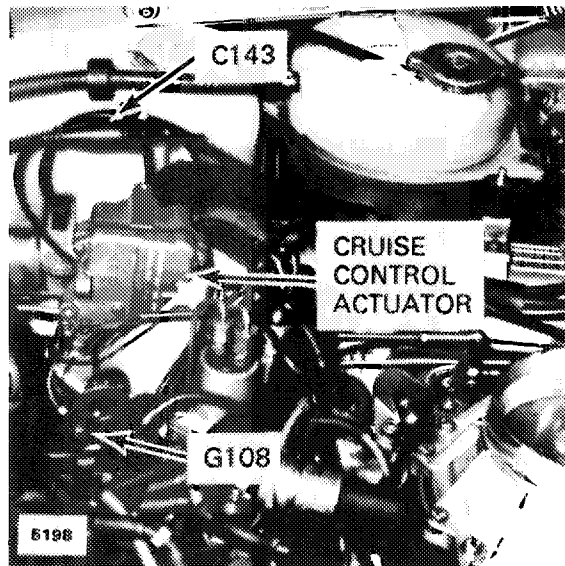


Figure 4 - RH Front Of Engine

210
380
SL