

COMPONENT LOCATIONS

1/87

ANTILOCK BRAKE SYSTEM

Page-Figure

ABS Electronic Control Unit	Behind RH kick panel	
ABS Hydraulic Unit	RH front corner of engine compartment	
Alternator	RH front side of engine	
Battery	RH side of trunk	214-4
Brake Switch	Top of brake pedal support	
Fuse Box	Behind RH kick panel	
Lambda Electronic Control Module	Behind RH kick panel	210-1
LH Front Wheel Speed Sensor	Mounted in LH steering knuckle	
Rear Differential Speed Sensor	RH front of rear differential housing	
RH Front Wheel Speed Sensor	Mounted in RH steering knuckle	
C105 (2 terminal)	RH front wheel well	202-2
C182 (2 pin)	Behind instrument cluster	
C185 (1 pin)	RH kick panel, above fuse box	
C240 (1 terminal)	RH kick panel, under fuse box	
C241 (2 pin)	Base of RH door pillar	213-1
C242 (1 terminal)	Behind instrument cluster	
C243 (2 pin)	LH side of engine compartment	
C244 (2 pin)	RH side of engine compartment	
G100	RH rear corner of trunk, near battery	214-4
G102	Behind dash, right of glove box	212-1
G110	Behind RH side of dash	
G111	On ABS hydraulic unit support	

107.045

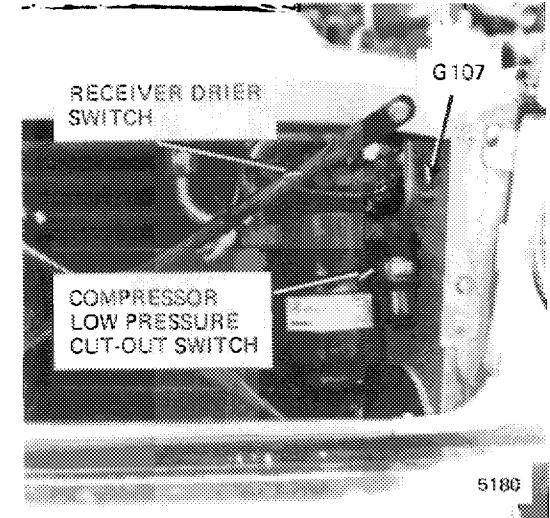


Figure 1 - LH Radiator Support

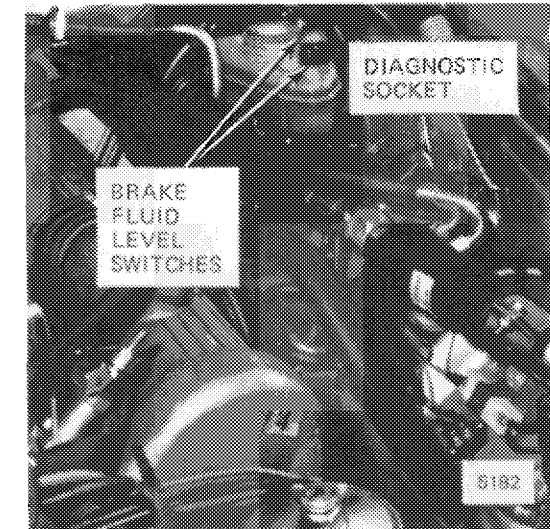


Figure 2 - LH Front Wheel Well

REVISIONS:

COMPONENT LOCATIONS

202

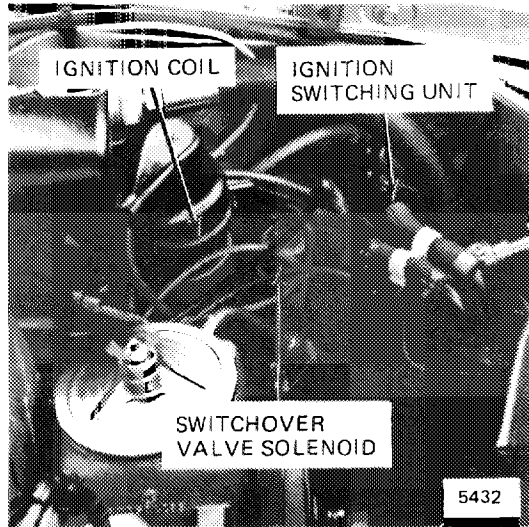


Figure 1 - LH Front Wheel Well

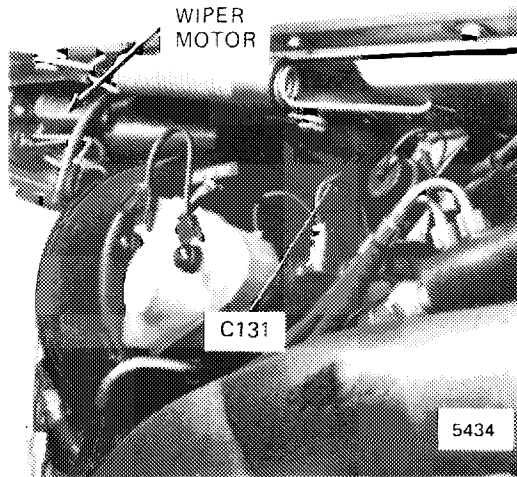


Figure 3 - LH Rear of Engine Compartment

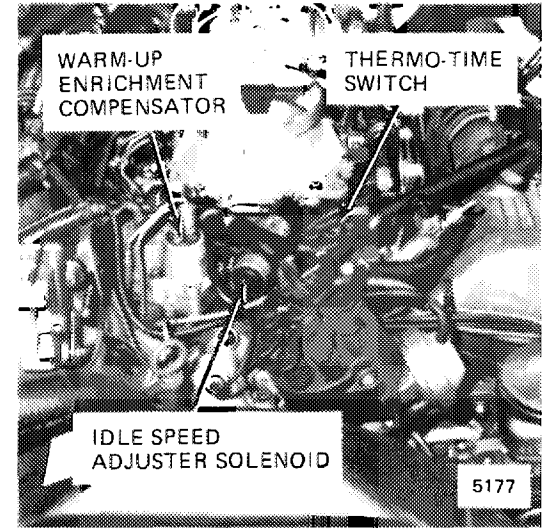


Figure 5 - Top of Engine

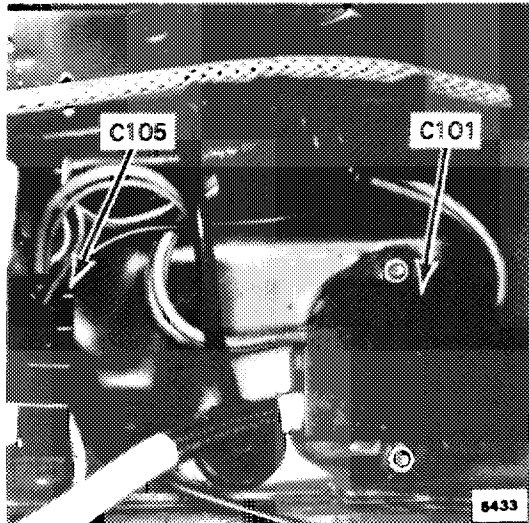


Figure 2 - RH Front Wheel Well

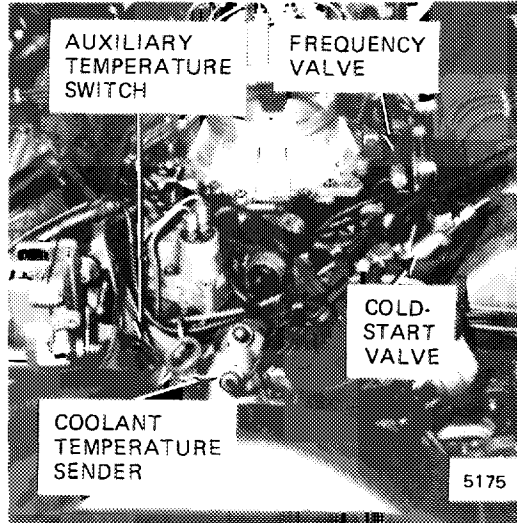


Figure 4 - Top of Engine

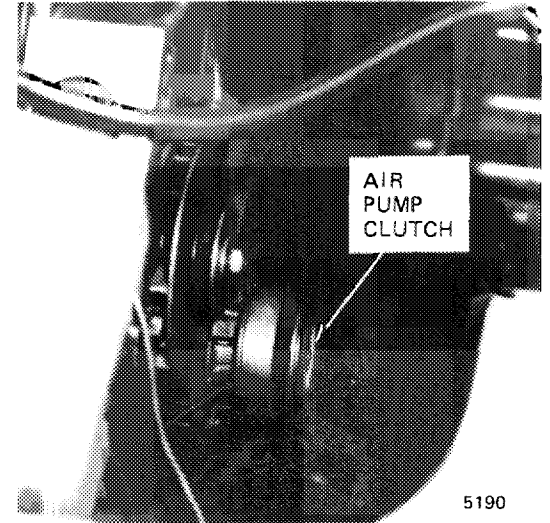


Figure 6 - Lower Front of Engine

REVISIONS:

--

107.045

1/87

COMPONENT LOCATIONS

BACK UP LIGHTS/GLOVE BOX LIGHT

	Page-Figure
Fuse Box	Behind RH kick panel
Starter Lockout/Backup Light Switch ..	LH side of transmission 204-2
C104 (14 pin)	Behind dash, right of glove box 211-2
C146 (6 pin)	RH side of driver's footwell..... 206-2
G102.....	Behind dash, right of glove box 212-1
G103.....	Below LH rear lights 214-3
G104.....	RH rear wheel well..... 214-5

CHARGING SYSTEM

	Page-Figure
ABS Electronic Control Unit	Behind RH kick panel
Alternator	RH front side of engine
Battery	RH side of trunk 214-4
Fuse Box	Behind RH kick panel
Ignition Switch	Dash panel, right of steering column 208-1
Starter Assembly	Lower RH rear of engine
C101 (2 terminal)	RH front wheel well..... 202-2
C105 (2 terminal)	RH front wheel well..... 202-2
G100.....	RH rear corner of trunk, near battery..... 214-4

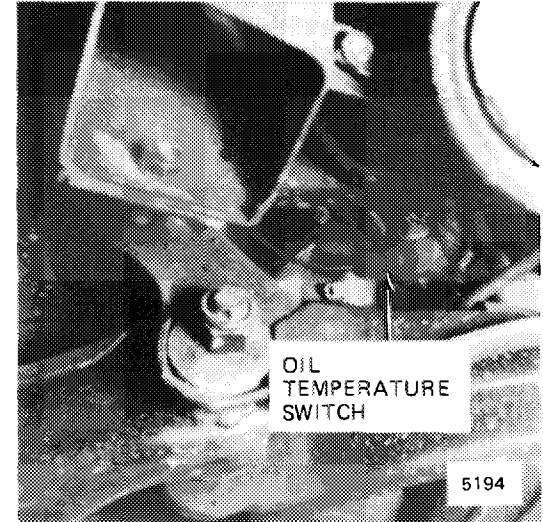


Figure 1 - Base of Oil Filter

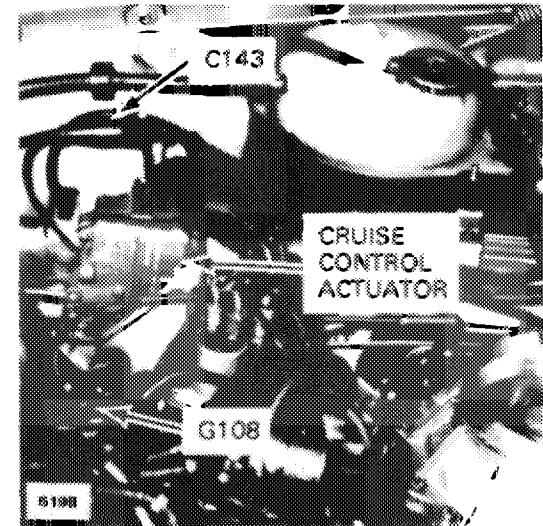


Figure 2 - RH Front of Engine

REVISIONS:

--

COMPONENT LOCATIONS

204

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

Page-Figure

Antenna Motor/Control	Behind LH rear wheel well	214-2
Antenna Motor/Relay	Behind LH rear wheel well	214-2
Fuse Box	Behind RH kick panel	
C104 (14 pin)	Behind dash, right of glove box	211-2
C135 (6 pin)	Behind LH rear wheel well	214-2
G102	Behind dash, right of glove box	212-1
G103	Below LH rear lights	214-3

COURTESY LIGHTS/VANITY LIGHTS

Page-Figure

Brake Wear Sensors	In each front brake pad	
Dome Light Time Delay Relay	Behind RH side of glove box	
Door Switches	In each door jamb	
Fuse Box	Behind RH kick panel	
Parking Brake Switch	On parking brake support	
Warning Module	Above brake pedal	207-1
Wiper Motor	LH rear corner of engine compartment	202-3
C131 (2 pin)	LH rear corner of engine compartment	202-3
G102	Behind dash, right of glove box	212-1
G113	LH side of windshield header	
G114	RH side of windshield header	

LAMBDA CONTROL/DIAGNOSTIC SOCKET/AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION

Page-Figure

Air Pump Clutch	Below alternator	202-6
Battery	RH side of trunk	214-4
Coolant Temperature Switch	Top RH rear of engine	204-1
Diagnostic Socket	Top of LH front wheel well	201-2
Flasher	In center console, forward of shift lever	
Frequency Valve	Between LH valve cover and air flow sensor	202-4
Fuse Box	Behind RH kick panel	

(Continued on next page)

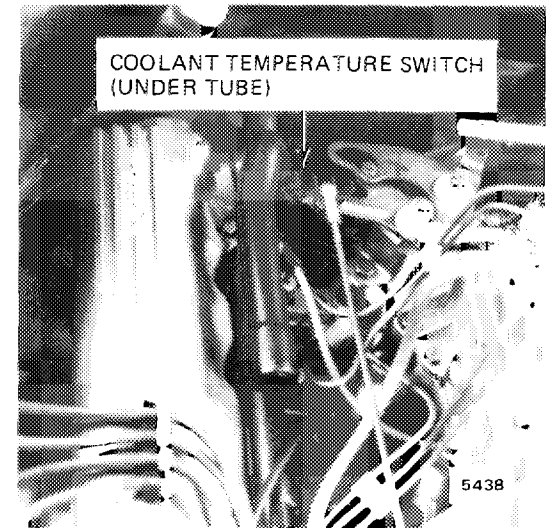


Figure 1 - Top RH Rear of Engine

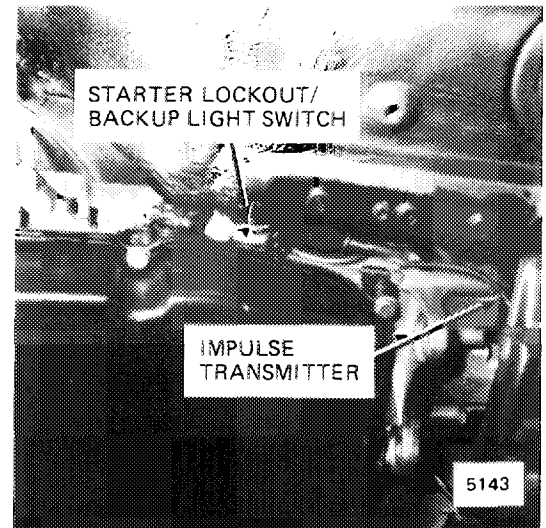


Figure 2 - LH side of Transmission

REVISIONS:

107.045

1/87

COMPONENT LOCATIONS

LAMBDA CONTROL/DIAGNOSTIC SOCKET/AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION (Continued)

	Page-Figure
Idle Speed Adjuster Solenoid	Top center of engine. 202-5
Idle Speed Control Unit	Behind glove box 210-2
Lambda Electronic Control Module	Behind RH kick panel 210-1
Oil Temperature Switch	Beside oil filter 203-1
Oxygen Sensor	On exhaust pipe, below primary catalyst
Switchover Valve Solenoid	LH front wheel well 202-1
Throttle Switch	On side of throttle valve housing
Washer Motor	Below washer fluid reservoir
C105 (2 terminal)	RH front wheel well 202-2
C143 (2 pin) (1983)	Passenger's footwell, near lambda electronic control module 210-1
C143 (2 pin) (1984) (1985)	RH side of engine compartment 203-2
C144 (3 pin)	Top of engine
C185 (1 pin)	RH kick panel, above fuse box
G100	RH rear corner of trunk, near battery. 214-4
G101	RH front fender, behind headlights
G102	Behind dash, right of glove box 212-1
G108	Front of engine at lifting bracket 203-2

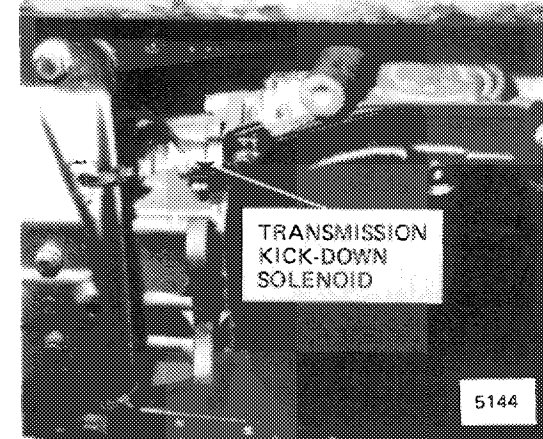


Figure 1 - RH Side of Transmission

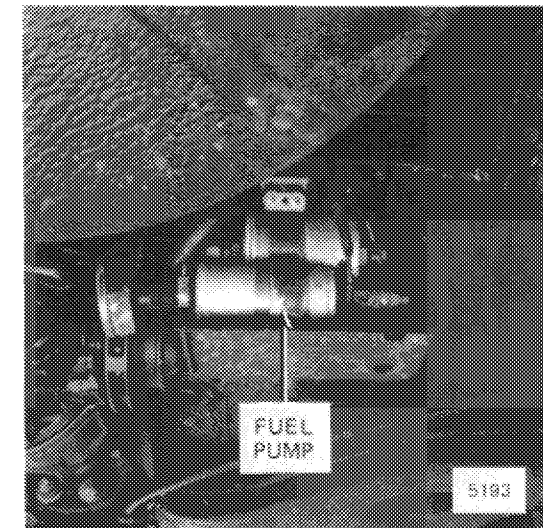


Figure 2 - Behind Differential

REVISIONS:

COMPONENT LOCATIONS

206

HEADLIGHTS/FOG LIGHTS

		Page-Figure
Combination Switch	Upper LH side of steering column	
Wiper Motor	LH rear corner of engine compartment	202-3
C106 (14 pin)	Under steering column	206-1
C141 (6 pin)	Rear of LH headlight assembly	
C142 (6 pin)	Rear of RH headlight assembly	
C146 (6 pin)	RH side of driver's footwell	206-2
G101	RH front fender, behind headlights	
G102	Behind dash, right of glove box	212-1
G107	LH radiator support	201-1

HEATED SEATS

		Page-Figure
Fuse Box	Behind RH kick panel	
Seat Heater Control/Relay	On cross member under each front seat	213-2
Seat Heaters	In each seat cushion	
G102	Behind dash, right of glove box	212-1

HORNS/AUXILIARY FAN

		Page-Figure
Auxiliary Fan Motor	Front of radiator	
Auxiliary Temperature Switch	In water outlet, top front of engine	202-4
Fuse Box	Behind RH kick panel	
Receiver Drier Switch	LH side of radiator	201-1
Slip Ring Assembly	Underside of steering wheel	
C106 (14 pin)	Under steering column	206-1
G101	RH front fender, behind headlights	
G107	LH radiator support	201-1

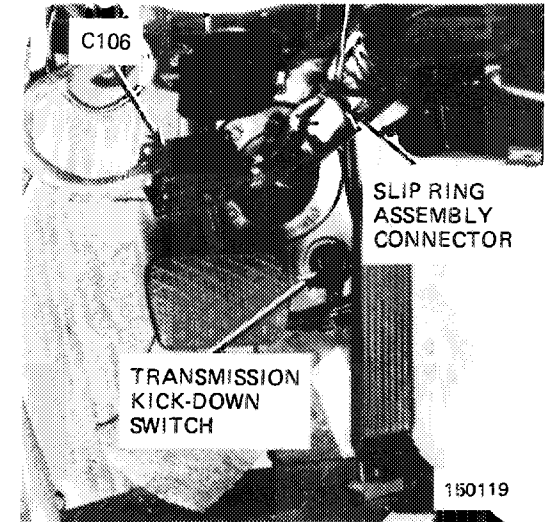


Figure 1 - Driver's Footwell Area

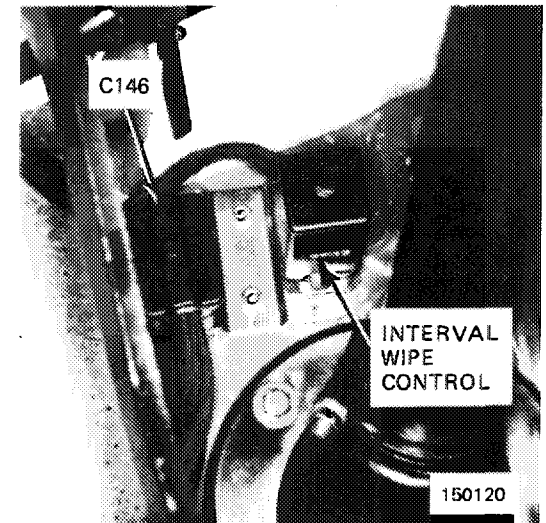


Figure 2 - Behind Dash, Above Steering Column

REVISIONS:

COMPONENT LOCATIONS

IGNITION/FUEL DELIVERY/TRANSMISSION KICKDOWN/DIAGNOSTIC SOCKET

	Page-Figure
Diagnostic Socket	Top of LH front wheel well 201-2
Electronic Fuel Pump Relay	Behind glove box 210-2
Fuel Pump	Under car, behind differential 205-2
Fuse Box	Behind RH kick panel
Idle Speed Control Unit	Behind glove box 210-2
Ignition Coil	At LH front wheel well 202-1
Ignition Distributor	On front top of engine
Ignition Switching Unit	Ahead of LH front wheel well 202-1
Shift Lever Switch	Under console 209-2
Transmission Kickdown Solenoid	RH rear of transmission 205-1
Transmission Kickdown Switch	Under accelerator pedal 206-1
Warm-Up Enrichment Compensator	Top front of engine 202-5
C104 (14 pin)	Behind dash, right of glove box 211-2
C105 (2 terminal)	RH front wheel well 202-2
C116 (1 terminal)	LH front wheel well, by diagnostic socket
C146 (6 pin)	RH side of driver's footwell 206-2
G101	RH front fender, behind headlights
G102	Behind dash, right of glove box 212-1
G104	RH rear wheel well 214-5
G106	LH side of engine compartment, next to coil

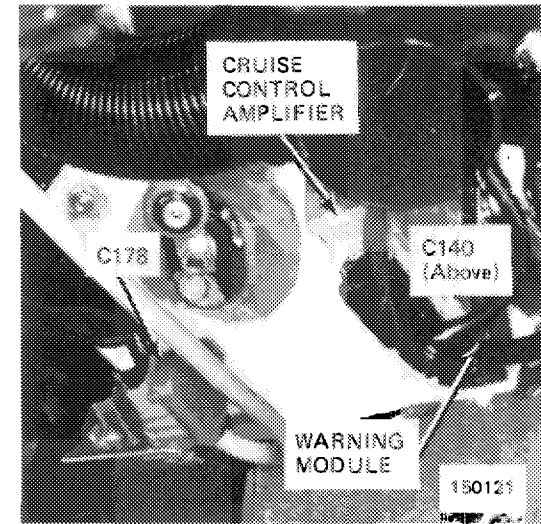


Figure 1 - Behind Dash, Left of Steering Column

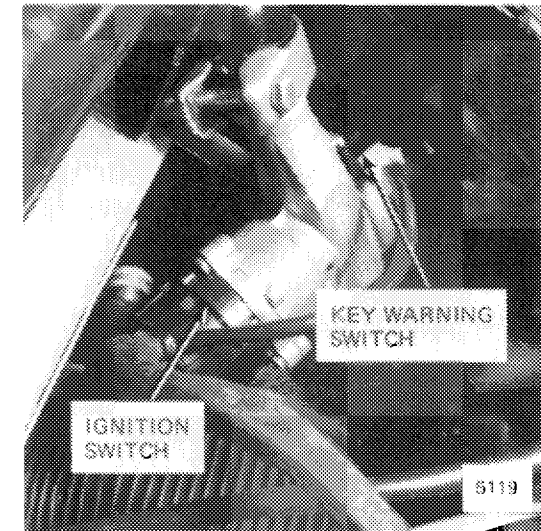


Figure 2 - Behind LH Side of Dash

REVISIONS:

COMPONENT LOCATIONS

208

ILLUMINATION: INSTRUMENT CLUSTER/CENTER CONSOLE

Page-Figure

Fuse Box	Behind RH kick panel	
C124 (1 terminal)	Behind upper console	
C146 (6 pin)	RH side of driver's footwell	206-2
G102	Behind dash, right of glove box	212-1

LIGHTS: MARKER/LICENSE/TRUNK

Page-Figure

Antenna Motor/Control	Behind LH rear wheel well	214-2
Fuse Box	Behind RH kick panel	
C104 (14 pin)	Behind dash, right of glove box	211-2
C141 (6 pin)	Rear of LH headlight assembly	
C142 (6 pin)	Rear of RH headlight assembly	
G101	RH front fender, behind headlights	
G103	Below LH rear lights	214-3
G104	RH rear wheel well	214-5
G107	LH radiator support	201-1

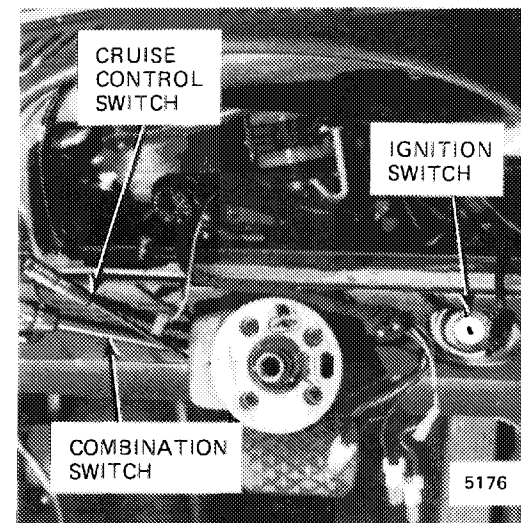


Figure 1 - LH Side of Dash

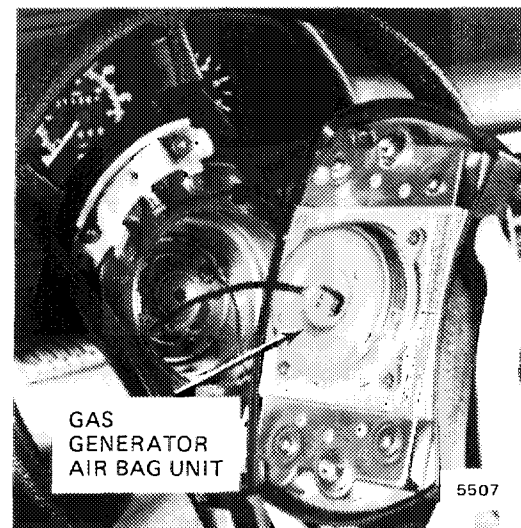


Figure 2 - Steering Wheel

107.045

REVISIONS:

COMPONENT LOCATIONS

LIGHTS: PARK/TAIL

	Page-Figure
Fuse Box	Behind RH kick panel
C104 (14 pin)	Behind dash, right of glove box 211-2
C141 (6 pin)	Rear of LH headlight assembly
C142 (6 pin)	Rear of RH headlight assembly
G101.....	RH front fender, behind headlights
G103.....	Below LH rear lights 214-3
G104.....	RH rear wheel well 214-5
G107.....	LH radiator support 201-1

OUTSIDE HEATED MIRRORS

	Page-Figure
Fuse Box	Behind RH kick panel
G102.....	Behind dash, right of glove box 212-1

POWER DISTRIBUTION

	Page-Figure
Alternator	RH front side of engine
Battery	RH side of trunk 214-4
Fuse Box	Behind RH kick panel
Ignition Switch	Dash panel, right of steering column 208-1
Starter Assembly	Lower RH rear of engine
C101 (2 terminal)	RH front wheel well 202-2
C105 (2 terminal)	RH front wheel well 202-2
C185 (1 pin)	RH kick panel, above fuse box
G100.....	RH rear corner of trunk, near battery 214-4

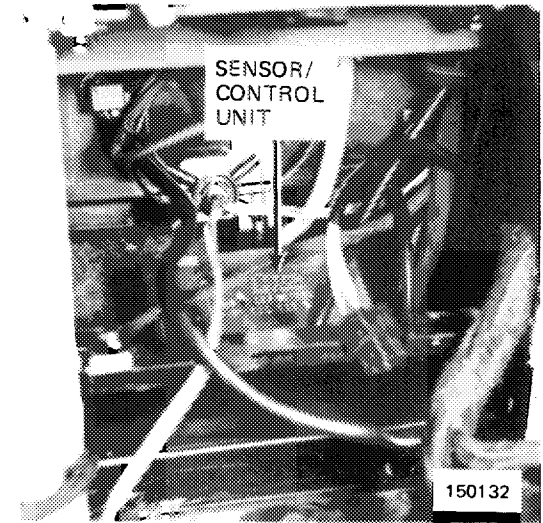


Figure 1 - Front of Console

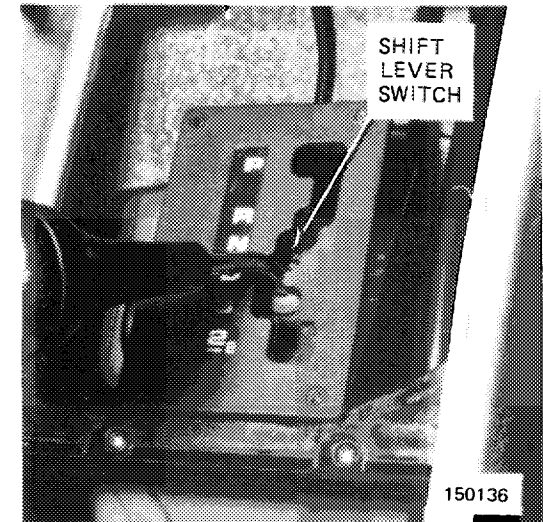


Figure 2 - Center Console

REVISIONS:

--

COMPONENT LOCATIONS

210

POWER WINDOWS

		Page-Figure
Fuse Box	Behind RH kick panel	
Window Motors	Below each window	212-2
C105 (2 terminal)	RH front wheel well	202-2
G102	Behind dash, right of glove box	212-1

REAR DEFOGGER

		Page-Figure
Fuse Box	Behind RH kick panel	
Rear Defogger Timer Relay	Behind RH kick panel	211-1
C104 (14 pin)	Behind dash, right of glove box	211-2
G102	Behind dash, right of glove box	212-1
G104	RH rear wheel well	214-5

RH OUTSIDE MIRROR

		Page-Figure
Fuse Box	Behind RH kick panel	
G102	Behind dash, right of glove box	212-1

START/COLD START

		Page-Figure
Battery	RH side of trunk	214-4
Cold-Start Valve	Top LH front of engine	202-4
Electronic Fuel Pump Relay	Behind glove box	210-2
Fuse Box	Behind RH kick panel	
Ignition Switch	Dash panel, right of steering column	208-1
Starter Assembly	Lower RH rear of engine	
Starter Lockout/Backup Light Switch	LH side of transmission	204-2
Thermo-Time Switch	Top of engine	202-5
C101 (2 terminal)	RH front wheel well	202-2
C105 (2 terminal)	RH front wheel well	202-2
C146 (6 pin)	RH side of driver's footwell	206-2
G100	RH rear corner of trunk, near battery	214-4

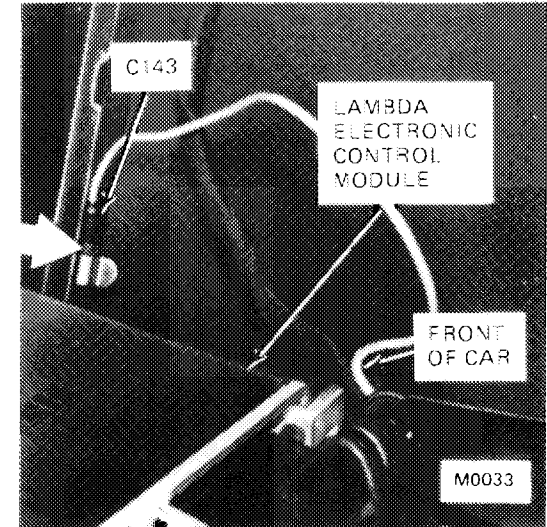


Figure 1 - Passenger's Footwell

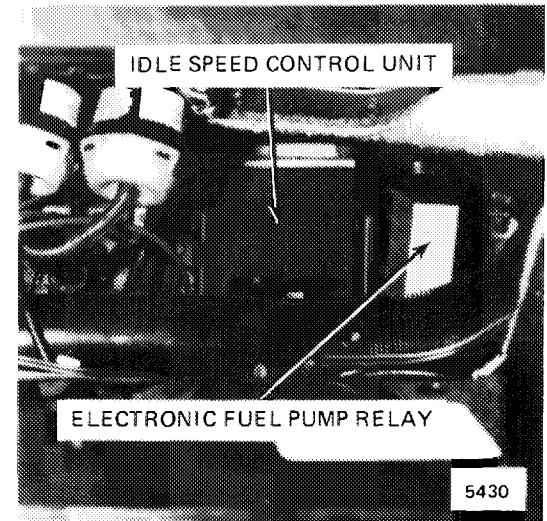


Figure 2 - Behind Glove Box

REVISIONS:

107.045

COMPONENT LOCATIONS

1/87

STOPLIGHTS/CRUISE CONTROL

	Page-Figure
Brake Switch	Top of brake pedal support
Cruise Control Actuator	RH front corner of engine compartment 203-2
Cruise Control Amplifier	Between parking brake and brake support 207-1
Fuse Box	Behind RH kick panel
C104 (14 pin)	Behind dash, right of glove box 211-2
C140 (6 pin)	Behind LH side of dash, above cruise control amplifier 207-1
C146 (6 pin)	RH side of driver's footwell 206-2
C164 (8 pin)	Behind RH headlights
C182 (2 pin)	Behind instrument cluster
C242 (1 terminal)	Behind instrument cluster
G101	RH front fender, behind headlights
G102	Behind dash, right of glove box 212-1
G103	Below LH rear lights 214-3
G104	RH rear wheel well 214-5

SUPPLEMENTAL RESTRAINT SYSTEM (SRS) (WITH AIR BAG)

	Page-Figure
Energy Accumulator	Base of LH door pillar 214-1
Fuse Box	Behind RH kick panel
Gas Generator Air Bag Unit	Underside of steering wheel 208-2
Gas Generator Emergency Tensioning Retractor (Driver's)	Base of LH door pillar 214-1
Gas Generator Emergency Tensioning Retractor (Passenger's)	Base of RH door pillar 213-1
Ignition Switch	Dash panel, right of steering column 208-1
Sensor/Control Unit	In center console 209-1
Slip Ring Assembly	Underside of steering wheel
Voltage Converter	Base of LH door pillar 214-1
C178 (8 pin)	Behind dash, left of steering column 207-1
G102	Behind dash, right of glove box 212-1

TURN SIGNAL/HAZARD LIGHTS

	Page-Figure
Combination Switch	Upper LH side of steering column 208-1
Flasher	In center console, forward of shift lever
Fuse Box	Behind RH kick panel

(Continued on next page)

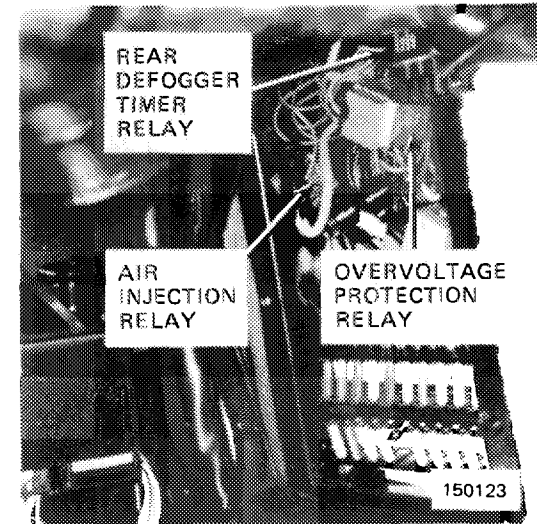


Figure 1 - RH Kick Panel

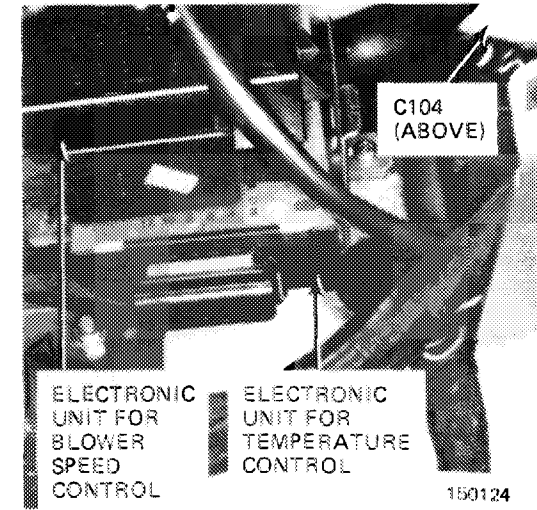


Figure 2 - Behind Glove Box

REVISIONS:

--

107.045

211

COMPONENT LOCATIONS

212

TURN SIGNAL/HAZARD LIGHTS (Continued)

	Page-Figure
Switchover Valve Solenoid	LH front wheel well 202-1
C104 (14 pin)	Behind dash, right of glove box 211-2
C106 (14 pin)	Under steering column 206-1
C141 (6 pin)	Rear of LH headlight assembly
C142 (6 pin)	Rear of RH headlight assembly
C146 (6 pin)	RH side of driver's footwell. 206-2
G101	RH front fender, behind headlights
G102	Behind dash, right of glove box 212-1
G103	Below LH rear lights 214-3
G104	RH rear wheel well 214-5
G107	LH radiator support 201-1

WARNING INDICATORS/GAUGES/CLOCK/TACHOMETER

	Page-Figure
Brake Wear Sensors	In each front brake pad
Coolant Temperature Sender	On water outlet, RH front of engine 202-4
Diagnostic Socket	Top of LH front wheel well 201-2
Fuel Gauge Sender	Under convertible top storage area. 214-6
Fuse Box	Behind RH kick panel
Ignition Distributor	On front top of engine
Ignition Switching Unit	Ahead of LH front wheel well 202-1
Impulse Transmitter	Rear of LH side of transmission 204-2
Oil Pressure Sender	Above oil filter
Outside Air Temperature Sensor	Behind front license plate bracket
Wiper Motor	LH rear corner of engine compartment 202-3
C104 (14 pin)	Behind dash, right of glove box 211-2
C116 (1 terminal)	LH front wheel well, by diagnostic socket
C131 (2 pin)	LH rear corner of engine compartment 202-3
C132 (2 pin)	Behind LH front wheel well
C146 (6 pin)	RH side of driver's footwell. 206-2
C177 (2 pin)	In harness, behind glove box
G102	Behind dash, right of glove box 212-1
G104	RH rear wheel well. 214-5
G106	LH side of engine compartment, next to coil

107.045

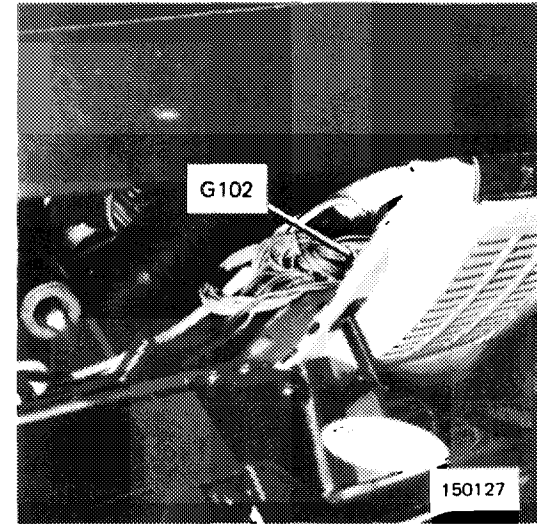


Figure 1 - Behind Glove Box

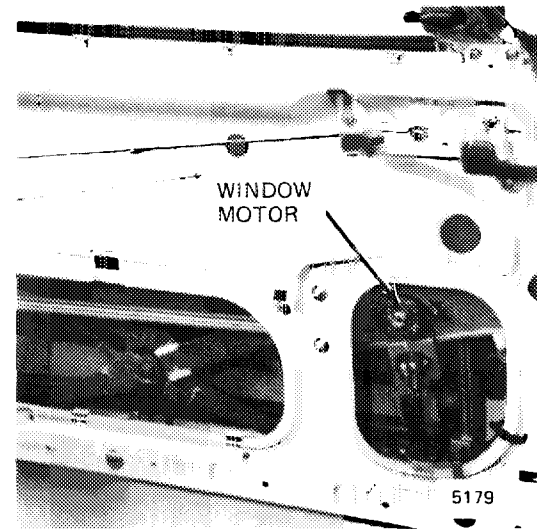


Figure 2 - Driver's Door (Passenger's Similar)

REVISIONS:

1/87

COMPONENT LOCATIONS

1/87

WARNING SYSTEM

		Page-Figure
Brake Fluid Level Switches	Top of brake fluid reservoir	201-2
Dome Light Time Delay Relay	Behind RH side of glove box	
Door Switches	In each door jamb	
Driver's Seatbelt Switch	Part of driver's seatbelt assembly	
Fuse Box	Behind RH kick panel	
Key Warning Switch	Part of ignition switch	207-2
Parking Brake Switch	On parking brake support	
Warning Module	Above brake pedal	207-1
Wiper Motor	LH rear corner of engine compartment	202-3
C131 (2 pin)	LH rear corner of engine compartment	202-3
C146 (6 pin)	RH side of driver's footwell	206-2
C166 (2 pin)	Under driver's seat	
G102	Behind dash, right of glove box	212-1

WIPER/WASHER

		Page-Figure
Air Pump Clutch	Below alternator	202-6
Combination Switch	Upper LH side of steering column	208-1
Fuse Box	Behind RH kick panel	
Interval Wipe Control	Above steering column	206-2
Washer Motor	Below washer fluid reservoir	
Wiper Motor	LH rear corner of engine compartment	202-3
C106 (14 pin)	Under steering column	206-1
G101	RH front fender, behind headlights	
G102	Behind dash, right of glove box	212-1

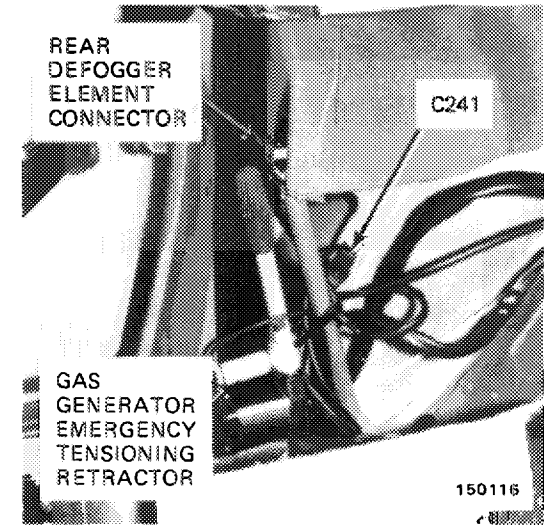


Figure 1 - Base of RH Door Pillar

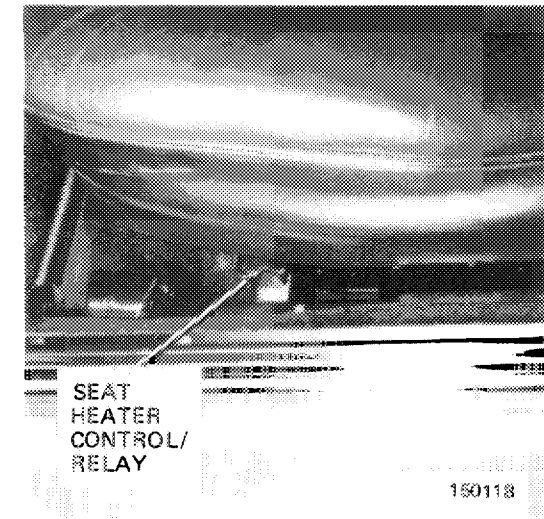


Figure 2 - LH Front Door Sill (RH Similar)

107.045

REVISIONS:

213

COMPONENT LOCATIONS

214

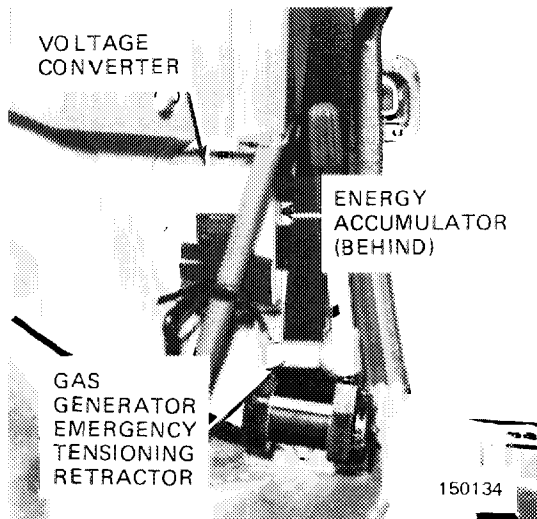


Figure 1 - Base of LH Door Pillar

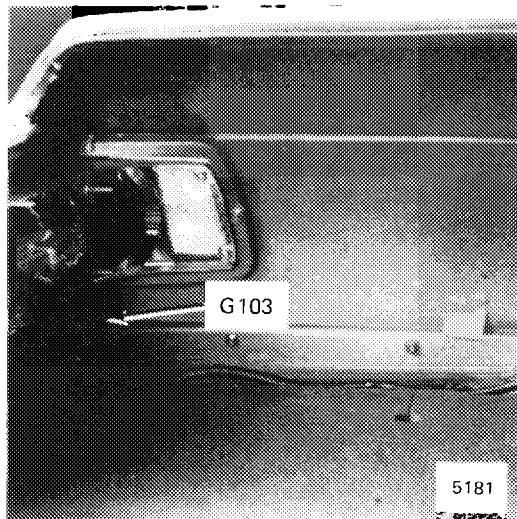


Figure 3 - Below LH Rear Lights

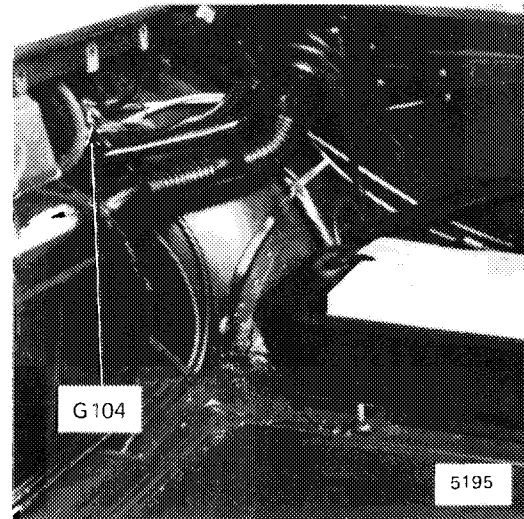


Figure 5 - Front RH Side of Trunk

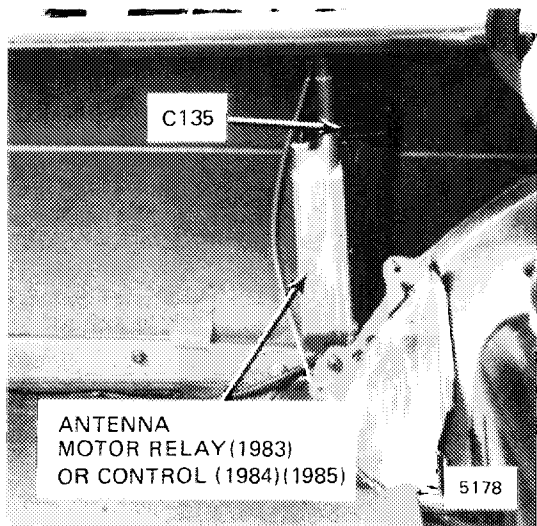


Figure 2 - Behind LH Rear Wheel Well

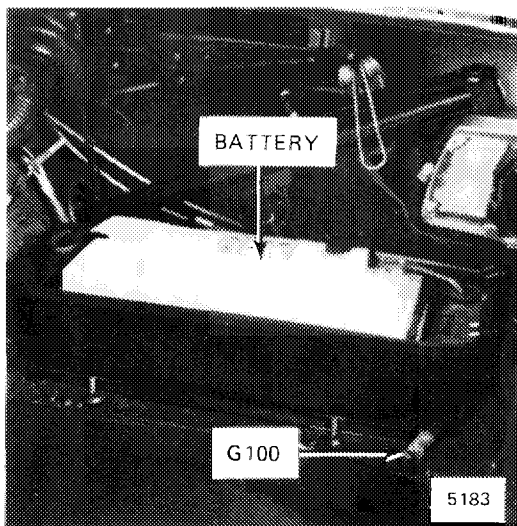


Figure 4 - RH Side of Trunk

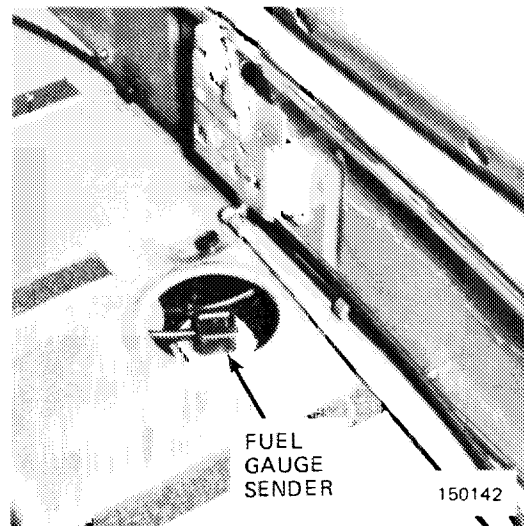


Figure 6 - Behind Front Seats, Convertible Top Storage Area

REVISIONS:

--

107.045

1:87