

COMPONENT LOCATIONS

ANTI-LOCK BRAKE SYSTEM

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
G1	Battery	Right rear corner of trunk 221-1
G2	Alternator	Top right front of engine In Fuse/Relay Box
K1	Over Voltage Protection Relay	In Fuse/Relay Box
L6/1	Left Front Wheel Speed Sensor	Mounted in left steering knuckle. 214-5
L6/2	Right Front Wheel Speed Sensor	Mounted in right steering knuckle
L6	Rear Axle Speed Sensor (ABS)	Mounted in rear differential housing 215-1
M16	Cruise Control Actuator	Right front of engine compartment 203-2
N4	Cruise Control Amplifier	Between parking brake and brake support. 215-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest. 217-6
N30	ABS Control Unit	Below right footrest. 218-3
N31	ABS Hydraulic Unit (MY87)	Right front corner of engine compartment. 209-1
N31	ABS Hydraulic Unit (MY86)	Left front corner of engine compartment 209-2
S9	Stop Lamp Switch	Top of brake pedal support
W1	Main Ground	Behind dash, right of glove box 217-2
W10	Ground, Battery	Right rear corner of trunk, near battery 220-3
W14	Ground	On ABS hydraulic unit support 208-2
X(L6/1)	(2 pin)	Left rear corner of engine compartment, above shock tower 212-1
X(L6)	(2 pin)	In convertible top storage area
X(L6/2)	(2 pin)	Right rear corner of engine compartment, above shock tower 210-1
X3	Terminal Block, E-Speedometer (2 pin)	Behind instrument cluster 216-1
X4/2	Terminal Block, Circuit 30 (2 pin)	Top of right front wheel well 210-1
X4/3	Connector, Battery/Overload Protection, Circuit 30 (1 pin)	Above fuse/relay box, at right kick panel 218-4
X20	Connector, Stop Lamp Switch (2 pin)	Behind instrument cluster
X33/1	Connector, Actuator/Cruise Control Extension (8 pin)	Behind right headlamp unit 209-1
X35	Terminal Block, Circuits 30/61 (Battery) (2 pin)	On right front shock tower 213-2
X47	Connector, Rear Speed Sensor Harness (2 pin)	At base of right door pillar 218-6
X51/1	Terminal Block, Circuits 87/30 (2 pin)	In fuse box, at right kick panel

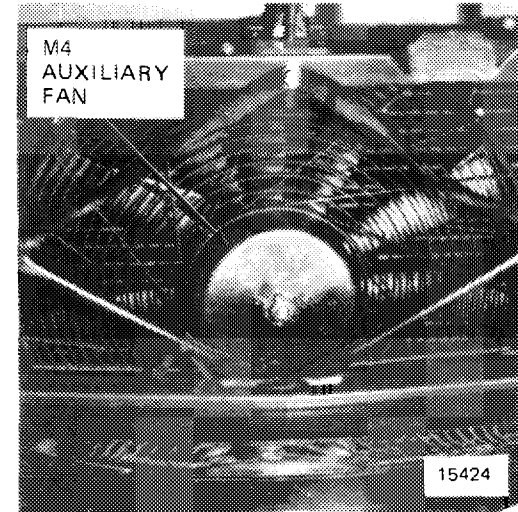


Figure 1 — Front of Radiator

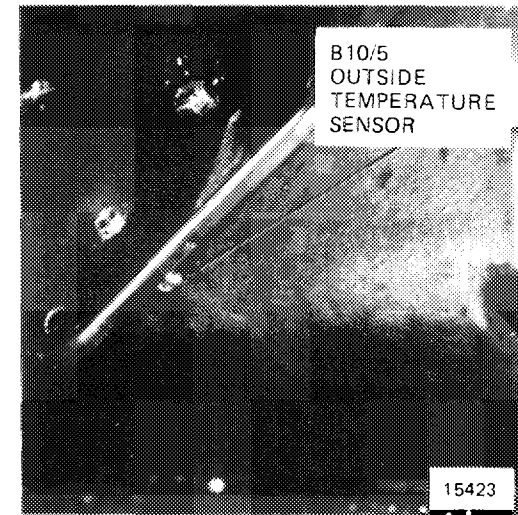


Figure 2 — Center of Front Bumper, Behind License Plate Bracket

REVISIONS:

COMPONENT LOCATIONS

202

ANTI-THEFT ALARM SYSTEM

Page-Figure

F1	Fuse/Relay Box	Behind right kick panel	218-4
F14	Auxiliary Fuse Holder	Right rear corner of engine compartment	210-2
H3	Alarm Horn	Right rear corner of engine compartment	214-1
M6/1	Wiper Motor	Left rear of engine compartment	211-2
M14/2	Supply Pump	Right side of trunk, near battery	221-1
M16	Cruise Control Actuator	Right front of engine compartment	203-2
N2/4	Warning Module	Above brake pedal	215-4
N4	Cruise Control Amplifier	Between parking brake and brake support	215-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest	217-6
N10	Combination Relay	Behind instrument cluster	216-1
N26	Anti-Theft Alarm Control Unit	Behind glove box	218-1
N27	Anti-Towing Sensor	Left side of trunk, near automatic antenna	220-6
N30	ABS Control Unit	Below right footrest	218-3
S4	Combination Switch	Upper left side of steering column	
S9	Stop Lamp Switch	Top of brake pedal support	
S10/1	Left Front Brake Pad Wear Sensor	In left front brake pad	
S12	Parking Brake Switch	On parking brake support	
S17/13	Left Door Switch	In left door jamb	
S17/14	Right Door Switch	In right door jamb	
S47	Left Front Door Actuator	In left door	
S48	Right Front Door Actuator	In right door	
S49	Trunk Lid Lock Actuator	Near center of end panel, in trunk	220-5
S62/1	Left Front Door Switch	In left door	
S62/2	Right Front Door Switch	In right door	
S62/4	Radio Protection Contact (MY86)	Underside of radio	216-4
S62/4	Radio Protection Contact (MY87)	Front of console, on rear of radio	216-3
S62	Hood Switch	Rear of engine compartment	211-1
W1	Main Ground	Behind dash, right of glove box	217-2
W7	Ground	Right rear wheel well, in trunk	220-4
X(S62/2)	(3 pin)	In right door	
X(S62/1)	(3 pin)	In left door	220-1
X3	Terminal Block, E-Speedometer (2 pin)	Behind instrument cluster	216-1
X4/2	Terminal Block, Circuit 30 (2 pin)	Top of right front wheel well	210-1
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box	217-1

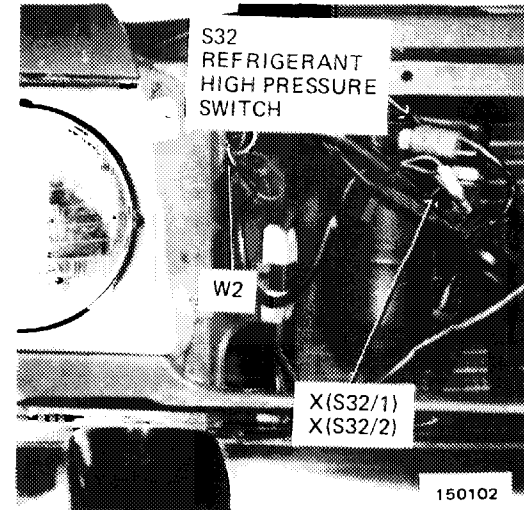


Figure 1 — Right Front of Car

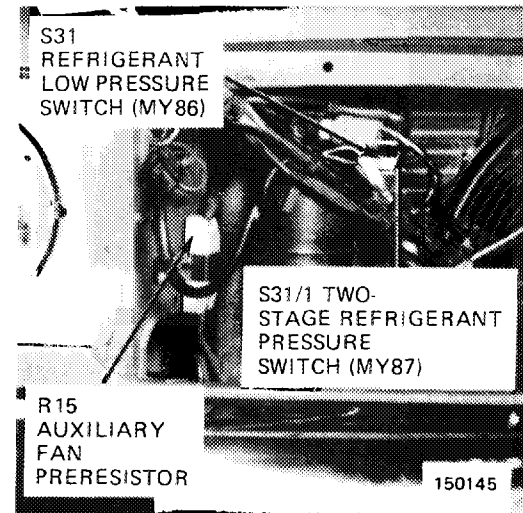


Figure 2 — Right Front of Car

REVISIONS:

COMPONENT LOCATIONS

ANTI-THEFT ALARM SYSTEM (Continued)

		Page-Figure
X18/4	Connector, Left Front Brake Pad Sensor (2 pin)	Left side of engine compartment 212-1
X20	Connector, Stop Lamp Switch (2 pin)	Behind instrument cluster
X33/1	Connector, Actuator/Cruise Control Extension (8 pin)	Behind right headlamp unit 209-1
X35	Terminal Block, Circuits 30/61 (Battery) (2 pin)	On right front shock tower 213-2
X40	Connector, Radio (1 pin)	Behind radio 216-4
X42	Connector, Front/Rear Harness (8 pin)	Behind glove box 217-5
X43	Connector, Central Locking System (8 pin)	Behind right side of glove box 218-1
X48D		Anti-Theft rear harness, in trunk
X48E		Anti-Theft rear harness, in trunk
X48F		Anti-Theft rear harness, in trunk
X63	Connector, Steering Column Harness (14 pin)	Under steering column 215-2

BACKUP LAMPS/GLOVE BOX LAMP

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest 217-6
S16/1	Starter Lock-Out/Backup Lamp Switch	Left side of transmission 214-4
W1	Main Ground	Behind dash, right of glove box 217-2
W6	Ground	Left rear corner of trunk 220-2
W7	Ground	Right rear wheel well, in trunk 220-4
X49/2	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin)	Above steering column 215-3

CENTRAL LOCKING SYSTEM

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
M14/2	Supply Pump	Right side of trunk, near battery 221-1
S8/2	Warning Buzzer Switch	In ignition switch assembly 215-5
S47	Left Front Door Actuator	In left door
S48	Right Front Door Actuator	In right door
S49	Trunk Lid Lock Actuator	Near center of end panel, in trunk 220-5
W1	Main Ground	Behind dash, right of glove box 217-2
X1S8/2)	(2 pin)	Behind left side of dash panel, by steering column

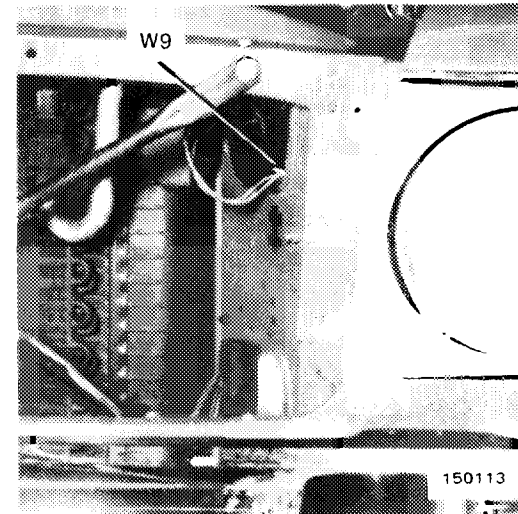


Figure 1 — Left Front of Car

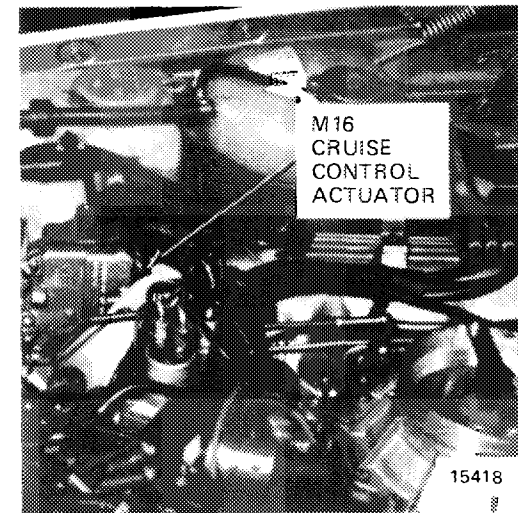


Figure 2 — Right Side of Engine Compartment

REVISIONS:

--	--

COMPONENT LOCATIONS

204

CENTRAL LOCKING SYSTEM (Continued)

		Page-Figure
X43	Connector, Central Locking System (8 pin)	Behind right side of glove box 218-1
X44	Connector, Central Locking System (1 pin)	Above fuse/relay box, at right kick panel 218-4
X48A		Central locking harness, right side of trunk
X48B		Central locking harness, right side of trunk
X48C		Central locking harness, right side of trunk
X48D		Anti-Theft rear harness, in trunk
X48E		Anti-Theft rear harness, in trunk
X48F		Anti-Theft rear harness, in trunk

CHARGING SYSTEM

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
G1	Battery	Right rear corner of trunk 221-1
G2	Alternator	Top right front of engine
M1	Starter	Lower right rear of engine
N30	ABS Control Unit	Below right footrest 218-3
S2/1	Ignition/Starter Switch	In dash panel, right of steering column 215-5
W10	Ground, Battery	Right rear corner of trunk, near battery 220-3
X4/2	Terminal Block, Circuit 30 (2 pin)	Top of right front wheel well 210-1
X35	Terminal Block, Circuits 30/61 (Battery) (2 pin)	On right front shock tower 213-2

CIGAR LIGHTER/RADIO/AUTOMATIC ANTENNA

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
M11	Automatic Antenna	Left side of trunk 220-6
W1	Main Ground	Behind dash, right of glove box 217-2
W6	Ground	Left rear corner of trunk 220-2
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box 217-1

COURTESY LAMPS/VANITY LAMPS

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
M6/1	Wiper Motor	Left rear of engine compartment 211-2
N2/4	Warning Module	Above brake pedal 215-4
N11/5	Dome Lamp Timer-Relay	At right kick panel 217-3
S10/1	Left Front Brake Pad Wear Sensor	In left front brake pad

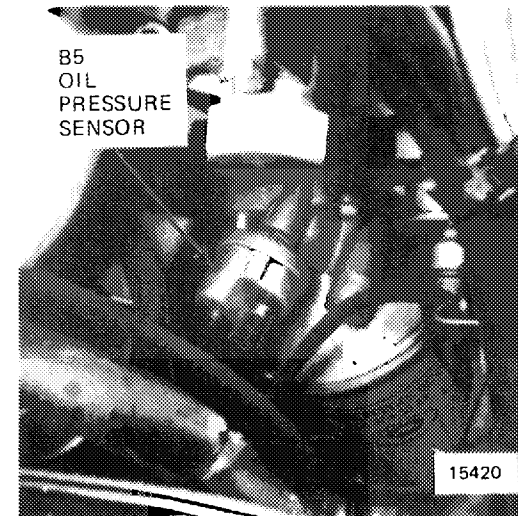


Figure 1 — Lower Right Front of Engine

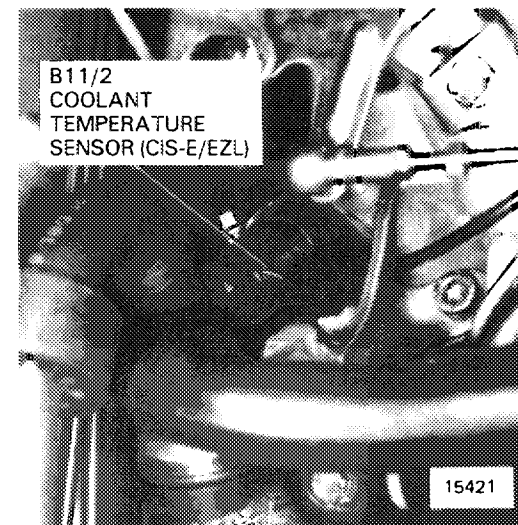


Figure 2 — Top Right Side of Engine

REVISIONS:

--	--

COMPONENT LOCATIONS

1/87

COURTESY LAMPS/VANITY LAMPS (Continued)

Page-Figure

S12	Parking Brake Switch	On parking brake support	
S17/13	Left Door Switch	In left door jamb	
S17/14	Right Door Switch	In right door jamb	
W(E14/2)		Center of windshield header	
W(E14/1)		Center of windshield header	
W1	Main Ground	Behind dash, right of glove box	217-2
X18/4	Connector, Left Front Brake Pad Sensor (2 pin)	Left side of engine compartment	212 1

ELECTRONIC ENGINE CONTROLS/DIAGNOSTIC SOCKET/AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION

Page-Figure

B2	Air Flow Sensor Position Indicator	Right side of mixture control unit	211-1
B11/2	Coolant Temperature Sensor (CIS-E/EZL)	Left rear of engine	204-2
B18	Altitude Correction Capsule	Below right kick footrest	217-6
B21	EGR Temperature Sensor	Left rear of engine in EGR line	
F1	Fuse/Relay Box	Behind right kick panel	218-4
G1	Battery	Right rear corner of trunk	221-1
G3/2	Heated Oxygen Sensor	Mounted in exhaust pipe, right of transmission	214-3
K1/1	Over Voltage Protection Relay	In fuse/relay box	
N1/2	Electronic Ignition Control Unit (EZL)	Left side of engine compartment	212-2
N3	CIS-E Control Unit	Below right footrest	218-3
N4	Cruise Control Amplifier	Between parking brake and brake support	215-4
N6	A/C Compressor Control Unit	Behind glove box	218-5
N8	Idle Speed Control Unit	Behind glove box	218-2
N16/4	Fuel Pump Relay	Behind glove box	218-2
R17/1	Reference Resistor (CIS-E)	Below right footrest	217-6
S2/1	Ignition/Starter Switch	In dash panel, right of steering column	215-5
S10/2	Right Front Brake Pad Wear Sensor	In right front brake pad	
S29/2	Throttle Valve Switch	Left side of engine	
S80	Pushbutton Switch with LED (Calif.)	Top of left front wheel well	221-2
W1	Main Ground	Behind dash, right of glove box	217-2
W10	Ground, Battery	Right rear corner of trunk, near battery	220-3
W11	Ground	Top of engine	207-1
X(Y33)	(2 pin)	Right side of engine compartment	213-1
X3	Terminal Block, E-Speedometer (2 pin)	Behind instrument cluster	216-1

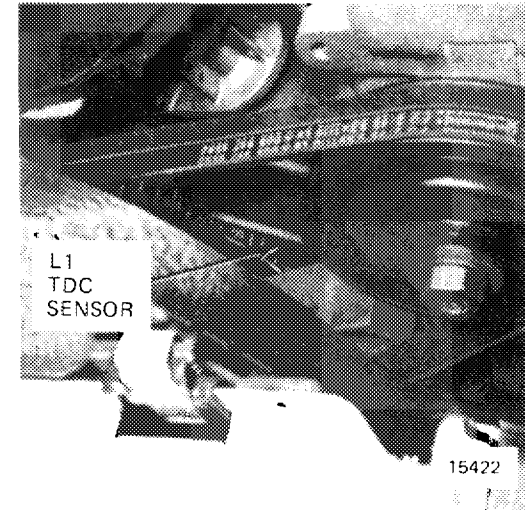


Figure 1 — Top Left of Engine

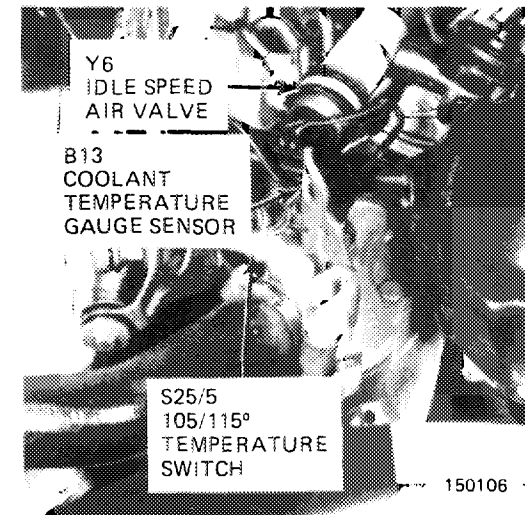


Figure 2 — Top Front of Engine

REVISIONS:

--	--

107.048

205

COMPONENT LOCATIONS

ELECTRONIC ENGINE CONTROLS/DIAGNOSTIC SOCKET/AIR INJECTION MANAGEMENT/IDLE SPEED STABILIZATION (Continued)

		Page-Figure
X4/3	Connector, Battery/Overload Protection, Circuit 30 (1 pin)	Above fuse/relay box, at right kick panel 218-4
X11	Diagnostic Socket/Terminal Block	Top of left front wheel well 212-1
X11/1	Diagnostic Socket/Terminal Block, Circuit 30/CIS-E (2 pin)	Left front wheel well 212-2
X26	Connector, Interior/Engine Wiring Harness (14 pin)	Above right side of right footwell 217-4
X48G	Engine harness, in CIS-E control unit connector	
X48H	Engine harness, left side of engine compartment	
X51/1	Terminal Block, Circuits 87/30 (2 pin)	In fuse box, at right kick panel
X56	Connector, Throttle Valve Switch (3 pin)	Top left front of engine 206-1
X60/1	Connector, Heated O ₂ -Sensor (2 pin)	Below right footrest 218-3
X60/2	Connector, Heated O ₂ -Sensor (1 pin)	Below right footrest 218-3
X92	Test Connection for Diagnosis (8 pin)	Top of left front wheel well 221-2
X132	Connector, Right Front Brake Pad Wear Sensor (2 pin)	Right rear corner of engine compartment 213-2
Y1	Electro-Hydraulic Actuator (EHA)	Left side of mixture control unit 207-1
Y6	Idle Speed Air Valve	Top center of engine 205-2
Y32	Air Pump Vacuum Valve	Right wheel well, under coolant reservoir 213-1
Y33	Electro-Magnetic Air Pump Clutch	Below alternator

HEADLAMPS/FOG LAMPS

F1	Fuse/Relay Box	Behind right kick panel 218-4
M6/1	Wiper Motor	Left rear of engine compartment 211-2
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest 217-6
S4	Combination Switch	Upper left side of steering column
W1	Main Ground	Behind dash, right of glove box 217-2
W2	Ground	Behind right headlamp unit 202-1
W9	Ground	Behind left headlamp unit 203-1
X63	Connector, Steering Column Harness (14 pin)	Under steering column 215-2

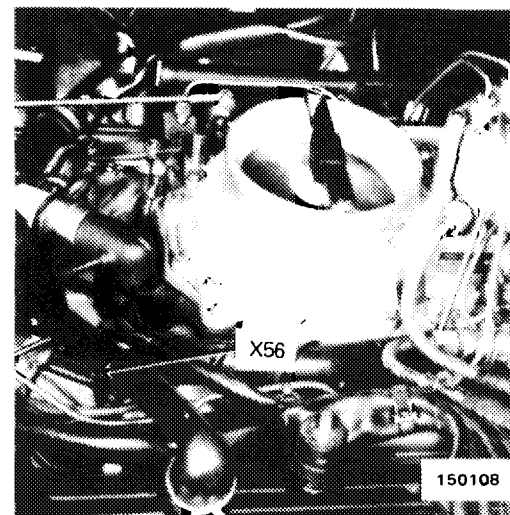


Figure 1 — Top Left Side of Engine

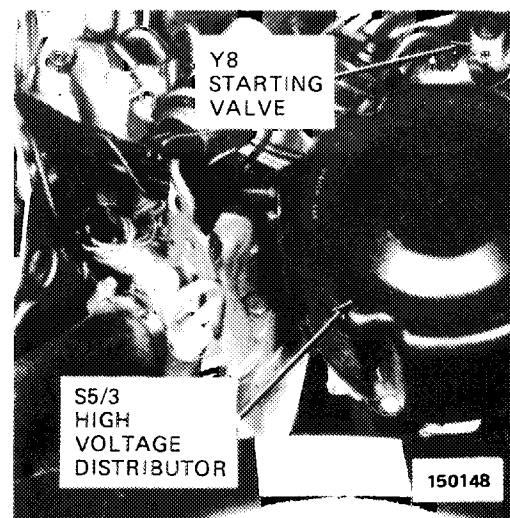


Figure 2 — Top Front of Engine

REVISIONS:

--	--

COMPONENT LOCATIONS

HEATED SEATS

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
N25/1	Left Front Seat Heater Relay	On crossmember, below left seat 219-1
N25/2	Right Front Seat Heater Relay	On crossmember, below right seat
R13/1	Left Front Seat Heater	In left seat
R13/2	Left Front Backrest Heater	In left backrest
R13/3	Right Front Seat Heater	In right seat
R13/4	Right Front Backrest Heater	In right backrest
W1	Main Ground	Behind dash, right of glove box 217-2

HORNS/AUXILIARY FAN

		Page-Figure
F1	Fuse/Relay Box	Behind right kick panel 218-4
K9	Auxiliary Fan Relay	Behind glove box 218-5
K10	Auxiliary Fan Preresistor Relay	Behind glove box 218-5
M4	Auxiliary Fan	Front of car, forward of radiator 201-1
R15	Auxiliary Fan Preresistor	Right front of car, behind grille 202-2
S7	Horn Contact	Underside of steering wheel
S25/5	105/115 Degrees C Temperature Switch	Top front of engine 205-2
S32	Refrigerant High Pressure Switch	Right front of car, behind grille 202-1
W2	Ground	Behind right headlamp unit 202-1
W9	Ground	Behind left headlamp unit 203-1
W11	Ground	Top of engine 207-1
W14	Ground	On ABS hydraulic unit support 208-2
X(S32/1)	(1 pin)	Right front of radiator 202-1
X(S32/2)	(1 pin)	Right front of radiator 202-1
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box 217-1
X63	Connector, Steering Column Harness (14 pin)	Under steering column 215-2

IGNITION/FUEL DELIVERY/TRANSMISSION KICK-DOWN DIAGNOSTIC SOCKET

		Page-Figure
B11/2	Coolant Temperature Sensor (CIS-E/EZL)	Left rear of engine 204-2
F1	Fuse/Relay Box	Behind right kick panel 218-4
G1	Battery	Right rear corner of trunk 221-1
K1	Over Voltage Protection Relay	In Fuse/Relay Box
L1	TDC Sensor	Front of engine 205-1
L5	Crankshaft Position Sensor	On bell housing
M1	Starter	Lower right rear of engine
M3/1, M3/2	Fuel Pump	Under rear of car, behind differential 214-6

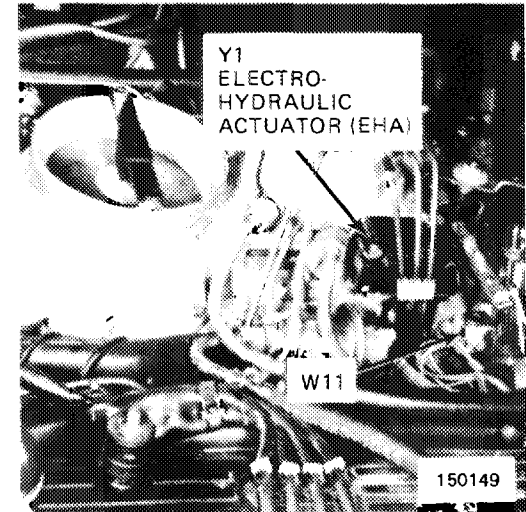


Figure 1 — Top of Engine

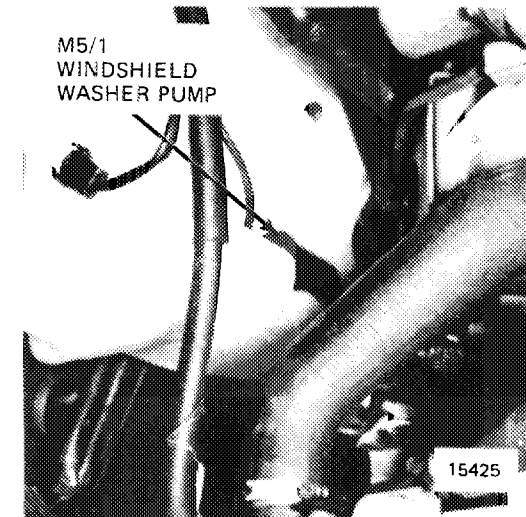


Figure 2 — Right Side of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

IGNITION/FUEL DELIVERY/TRANSMISSION KICK-DOWN DIAGNOSTIC SOCKET (Continued) Page-Figure

N1/2	Electronic Ignition Control Unit (EZL)	Left side of engine compartment.	212-2
N3	CIS-E Control Unit	Below right footrest.	218-3
N4	Cruise Control Amplifier.	Between parking brake and brake support.	215-4
N6	A/C Compressor Control Unit	Behind glove box	218-5
N8	Idle Speed Control Unit	Behind glove box	218-2
N16/4	Fuel Pump Relay	Behind glove box	218-2
R16/1	Reference Resistor (EZL)	Left side of engine compartment, forward of diagnostic socket	212-1
S5/3	High Voltage Distributor	Top front of engine	206-2
S16/1	Starter Lock-Out/Backup Lamp Switch	Left side of transmission	214-4
S29/2	Throttle Valve Switch	Left side of engine	
S30/1	Kick-Down Switch	Under accelerator pedal	215-2
S60	B Position Shift Lever Switch	In center console	216-5
T1	Ignition Coil	Left side of engine compartment.	212-2
W3	Ground	Left front wheel well, at base of ignition coil	212-2
W7	Ground	Right rear wheel well, in trunk	220-4
W10	Ground, Battery	Right rear corner of trunk, near battery	220-3
W11	Ground	Top of engine	207-1
X3	Terminal Block, E-Speedometer (2 pin)	Behind instrument cluster	216-1
X4/2	Terminal Block, Circuit 30 (2 pin)	Top of right front wheel well	210-1
X11	Diagnostic Socket/Terminal Block	Top of left front wheel well	212-1
X11/1	Diagnostic Socket/Terminal Block, Circuit 30/CIS-E (2 pin)	Left front wheel well	212-2
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box	217-1
X26	Connector, Interior/Engine Wiring Harness (14 pin)	Above right side of right footwell	217-4
X35	Terminal Block, Circuits 30/61 (Battery) (2 pin)	On right front shock tower	213-2
X48H		Engine harness, left side of engine compartment	
X48I		Engine harness, left side of engine compartment	
X48J		Engine harness, left side of engine compartment	
X49/2	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin)	Above steering column	215-3
X51/1	Terminal Block, Circuits 87/30 (2 pin)	In fuse box, at right kick panel	

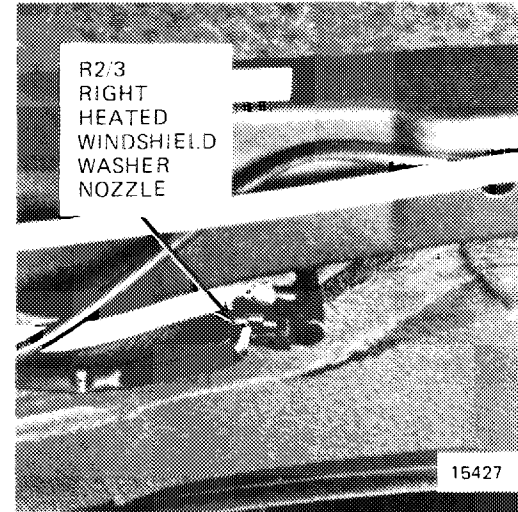


Figure 1 — Rear Underside of Engine Hood

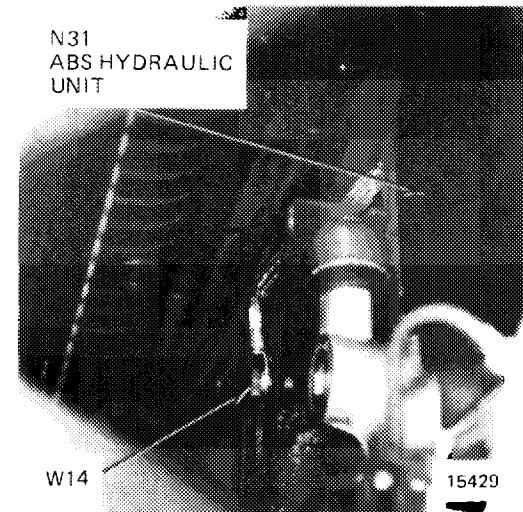


Figure 2 — Lower Right Front of Engine Compartment

REVISIONS:

COMPONENT LOCATIONS

IGNITION/FUEL DELIVERY/TRANSMISSION KICK-DOWN DIAGNOSTIC

SOCKET (Continued)

			Page-Figure
X56	Connector, Throttle Valve Switch (3 pin)	Top left front of engine	206-1
X63	Connector, Steering Column Harness		
Y3	Kick-Down Solenoid	Right rear corner of transmission	214-3
Y8	Starting Valve	Top front of engine	206-2

ILLUMINATION: CENTER CONSOLE/INSTRUMENT CLUSTER

			Page-Figure
F1	Fuse/Relay Box	Behind right kick panel	218-4
N10	Combination Relay	Behind instrument cluster	216-1
W1	Main Ground	Behind dash, right of glove box	217-2
X6/1	Terminal Block, Circuit 58D	Behind upper console	
X49/2	Connector, Backup Lamp/ Starter Lock-Out Switch (8 pin)	Above steering column	215-3

LAMPS: MARKER/LICENSE/TRUNK

			Page-Figure
F1	Fuse/Relay Box	Behind right kick panel	218-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest	217-6
W2	Ground	Behind right headlamp unit	202-1
W6	Ground	Left rear corner of trunk	220-2
W7	Ground	Right rear wheel well, in trunk	220-4
W9	Ground	Behind left headlamp unit	203-1
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box	217-1

LAMPS: PARK/TAIL

			Page-Figure
F1	Fuse/Relay Box	Behind right kick panel	218-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest	217-6
W2	Ground	Behind right headlamp unit	202-1
W6	Ground	Left rear corner of trunk	220-2
W7	Ground	Right rear wheel well, in trunk	220-4
W9	Ground	Behind left headlamp unit	203-1

OUTSIDE HEATED MIRRORS

			Page-Figure
F1	Fuse/Relay Box	Behind right kick panel	218-4
W1	Main Ground	Behind dash, right of glove box	217-2
X(M21/2)	(5 pin)	In right door	219-5
X(R11)	(2 pin)	In left door	219-6

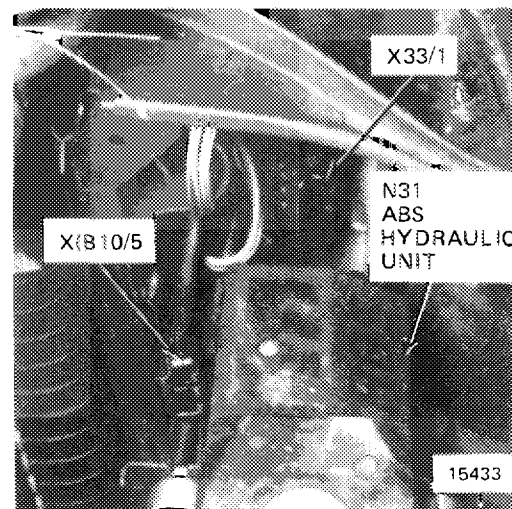


Figure 1 — Lower Right Front of Engine Compartment

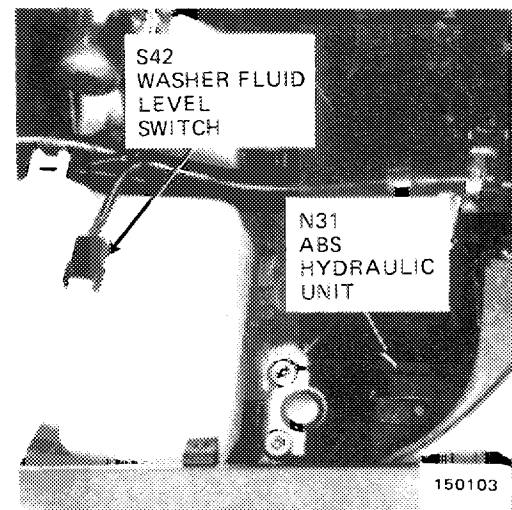


Figure 2 — Left Side of Engine Compartment

REVISIONS:

--	--	--	--	--	--	--	--	--	--

COMPONENT LOCATIONS

210

POWER DISTRIBUTION

			Page-Figure
F1	Fuse/Relay Box	Behind right kick panel	218-4
G1	Battery	Right rear corner of trunk	221-1
G2	Alternator	Top right front of engine	
K1	Over Voltage Protection Relay	In Fuse/Relay Box	
M1	Starter	Lower right rear of engine	
N16/4	Fuel Pump Relay	Behind glove box	218-2
S2/1	Ignition/Starter Switch	In dash panel, right of steering column	215-5
W10	Ground, Battery	Right rear corner of trunk, near battery	220-3
X4/2	Terminal Block, Circuit 30 (2 pin)	Top of right front wheel well	210-1
X4/3	Connector, Battery/Overload Protection, Circuit 30 (1 pin)	Above fuse/relay box, at right kick panel	218-4
X35	Terminal Block, Circuits 30/61 (Battery) (2 pin)	On right front shock tower	213-2
X51/1	Terminal Block, Circuits 87/30 (2 pin)	In fuse box, at right kick panel	

POWER WINDOWS

			Page-Figure
F1	Fuse/Relay Box	Behind right kick panel	218-4
M10/3	Left Front Power Window Motor	In left door	219-4
M10/4	Right Front Power Window Motor	In right door	
W1	Main Ground	Behind dash, right of glove box	217-2
X4/2	Terminal Block, Circuit 30 (2 pin)	Top of right front wheel well	210-1
X35	Terminal Block, Circuits 30/61 (Battery) (2 pin)	On right front shock tower	213-2

REAR DEFOGGER

			Page-Figure
F1	Fuse/Relay Box	Behind right kick panel	218-4
N11/1	Heated Rear Window Timer- Relay	Behind right kick panel	216-6
W1	Main Ground	Behind dash, right of glove box	217-2
W7	Ground	Right rear wheel well, in trunk	220-4
X(R1)	(2 pin)	Rear of right door, behind panel	218-6
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box	217-1

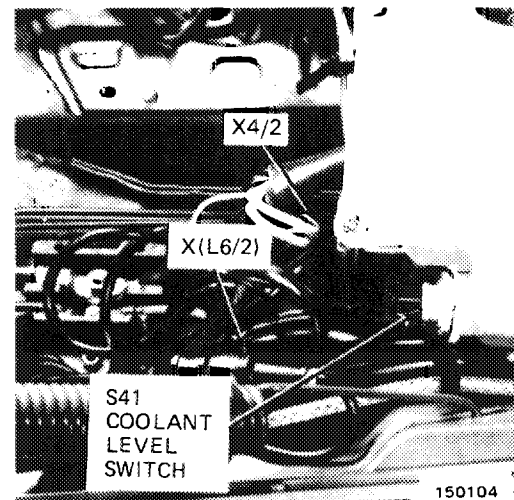


Figure 1 — Top of Right Front Wheel Well

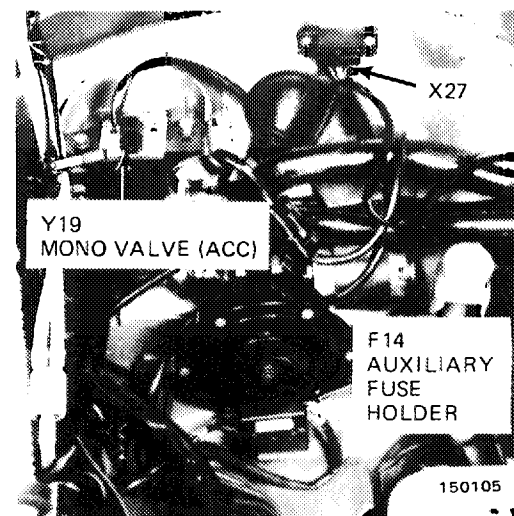


Figure 2 — Right Side of Engine Compartment

REVISIONS:

--	--

COMPONENT LOCATIONS

1/87

START

		Page-Figure
G1.....	Battery.....	Right rear corner of trunk 221-1
M1.....	Starter.....	Lower right rear of engine
N3.....	CIS-E Control Unit.....	Below right footrest..... 218-3
N8.....	Idle Speed Control Unit.....	Behind glove box..... 218-2
N16/4.....	Fuel Pump Relay.....	Behind glove box..... 218-2
S2/1.....	Ignition/Starter Switch.....	In dash panel, right of steering column..... 215-5
S16/1.....	Starter Lock-Out/Backup Lamp Switch.....	Left side of transmission..... 214-4
W10.....	Ground, Battery.....	Right rear corner of trunk, near battery..... 220-3
W11.....	Ground.....	Top of engine..... 207-1
X4/2.....	Terminal Block, Circuit 30 (2 pin).....	Top of right front wheel well..... 210-1
X26.....	Connector, Interior/Engine Wiring Harness (14 pin).....	Above right side of right footwell..... 217-4
X27.....	Connector, Starter Wiring Harness (3 pin).....	Right rear of engine compartment..... 210-2
X49/2.....	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin).....	Above steering column..... 215-3

STOP LAMPS/CRUISE CONTROL

		Page-Figure
F1.....	Fuse/Relay Box.....	Behind right kick panel..... 218-4
M16.....	Cruise Control Actuator.....	Right front of engine compartment..... 203-2
N4, N4/2.....	Cruise Control Amplifier.....	Between parking brake and brake support..... 215-4
N7.....	Exterior Lamp Failure Monitoring Unit.....	Below right footrest..... 217-6
N26.....	Anti-Theft Alarm Control Unit.....	Behind glove box..... 218-1
N30.....	ABS Control Unit.....	Below right footrest..... 218-3
R29.....	Cruise Control Reference Resistor.....	Attached to cruise control amplifier..... 215-4
S9.....	Stop Lamp Switch.....	Top of brake pedal support..... 217-2
W1.....	Main Ground.....	Behind dash, right of glove box..... 217-2
W2.....	Ground.....	Behind right headlamp unit..... 202-1
W6.....	Ground.....	Left rear corner of trunk..... 220-2
W7.....	Ground.....	Right rear wheel well, in trunk..... 220-4
X(S40).....	(6 pin).....	Behind left side of dash, above cruise control amplifier..... 215-4
X18.....	Connector, Interior/Taillamp Harness (14 pin).....	Behind dash, right of glove box..... 217-1
X20.....	Connector, Stop Lamp Switch (2 pin).....	Behind instrument cluster

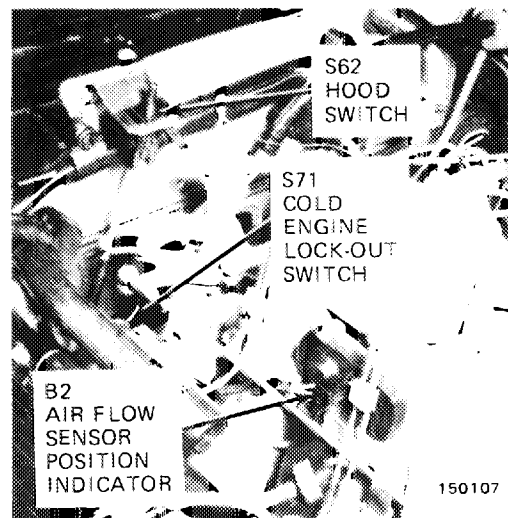


Figure 1 — Right Rear of Engine Compartment

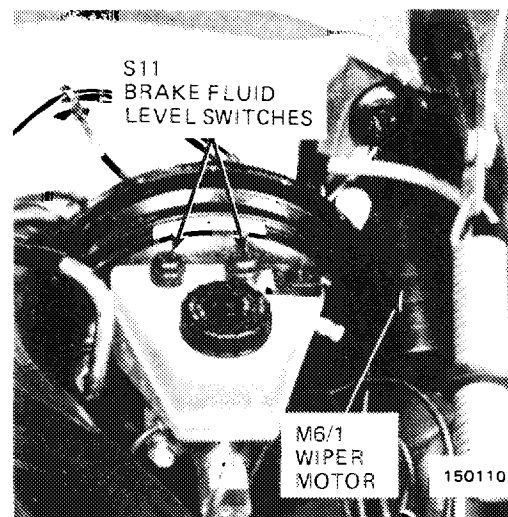


Figure 2 — Left Rear Corner of Engine Compartment

REVISIONS:

--	--

107.048