

COMPONENT LOCATIONS

212

STOP LAMPS/CRUISE CONTROL (Continued)

Page-Figure

X21/2 . . . .	Terminal Block, Stop Lamp Switch/E-Speedometer (2 pin) . . . . .	Behind instrument cluster . . . . .	216-1
X33/1 . . . .	Connector, Actuator/Cruise Control Extension (8 pin) . . . .	Behind right headlamp unit . . . . .	209-1
X49/2 . . . .	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin) . . . . .	Above steering column . . . . .	215-3

SUPPLEMENTAL RESTRAINT SYSTEM


Page-Figure

C1 . . . . .	SRS Energy Accumulator . . . . .	At base of left door pillar . . . . .	219-2
F1 . . . . .	Fuse/Relay Box . . . . .	Behind right kick panel . . . . .	218-4
N2/2 . . . .	Supplemental Restraint System (SRS) Control Unit . . . . .	In center console . . . . .	216-2
N24 . . . .	SRS Voltage Converter . . . . .	At base of left door pillar . . . . .	219-2
R12/1 . . . .	Left Front Emergency Tensioning Retractor (ETR) Squib . . . . .	At base of left door pillar . . . . .	219-2
R12/2 . . . .	Right Front Emergency Tensioning Retractor (ETR) Squib . . . . .	At base of right door pillar . . . . .	218-6
R12/3 . . . .	Driver Air Bag Squib . . . . .	Underside of steering wheel . . . . .	
S2/1 . . . .	Ignition/Starter Switch . . . . .	In dash panel, right of steering column . . . . .	215-5
S68/3 . . . .	Driver Seat Belt Buckle Switch, Air Bag/ETR . . . . .	Inside seat belt buckle . . . . .	
S68/4 . . . .	Front Passenger Seat Belt Buckle Switch, Air Bag/ETR . . . . .	Inside seat belt buckle . . . . .	
W1 . . . . .	Main Ground . . . . .	Behind dash, right of glove box . . . . .	217-2
X(N2/2) . . .	(10 pin) . . . . .	Behind dash, left of steering column . . . . .	215-4
X28/5 . . . .	Connector, Air Bag Squib Slip Ring (2 pin) . . . . .	Behind left side of dash panel, at base of steering column . . . . .	215-6
X29/9 . . . .	Test Connection/SRS Plug Connection (10 pin) . . . . .	Right footwell area . . . . .	221-3
X92 . . . . .	Test Connection for Diagnosis (8 pin) . . . . .	Left side of engine compartment . . . . .	221-2

TURN SIGNAL/HAZARD LAMPS


Page-Figure

F1 . . . . .	Fuse/Relay Box . . . . .	Behind right kick panel . . . . .	218-4
N7 . . . . .	Exterior Lamp Failure Monitoring Unit . . . . .	Below right footrest . . . . .	217-6

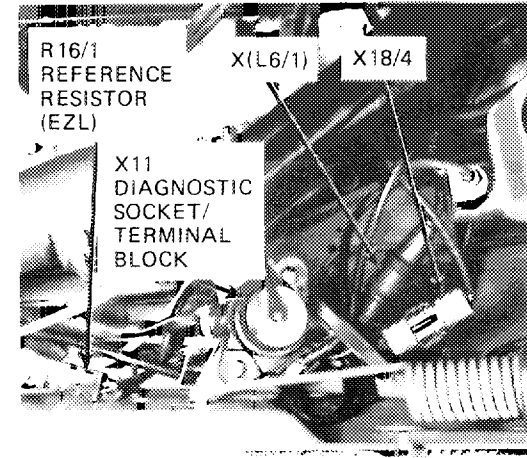

150111

Figure 1 — Left Side of Engine Compartment

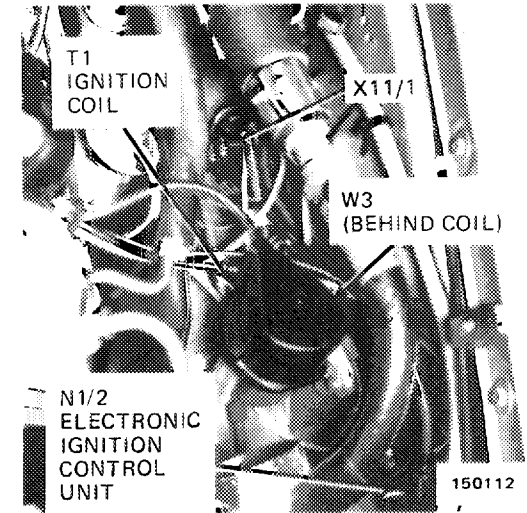

150112

Figure 2 — Left Side of Engine Compartment

REVISIONS:

--

107.048

1/87

## COMPONENT LOCATIONS

### TURN SIGNAL/HAZARD LAMPS (Continued)

		Page-Figure
N9	Turn Signal/Hazard Warning Flasher Relay	Behind instrument cluster . . . . . 216-1
S4	Combination Switch	Upper left side of steering column
W1	Main Ground	Behind dash, right of glove box . . . . . 217-2
W2	Ground	Behind right headlamp unit . . . . . 202-1
W6	Ground	Left rear corner of trunk . . . . . 220-2
W7	Ground	Right rear wheel well, in trunk . . . . . 220-4
W9	Ground	Behind left headlamp unit . . . . . 203-1
X18	Connector, Interior/Taillamp Harness (14 pin)	Behind dash, right of glove box . . . . . 217-1
X49/2	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin)	Above steering column . . . . . 215-3
X63	Connector, Steering Column Harness (14 pin)	Under steering column . . . . . 215-2

### WARNING INDICATORS/GAUGES/CLOCK

		Page-Figure
B4	Fuel Level Sensor	Under convertible top storage area . . . . . 219-3
B5	Oil Pressure Sensor	On oil filter housing . . . . . 204-1
B10/5	Outside Temperature Sensor	Front of car, near license plate bracket . . . . . 201-2
B13	Coolant Temperature Gauge Sensor	Top front of engine, on water outlet . . . . . 205-2
F1	Fuse/Relay Box	Behind right kick panel . . . . . 218-4
G1	Battery	Right rear corner of trunk . . . . . 221-1
L2	Vehicle Speed Sensor	Left rear of transmission . . . . . 214-4
M6/1	Wiper Motor	Left rear of engine compartment . . . . . 211-2
N1/2	Electronic Ignition Control Unit (EIZL)	Left side of engine compartment . . . . . 212-2
N3	CIS-E Control Unit	Below right footrest . . . . . 218-3
N4, N4/2	Cruise Control Amplifier	Between parking brake and brake support . . . . . 215-4
N7	Exterior Lamp Failure Monitoring Unit	Below right footrest . . . . . 217-6
N8	Idle Speed Control Unit	Behind glove box . . . . . 218-2
N16/4	Fuel Pump Relay	Behind glove box . . . . . 218-2
N30	ABS Control Unit	Below right footrest . . . . . 218-3
N31	ABS Hydraulic Unit (MY87)	Right front corner of engine compartment . . . . . 209-1
N31	ABS Hydraulic Unit (MY86)	Left front corner of engine compartment . . . . . 209-2
S10/1	Left Front Brake Pad Wear Sensor	In left front brake pad
S10/2	Right Front Brake Pad Wear Sensor	In right front brake pad

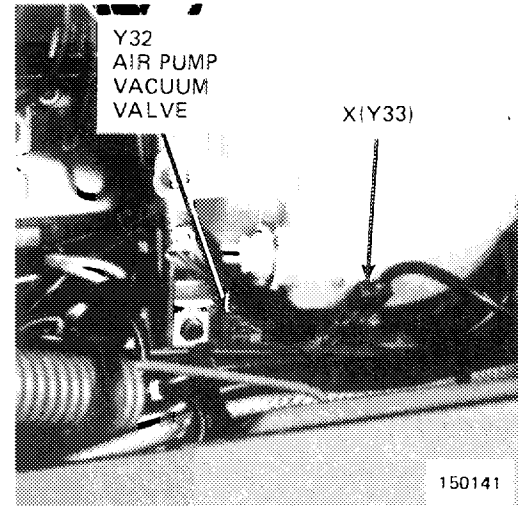


Figure 1 — Right Side of Engine Compartment

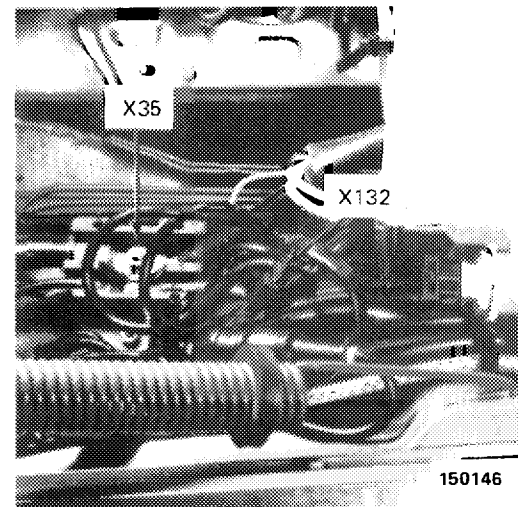


Figure 2 — Top of Right Front Wheel Well

REVISIONS:

--	--

## COMPONENT LOCATIONS

213/1

### WARNING INDICATORS/GAUGES/CLOCK (Continued)



Page-Figure

S11 . . . . .	Brake Fluid Level Switch . . . . .	Left rear corner of engine compartment, top of brake fluid reservoir . . . . .	211-2
S12 . . . . .	Parking Brake Switch . . . . .	On parking brake support	
S41 . . . . .	Coolant Level Switch . . . . .	Right wheel well, bottom of coolant reservoir . . . . .	210-1
S42 . . . . .	Washer Fluid Level Switch . . . . .	Left side of engine compartment, top of washer fluid reservoir . . . . .	209-2
S43 . . . . .	Oil Level Switch . . . . .	On side of oil pan . . . . .	214-2
W1 . . . . .	Main Ground . . . . .	Behind dash, right of glove box . . . . .	217-2
W2 . . . . .	Ground . . . . .	Behind right headlamp unit . . . . .	202-1
W7 . . . . .	Ground . . . . .	Right rear wheel well, in trunk . . . . .	220-4
W10 . . . . .	Ground, Battery . . . . .	Right rear corner of trunk, near battery . . . . .	220-3
X(B10/5) . . . . .	(2 pin) . . . . .	Behind right headlamp unit . . . . .	209-1
X3 . . . . .	Terminal Block, E-Speedometer (2 pin) . . . . .	Behind instrument cluster . . . . .	216-1
X4/3 . . . . .	Connector, Battery/Overload Protection, Circuit 30 (1 pin) . . . . .	Above fuse/relay box, at right kick panel . . . . .	218-4
X11 . . . . .	Diagnostic Socket/Terminal Block . . . . .	Top of left front wheel well. . . . .	212-1
X18 . . . . .	Connector, Interior/Taillamp Harness (14 pin) . . . . .	Behind dash, right of glove box . . . . .	217-1
X18/4 . . . . .	Connector, Left Front Brake Pad Sensor (2 pin) . . . . .	Left side of engine compartment . . . . .	212-1
X26 . . . . .	Connector, Interior/Engine Wiring Harness (14 pin) . . . . .	Above right side of right footwell . . . . .	217-4
X27 . . . . .	Connector, Starter Wiring Harness (3 pin) . . . . .	Right rear of engine compartment . . . . .	210-2
X49/2 . . . . .	Connector, Backup Lamp/Starter Lock-Out Switch (8 pin) . . . . .	Above steering column . . . . .	215-3
X51/1 . . . . .	Terminal Block, Circuits 87/30 (2 pin) . . . . .	In fuse box, at right kick panel	
X132 . . . . .	Connector, Right Front Brake Pad Wear Sensor (2 pin) . . . . .	Right rear corner of engine compartment . . . . .	213-2

### WARNING SYSTEM

Page-Figure

F1 . . . . .	Fuse/Relay Box . . . . .	Behind right kick panel . . . . .	218-4
M6/1 . . . . .	Wiper Motor . . . . .	Left rear of engine compartment. . . . .	211-2
N2/4 . . . . .	Warning Module . . . . .	Above brake pedal . . . . .	215-4
N11/5 . . . . .	Dome Lamp Timer-Relay . . . . .	At right kick panel . . . . .	217-3
S8/1 . . . . .	Warning Buzzer Switch . . . . .	In ignition switch assembly. . . . .	215-5
S10/1 . . . . .	Left Front Brake Pad Wear Sensor . . . . .	In left front brake pad	

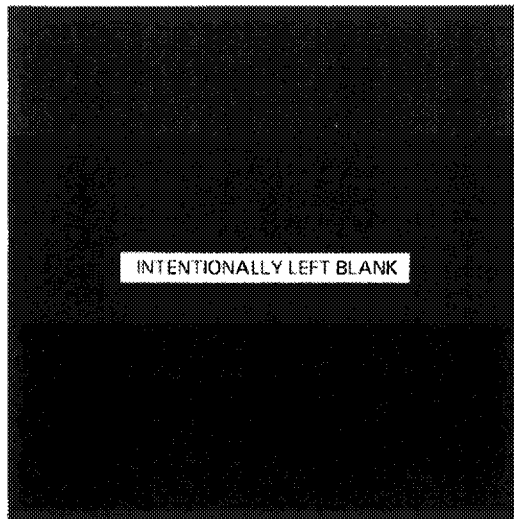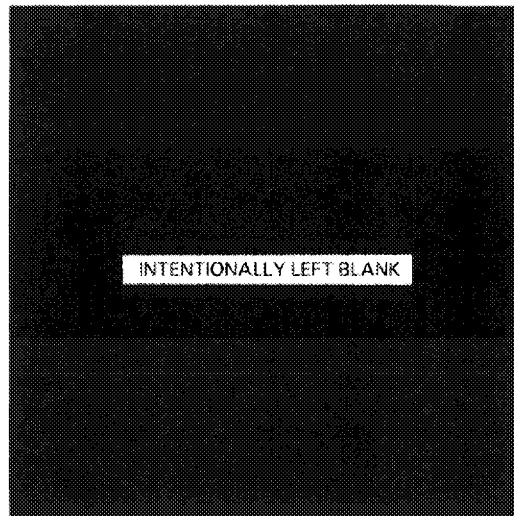

REVISIONS:

107.048

3/88

## COMPONENT LOCATIONS

3/88



### WARNING SYSTEM (Continued)

		Page-Figure
S12 . . . . .	Parking Brake Switch . . . . .	On parking brake support
S17/13 . . . . .	Left Door Switch . . . . .	In left door jamb
S17/14 . . . . .	Right Door Switch . . . . .	In right door jamb
S68/1 . . . . .	Driver Seat Belt Buckle Switch . . . . .	In left seat belt buckle
W1 . . . . .	Main Ground . . . . .	Behind dash, right of glove box . . . . . 217-2
X(68/1) . . . . .	(2 pin) . . . . .	Under left seat
X18/4 . . . . .	Connector, Left Front Brake Pad Sensor (2 pin) . . . . .	Left side of engine compartment . . . . . 212-1

### WIPER/WASHER

		Page-Figure
F1 . . . . .	Fuse/Relay Box . . . . .	Behind right kick panel . . . . . 218-4
M5/1 . . . . .	Windshield Washer Pump . . . . .	Below washer fluid reservoir . . . . . 207-2
M6/1 . . . . .	Wiper Motor . . . . .	Left rear of engine compartment. . . . . 211-2
N12 . . . . .	Interval Wiper Relay . . . . .	Above steering column . . . . . 215-3
R2/2 . . . . .	Left Heated Windshield Washer Nozzle . . . . .	Underside of hood, at left washer nozzle
R2/3 . . . . .	Right Heated Windshield Washer Nozzle. . . . .	Underside of hood, at right washer nozzle . . . . . 208-1
S4 . . . . .	Combination Switch . . . . .	Upper left side of steering column
W1 . . . . .	Main Ground . . . . .	Behind dash, right of glove box . . . . . 217-2
W2 . . . . .	Ground . . . . .	Behind right headlamp unit . . . . . 202-1
X63 . . . . .	Connector, Steering Column Harness (14 pin) . . . . .	Under steering column . . . . . 215-2

107.048

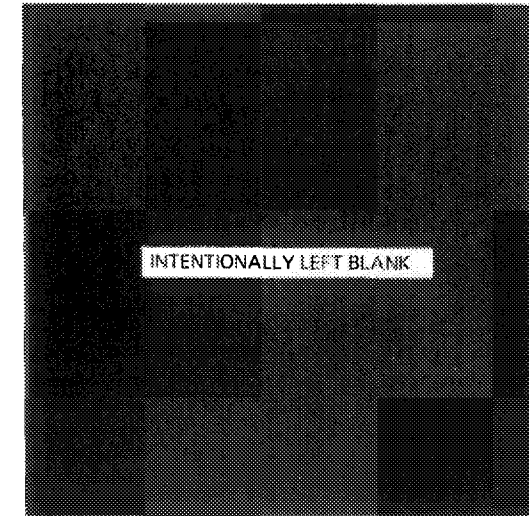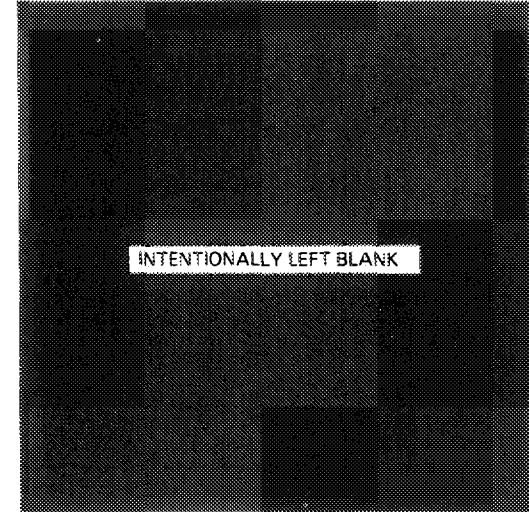

213/2

REVISIONS:

--

# COMPONENT LOCATIONS

214

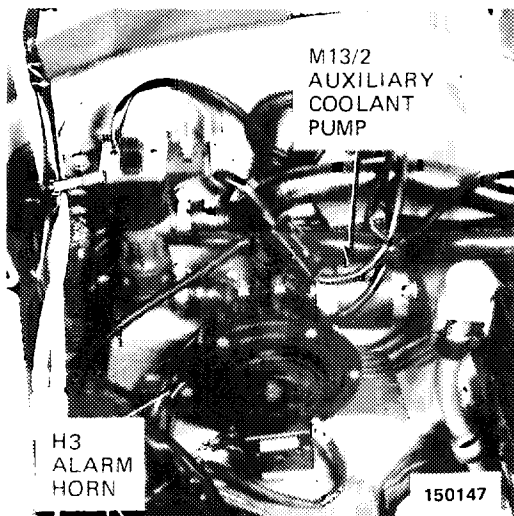


Figure 1 — Right Rear of Engine Compartment

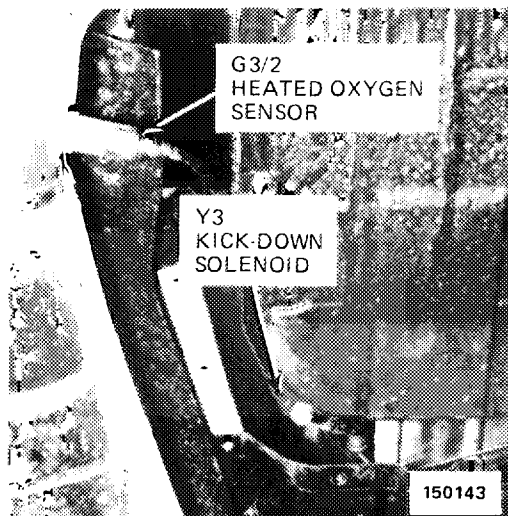


Figure 3 — Underside of Transmission

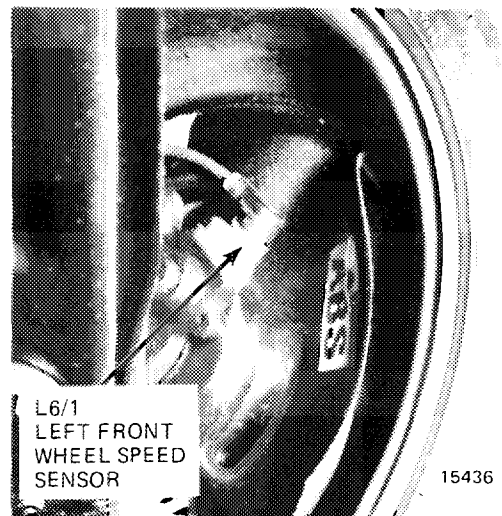


Figure 5 — Inside of Left Front Wheel

107.048

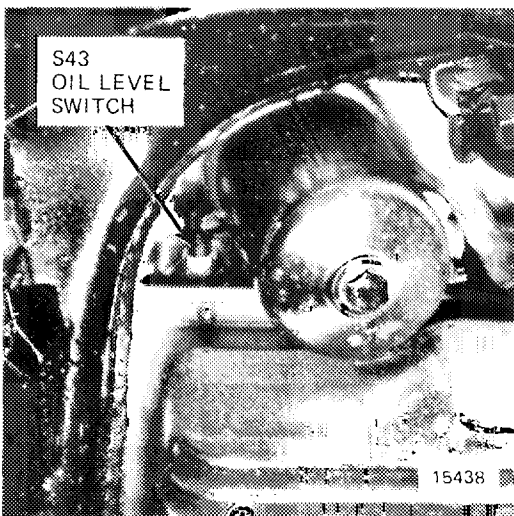


Figure 2 — Lower Right Front of Engine

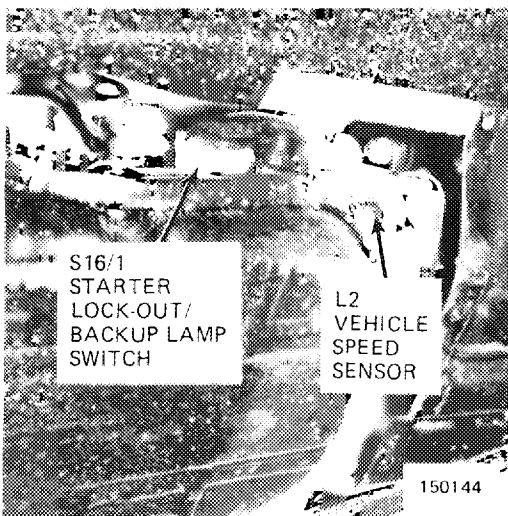


Figure 4 — Underside of Transmission

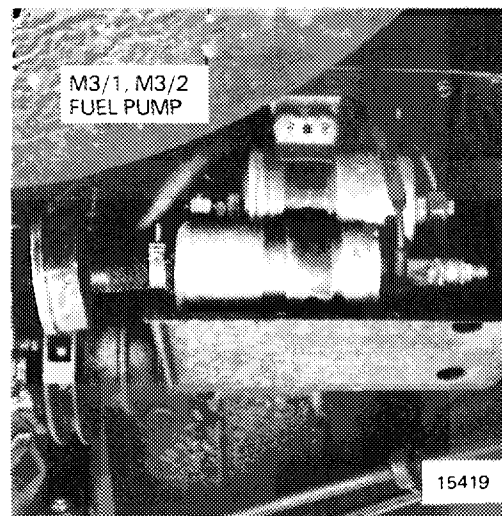


Figure 6 — Underside of Car, Near Differential

REVISIONS:

1/87

### COMPONENT LOCATIONS

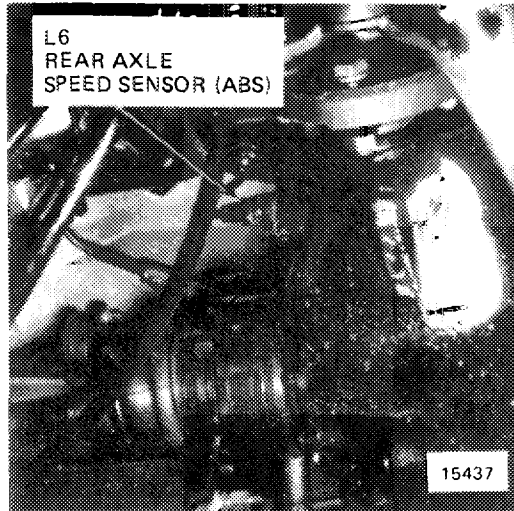


Figure 1 - Rear Underside of Car

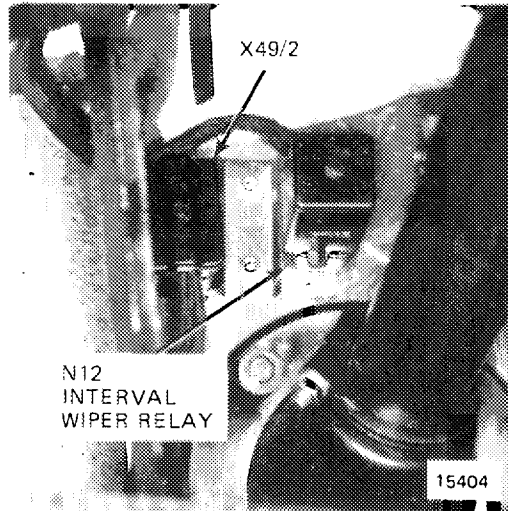


Figure 3 - Behind Dash Panel, Above Steering Column

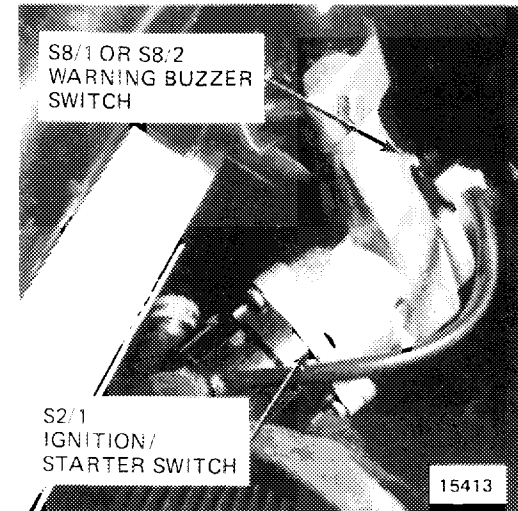


Figure 5 - Behind Dash Panel, Right of Steering Column

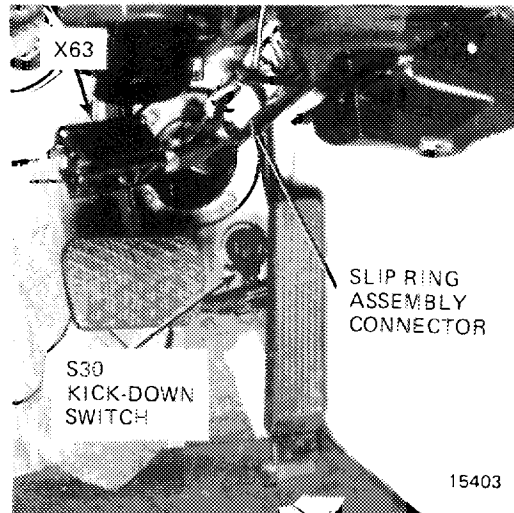


Figure 2 - Left Footwell Area

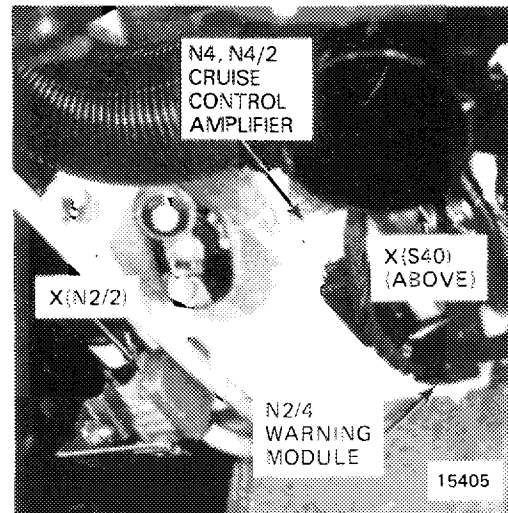


Figure 4 - Behind Dash Panel, Above Steering Column

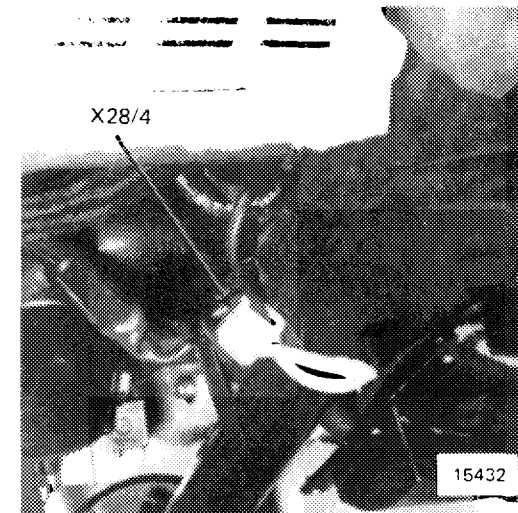


Figure 6 - Behind Left Side of Dash Panel

<p>REVISIONS:</p>   
-------------------------------

# COMPONENT LOCATIONS

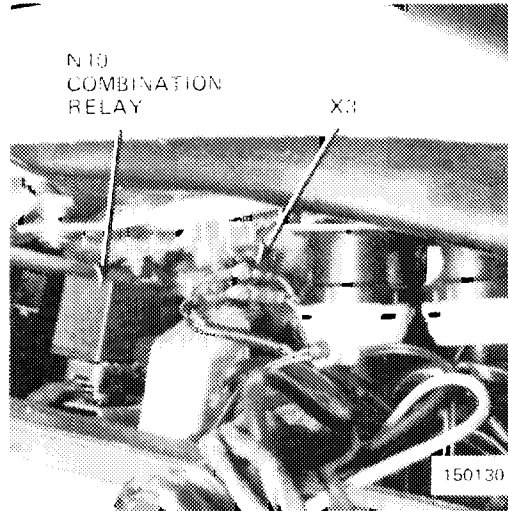


Figure 1 -- Behind Instrument Cluster

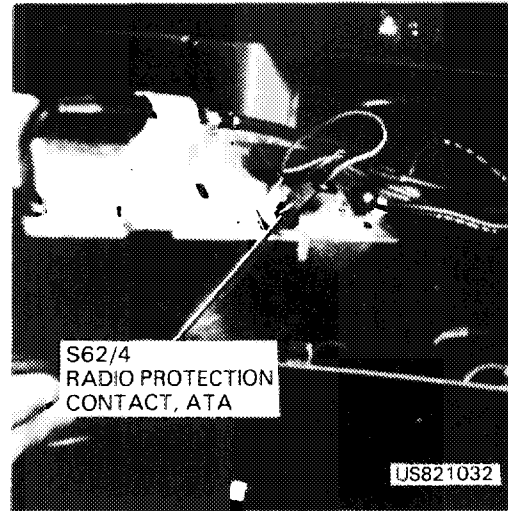


Figure 3 -- Front of Console, Behind Radio (MY 87)

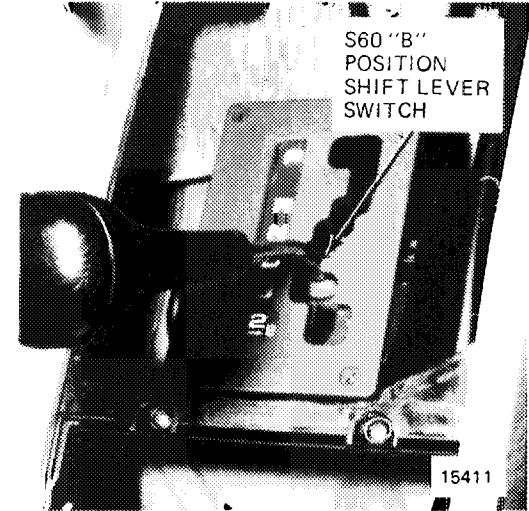


Figure 5 -- Center Console

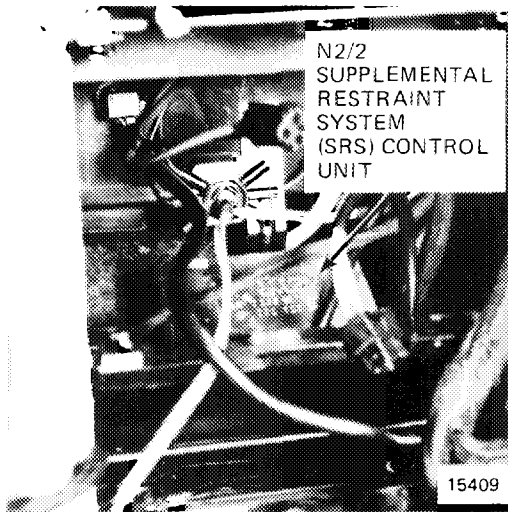


Figure 2 -- Behind Front of Console

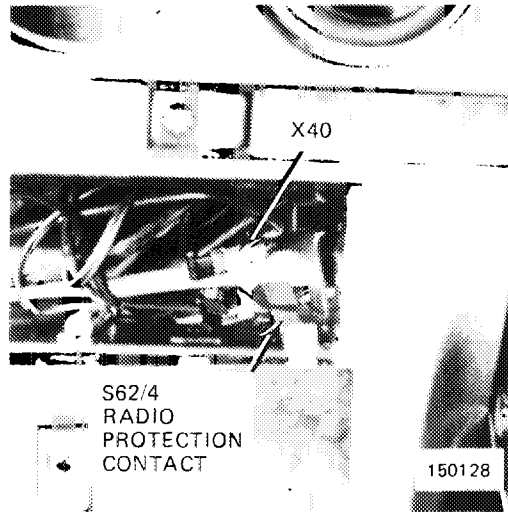


Figure 4 -- Front of Console (Radio Removed)

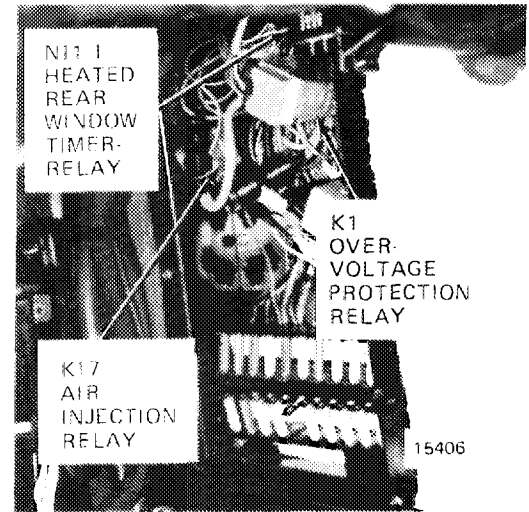


Figure 6 -- Right Kick Panel

REVISIONS:

## COMPONENT LOCATIONS

1-87

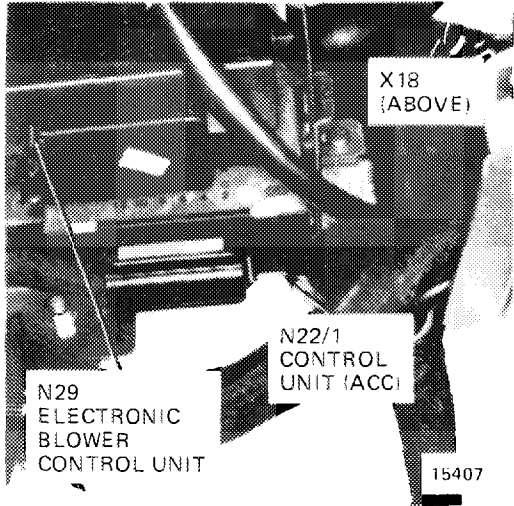


Figure 1 — Behind Glove Box

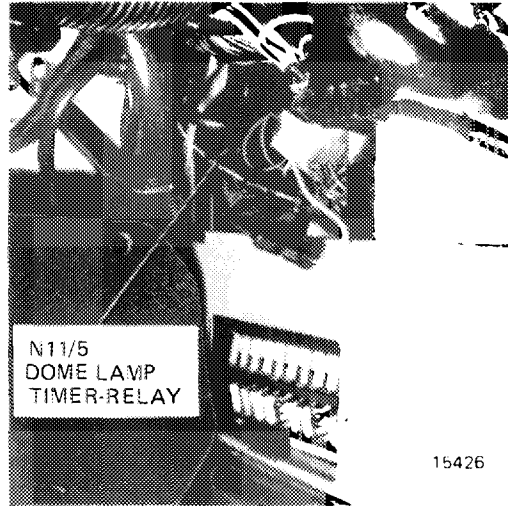


Figure 3 — Right Kick Panel

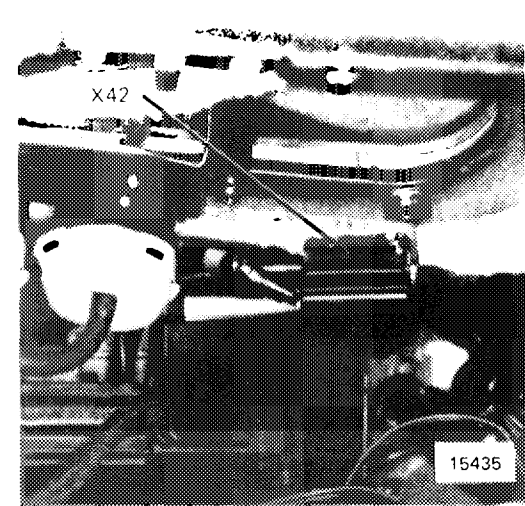


Figure 5 — Behind Glove Box

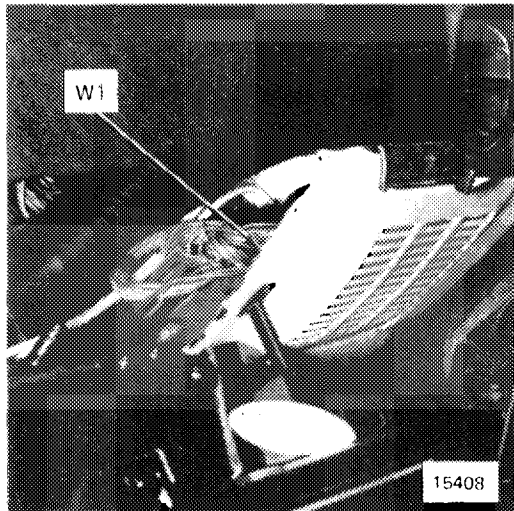


Figure 2 — Right Side of Glove Box

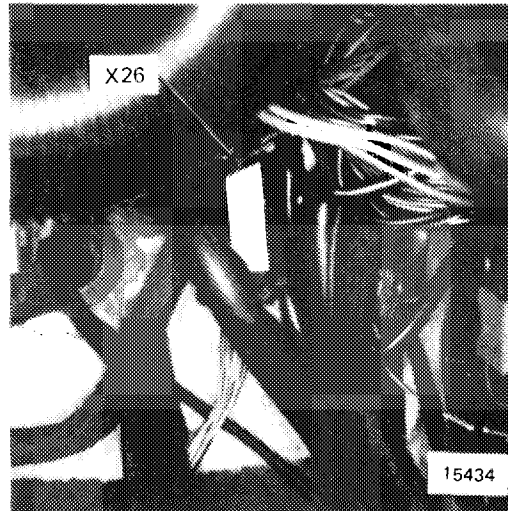


Figure 4 — Behind Right Side of Dash Panel, Forward of Kick Panel

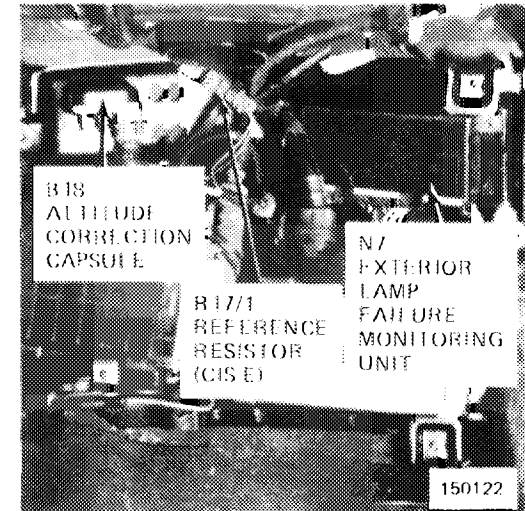


Figure 6 — Right Footwell Area

107.048

REVISIONS:

--	--



COMPONENT LOCATIONS

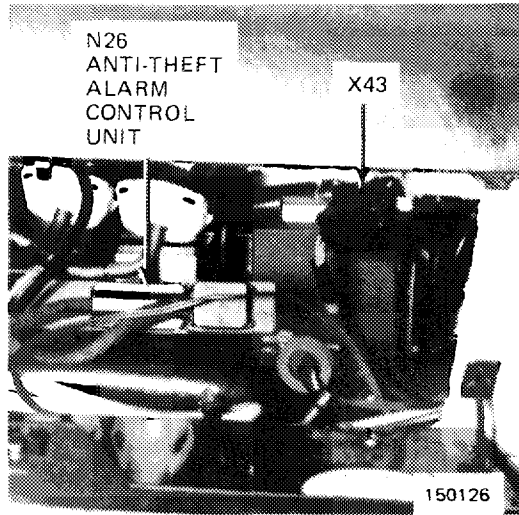


Figure 1 — Behind Glove Box

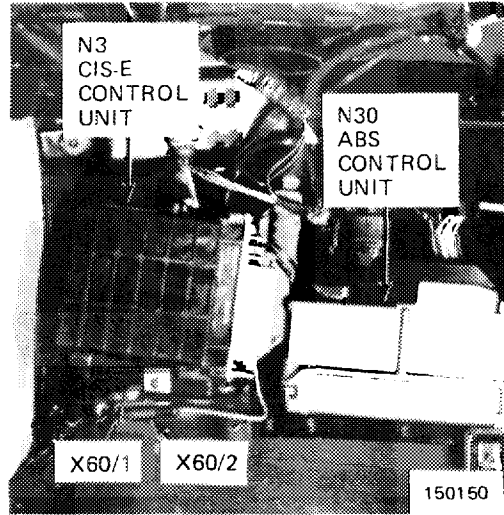


Figure 3 — Right Footwell Area

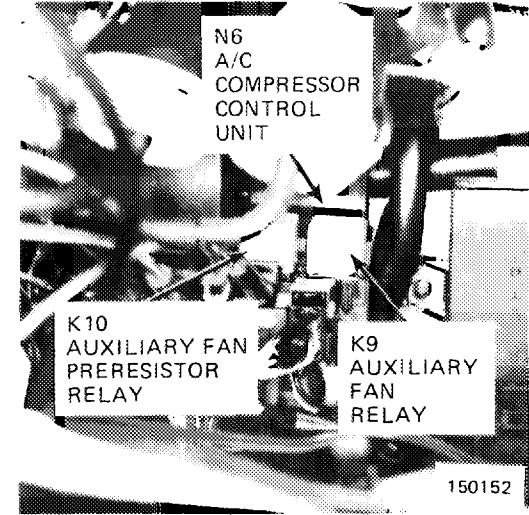


Figure 5 — Behind Glove Box

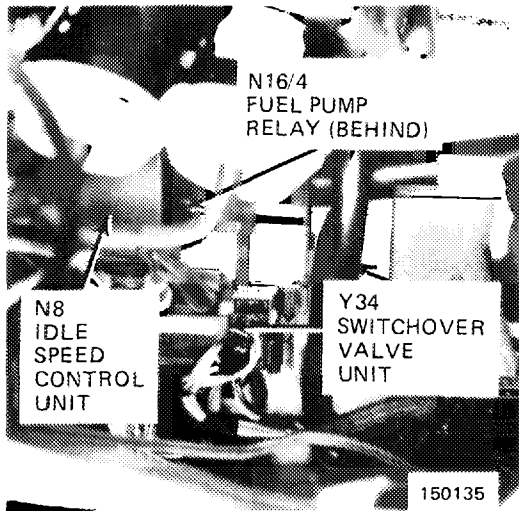


Figure 2 — Behind Glove Box

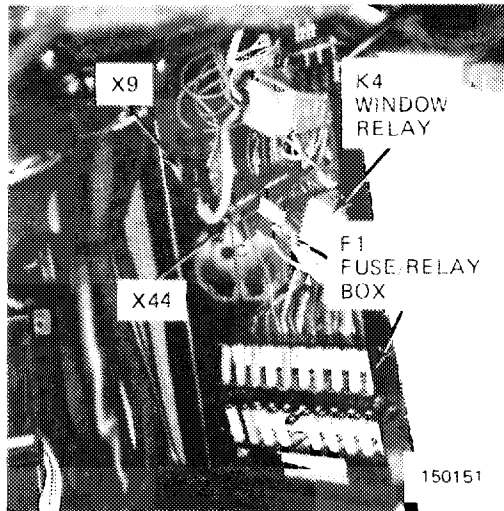


Figure 4 — Right Kick Panel

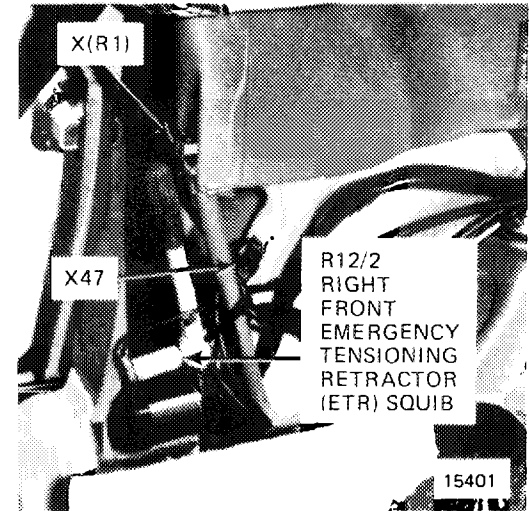


Figure 6 — Rear of Right Door

REVISIONS:

--

### COMPONENT LOCATIONS

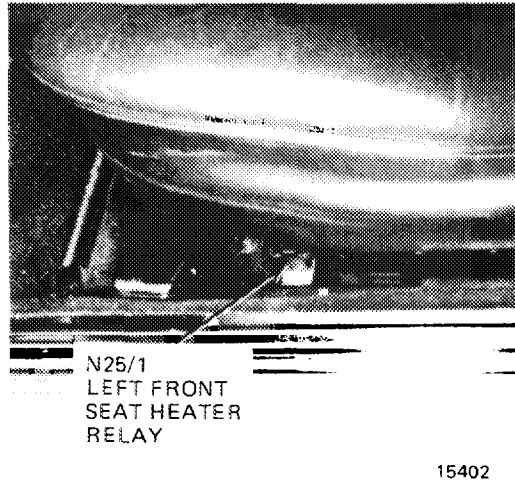


Figure 1 — Left Door Sill

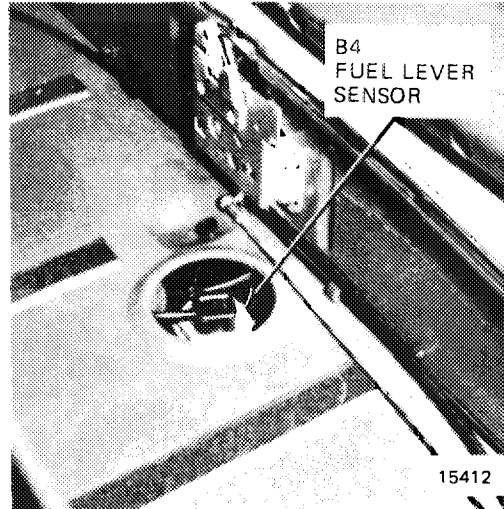


Figure 3 — Convertible Top Storage Area

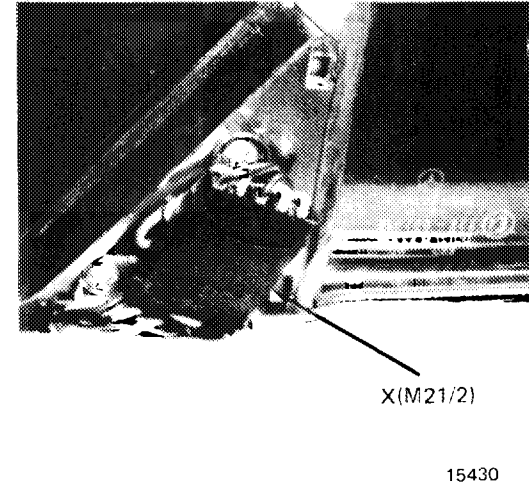


Figure 5 — Right Door

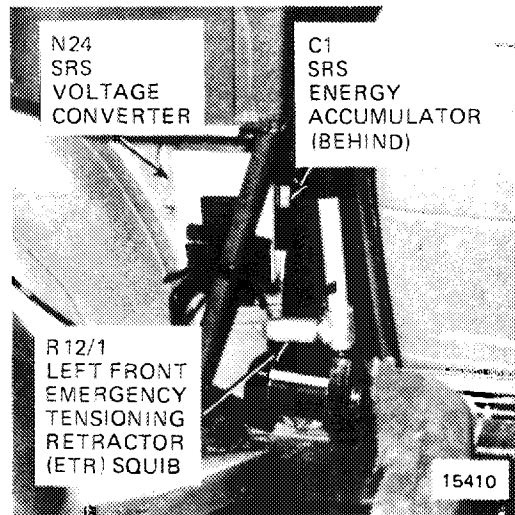


Figure 2 — Rear of Left Door

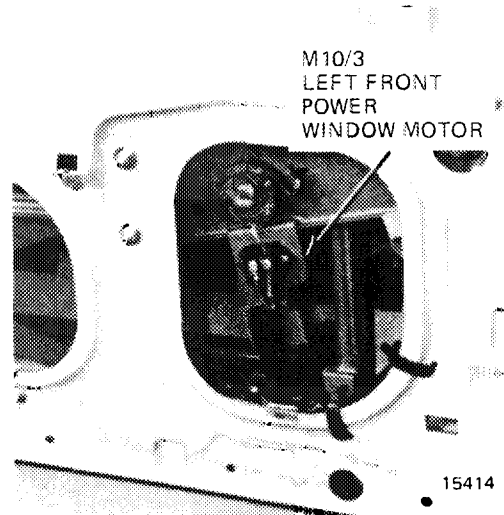


Figure 4 — Left Door

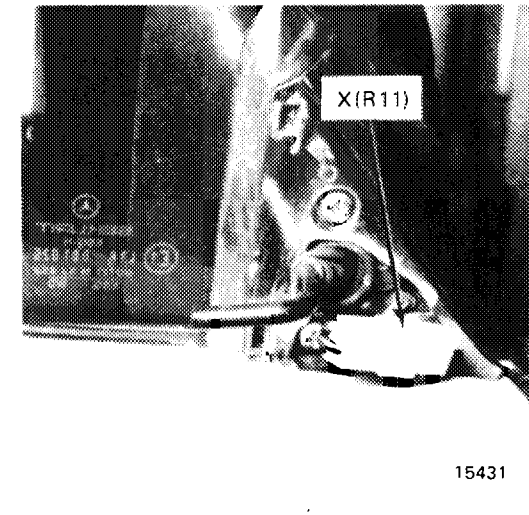


Figure 6 — Left Door

REVISIONS:

--

COMPONENT LOCATIONS

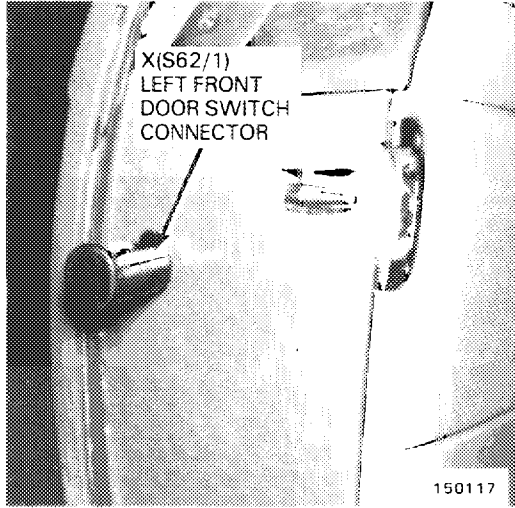


Figure 1 — End of Left Door

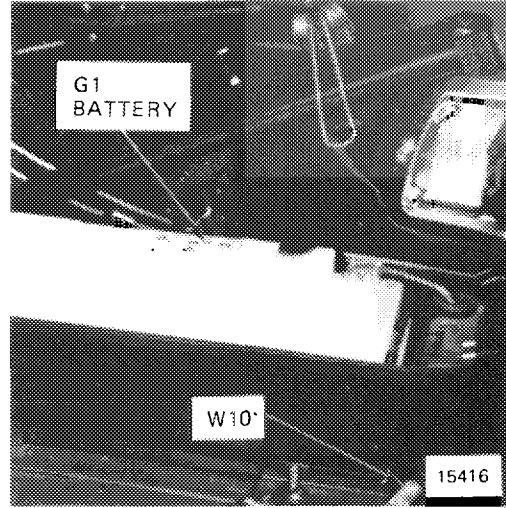


Figure 3 — Right Side of Trunk

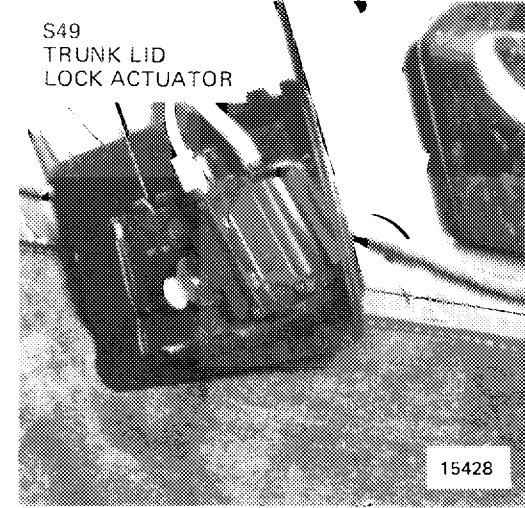


Figure 5 — Center of End Panel

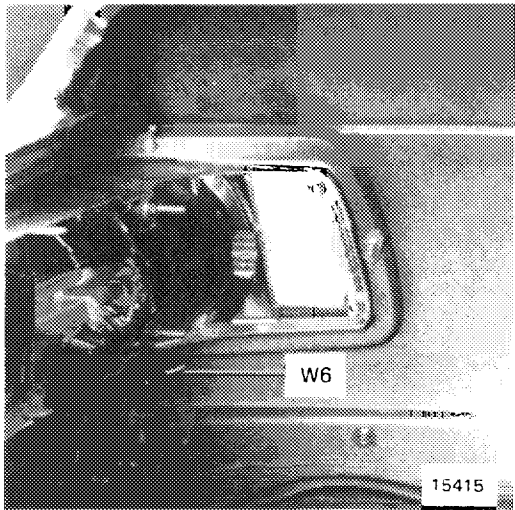


Figure 2 — Left Rear Corner of Trunk

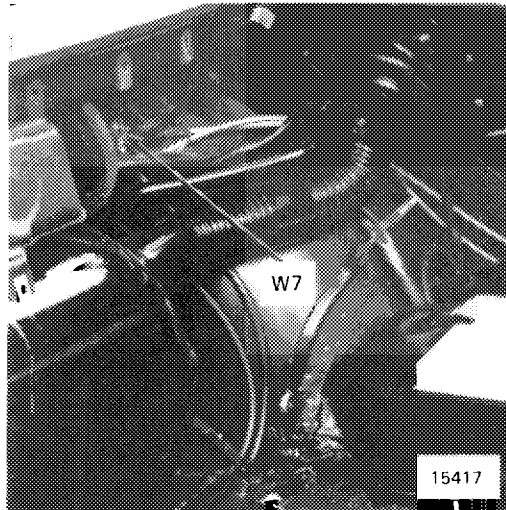


Figure 4 — Right Front of Trunk

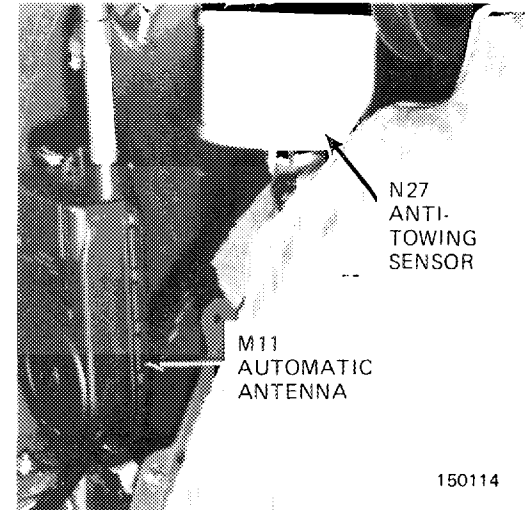


Figure 6 — Left Front Corner of Trunk

REVISIONS:

--

COMPONENT LOCATIONS

1/87

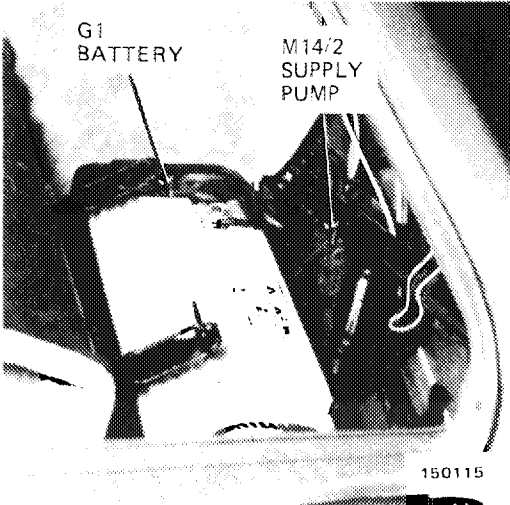


Figure 1 — Right Rear Corner of Trunk

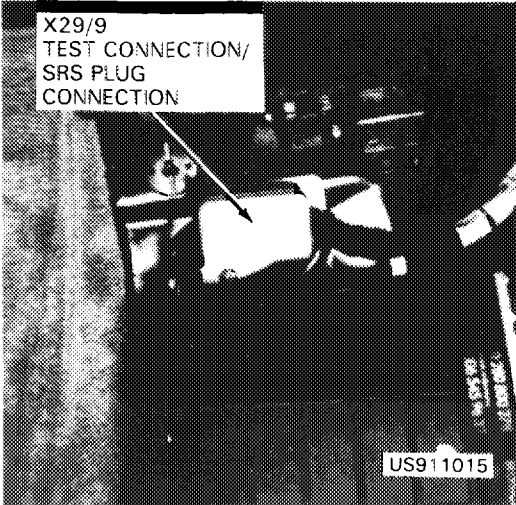


Figure 3 — Right Footwell Area

107.048

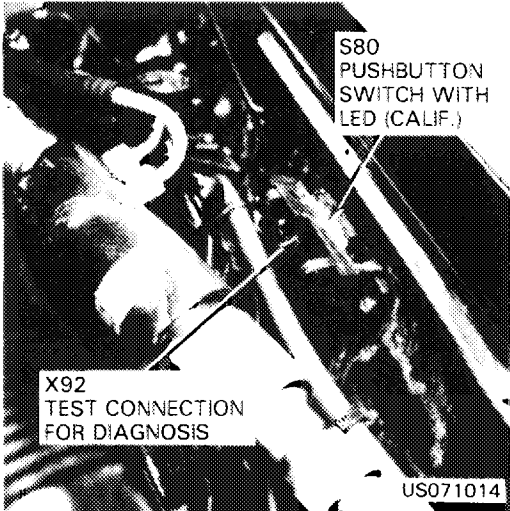


Figure 2 — Left Side of Engine Compartment

221

REVISIONS:
------------