

14–250 Removal and installation of air pump

Adjusting values of V-belt (KG scale on measuring instrument)

V-belt	New V-belts	Used V-belts
Air pump	30	20–25

Special tool

Measuring instrument (Krikrit)




001 589 69 21 00

Note


For handling of measuring instrument refer to operating instructions.

Specified adjusting data refer to KG scale of measuring instrument (arrow).

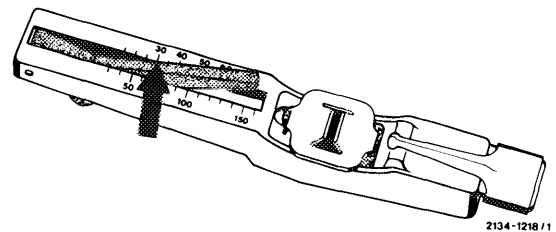



Removal

1 Separate coupling (arrow) for air pump and remove line from cable straps.

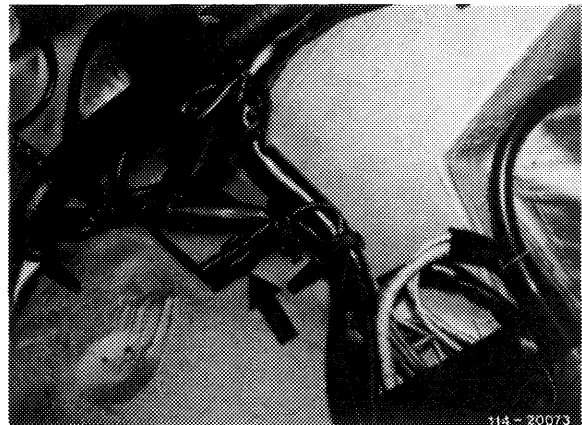

- 2 Remove contour hoses.
- 3 Loosen fastening screws (1 and 2) and unscrew.
- 4 Take off V-belt and remove air pump.

Note: Remove and install electromagnetic clutch (14–260).

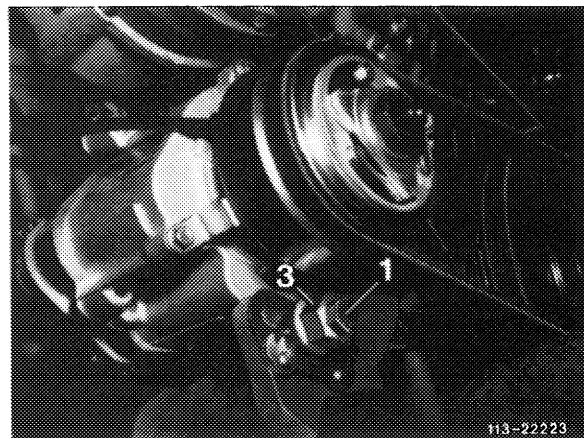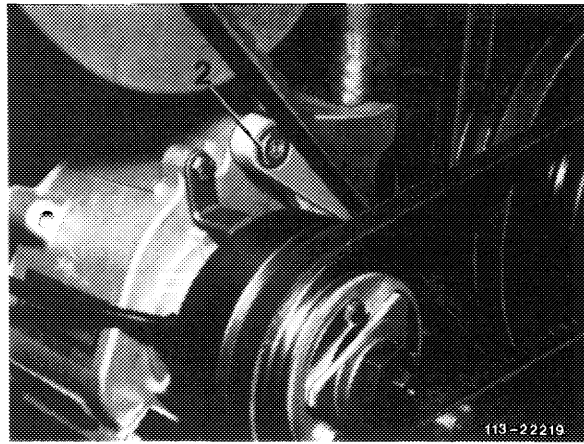

Installation

- 5 For installation proceed vice versa.
- 6 Tension V-belt with tensioning wheel (3) and tighten fastening screws (1 and 2).