


Renewing

For renewing holder, remove
fuel reservoir (07.3–270),
fuel filter (07.3–275),
fuel pump (07.3–280).

The holder has been modified to improve installation
position and to increase rigidity.

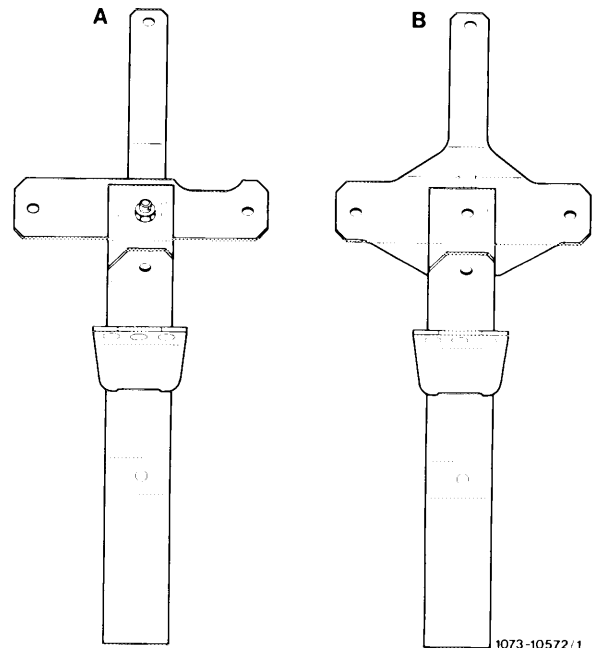

A 1st version
B 2nd version

1073-10572/1