


### Removal

---

- 1 Pull-off electric connection for temperature sensor.
- 2 Disconnect two rubber straps (arrows).
- 3 Unscrew fastening nut on vibration dampening buffer.
- 4 Lift off air filter while pulling off contour hose for crankcase breather.

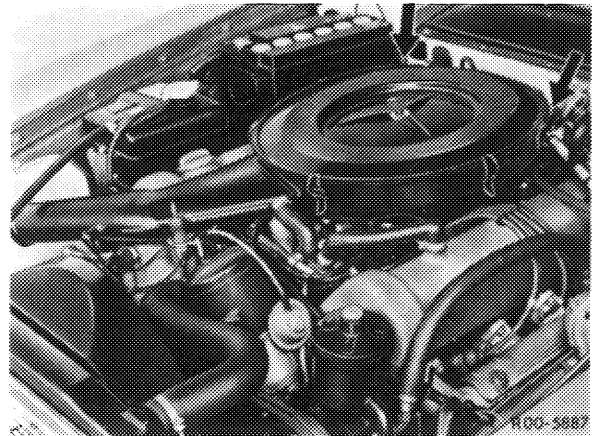

### Installation

---

- 5 Install air filter in vice versa sequence. Remove air filter cover and pay attention to correct seat of sealing ring between throttle valve housing and air filter.

- 1 Wing nut
- 2 Washer
- 3 Air filter cover
- 4 Air filter cartridge
- 5 Rubber ring
- 6 Air filter lower half
- 7 Rubber sealing ring
- 8 Vibration dampening buffer
- 9 Snap ring
- 10 Fastening nut

