

14–455 Renewing intake manifold (intake manifold removed)

- 1 Remove and install intake manifold (14–450).
- 2 Remove and install injection valves and insulating sleeves (07.3–215).
- 3 Remove and install mixture regulator with air guide housing (07.3–225).
- 4 Unscrew all unscrewable parts on removed intake manifold and mount on new intake manifold with new gaskets.
- 5 Unscrew intake manifold upper half from intake manifold lower half. For this purpose, loosen vacuum line for brake unit on intake manifold lower half, then unscrew fastening screws and pull from rubber adaptors.
- 6 Mount intake manifold lower half with new rubber adaptors to intake manifold upper half.

Attention!

The intake manifold lower half has a different shape as that of engine 117.960 (5.0) and can therefore not be installed in this engine.