


### Removal

---

- 1 Compress spreader clip (arrow) behind accelerator pedal and pull out.

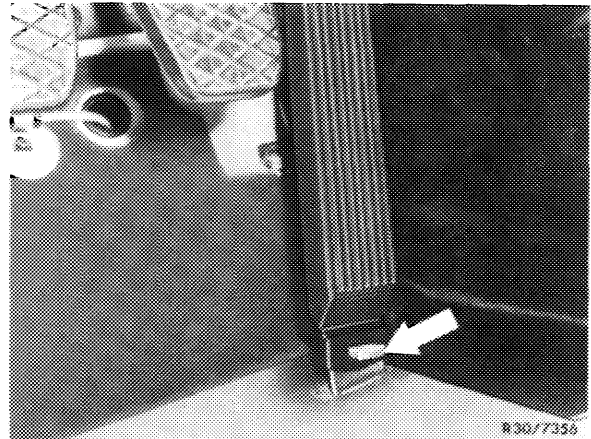

### Installation

---

- 2 During installation, make sure that the spreader clip is reliably engaging.