

## 05-440 Removal and installation of return sprocket

---

Tightening torques		Nm
Crankshaft end bolt front	with 3 diaphragm springs <sup>1)</sup>	270-330
	with 4 diaphragm springs <sup>1)</sup>	370-400

---

<sup>1)</sup> See Note 03-324.

### Special tools

---

Torque wrench, single-arm, 3/4" drive,  
150-800 Nm



001 589 74 21 00

---

 
Socket insert 27 mm, 1/2" drive



001 589 65 09 00

---


Detent  
(starter motor flange left or right)



116 589 01 40 00

---


Allen screwdriver with cross-bar handle  
6 mm, 440 mm long

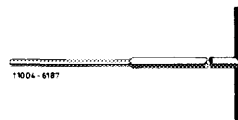

116 589 03 07 00

---

 Sleeve for radial sealing ring front



110 589 07 61 00

---

### Conventional tool

---

Adapter 3/4" inside to  
1/2" outside drive

e.g. Hazet, D-5630 Remscheid  
Order No. 1058 R1

---

### Note

---



On engine 116 with duplex chain the intermediate sprocket can only be renewed after removal of the left-hand cylinder head.

The bearing bushings for the return sprocket in the crankcase have fallen away as from December 1984 and those in the timing case cover as from March 1985.

## Removal

---

- 1 Remove timing case cover (01–210).
- 2 Remove slide rail (87).
- 3 Slacken timing chain on intermediate sprocket (78) by turning left-hand camshaft.
- 4 Remove intermediate sprocket (78).
- 5 Remove return sprocket (1).
- 6 If required, pull out bearing bushing in crankcase by means of internal puller.
- 7 Pull out bearing bushing in timing case cover with internal puller.

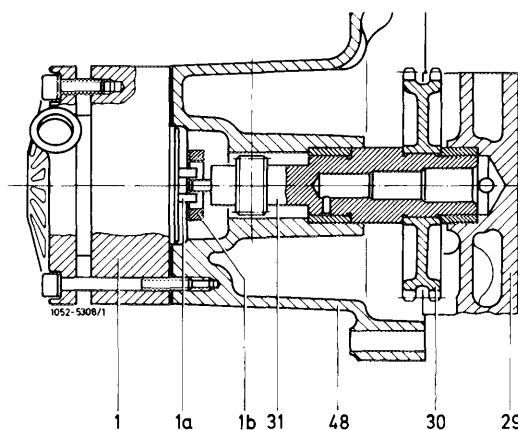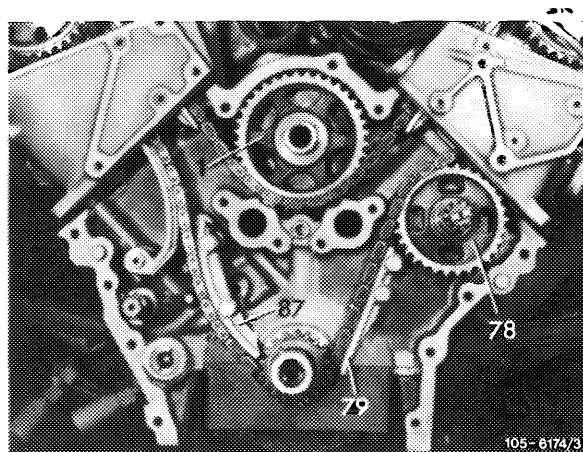

## Installation

---

- 8 Press bearing bushing into crankcase and timing case cover with lubricating groove at the bottom (arrow).
- 9 Lubricate bearing bushing in crankcase with oil and introduce return sprocket.
- 10 Install intermediate sprocket (05–434).
- 11 For further installation proceed vice versa.

