
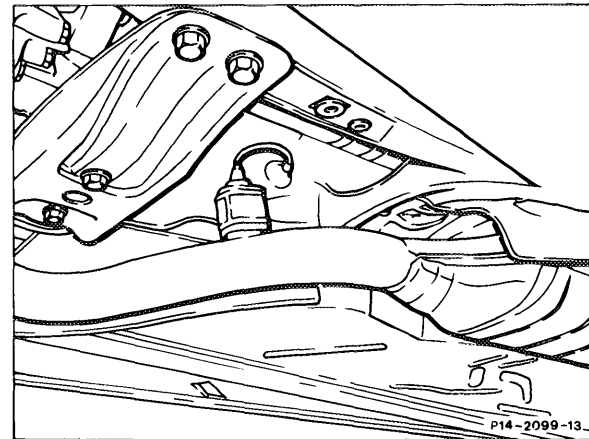
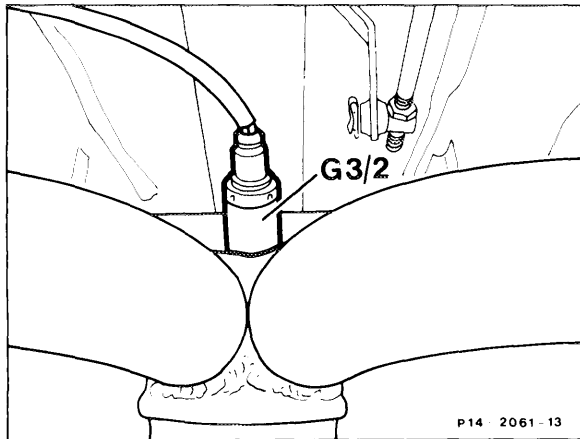
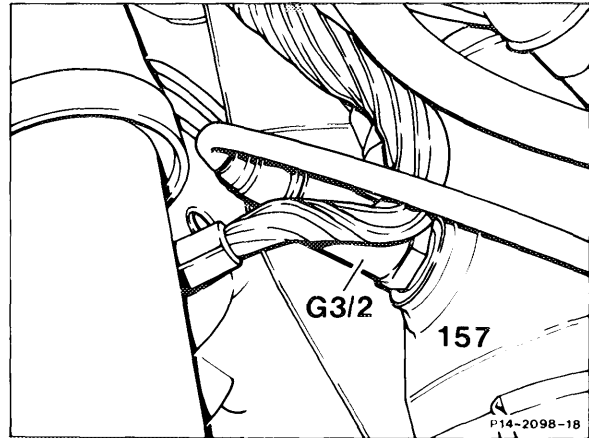


## 07.3-258 Renewing oxygen sensor

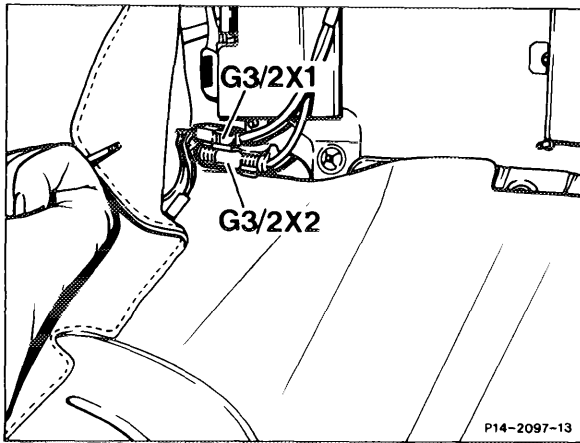

Floor mat, floor plate front right .....	remove, reinstall.
Covering on center tunnel .....	partly remove.
Coupling (G3/2x1 and G3/2x2) .....	for oxygen sensor signal (coaxial plug) and oxygen sensor heater (2-pole), disconnect.
Lines with grommet .....	force to the outside.
Shield .....	remove, refit. Observe installation position.
Oxygen sensor (G3/2) .....	unscrew, screw in. Coat thread of oxygen sensor with hot lubricating paste part No. 000 989 88 51. Secure oxygen sensor (50-60 Nm).
Lambda control .....	check, adjust (07.3-105).