


**07.3-268 Renewing rubber buffer for fuel pump assembly**

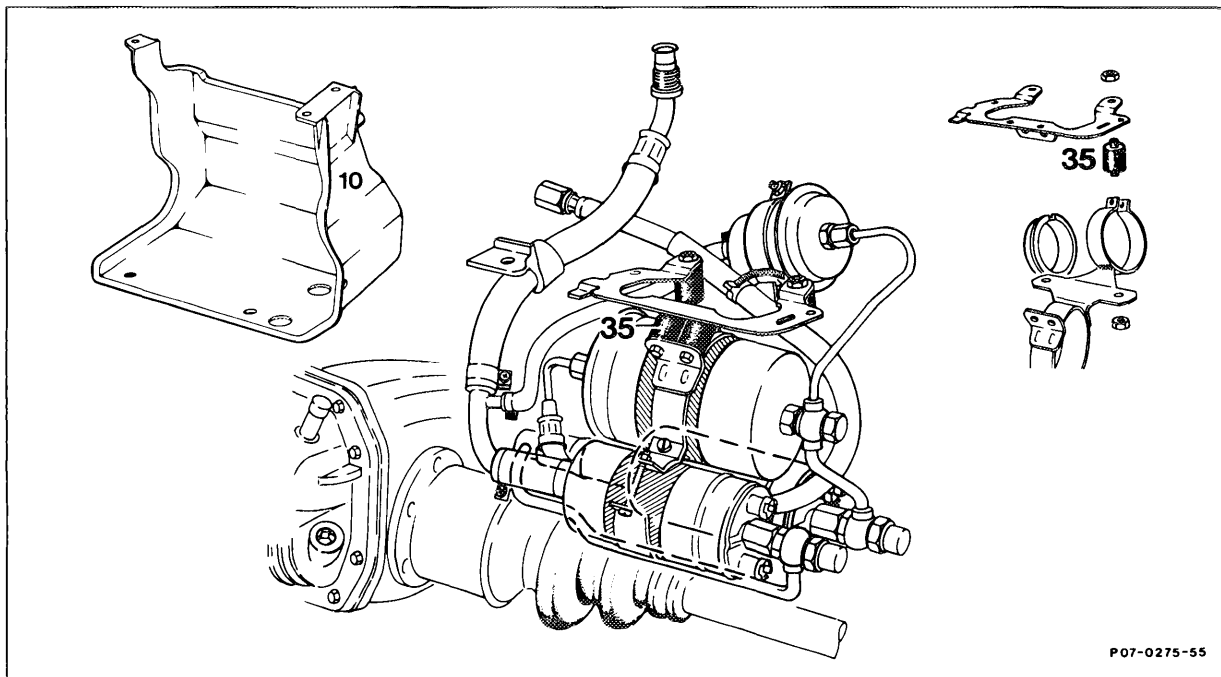

- |                       |       |                    |
|-----------------------|-------|--------------------|
| Protective cover (10) | ..... | unscrew, screw on. |
| Rubber buffer (35)    | ..... | remove, reinstall. |