


15-530 Renewing spark plugs

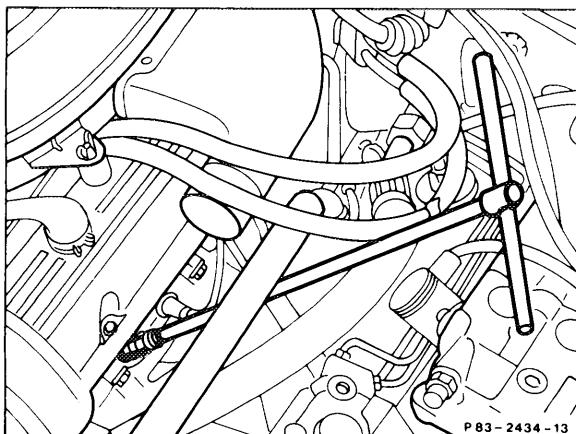

- | | |
|----------------------------|--|
| Spark plug connector | slacken by turning to left and right and pull off, fit on. Blow out recesses with compressed air. |
| Ignition cables | clean, when fitting on, ensure cable lines are correctly laid.
Ignition sequence: 1-5-4-8-6-3-7-2 |
| Spark plugs | remove and install.
Tightening torque 25-30 Nm. |

Special tool

