


30-310 Removing and installing engine longitudinal control shaft

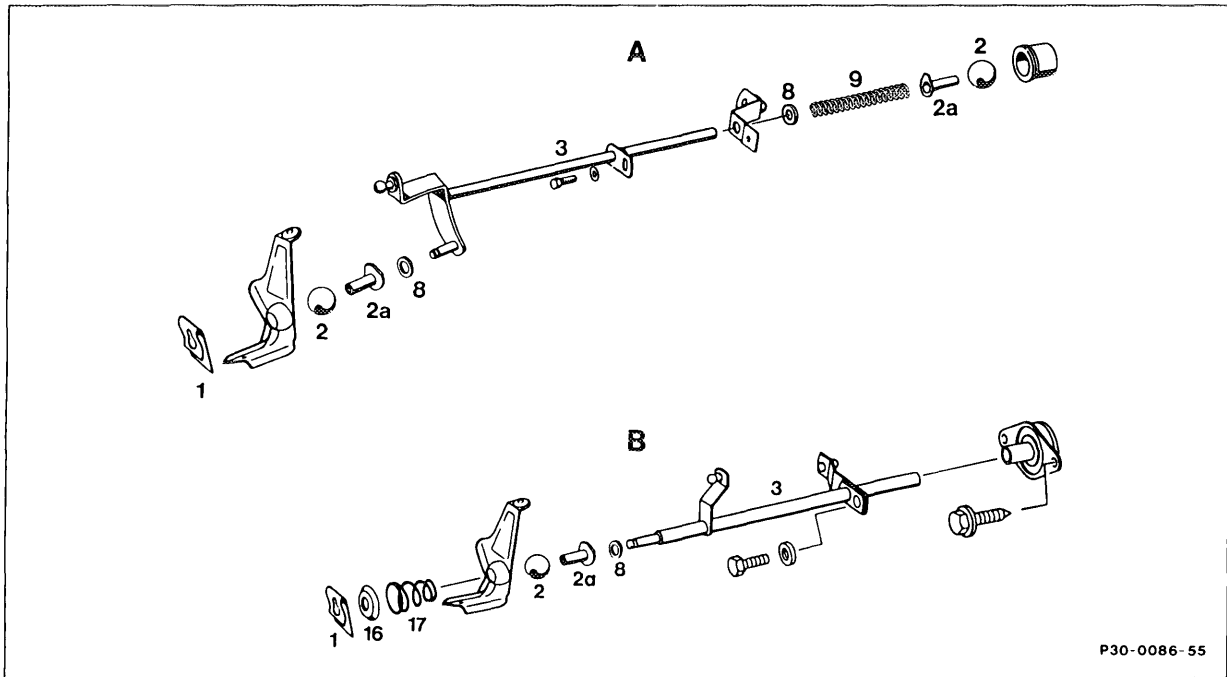

A Model 107
 B Model 126

Accelerator control rods	detach and attach.
Locking element (1)	remove and install. On Model 126, take off spring plate (16) and compression spring (17).
Longitudinal control shaft (3)	press back and take out. When performing this step on Model 107, pay attention to compression spring (9), plastic bushes (2a), pivoting balls (2) and washers (8).
Bearing points and ball sockets	grease with Molykote-Longterm 2.
Accelerator control linkage	check, adjust (30-300).