



Lubricating

After each engine wash and treatment of the engine compartment, **lubricate all bearing points of all accelerator control shafts, levers, joints of the accelerator control linkage and cables with an oil can.**

Only the following hydraulic oils may be used:

- BP-Aero-Hydraulic 1
- Castrol DB Hydraulic Fluid
- Esso Univers J-13
- Mobil Aero HFA
- Shell Aero Fluid 4