



- Check joints discs for wear and damage as well as for distortion (visual inspection).
- Replace joint disc in the event of wear or damage.
- Release tension of propeller shaft in the event of distortions.


If distortions remain, also replace joint disc.

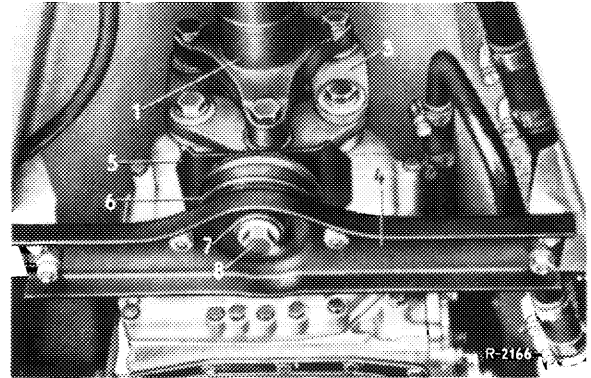

Model 100
3 Joint disc

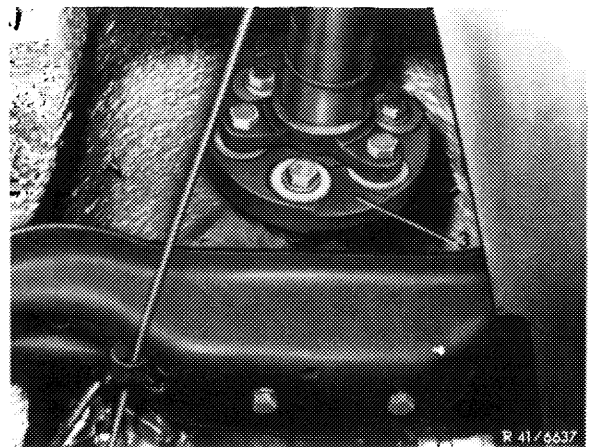

Models 108, 109
3 Joint disc

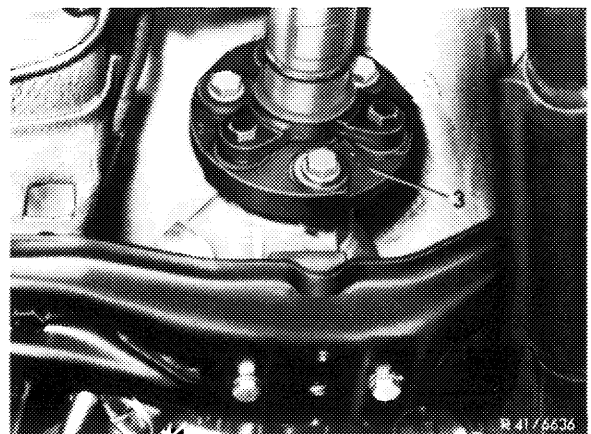

Models 107, 114, 115, 116, 123
3 Joint disc