


All engines
with dry air filter

Under normal dust conditions, replace air filter element every 50 000 km (30 000 miles).

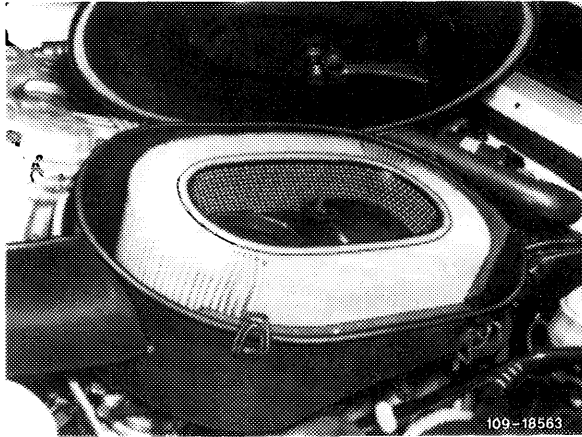


Engine 110


- Remove filter cover and remove element.
- Clean air filter cover and housing.

Attention! Do not use cotton waste.

- Install new element, observing correct seat of rubber ring and cover.

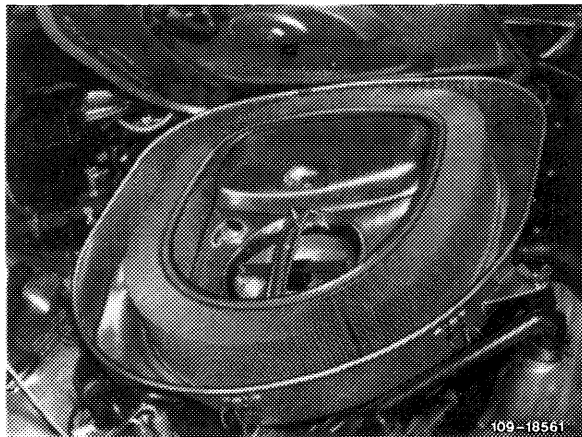

Engine 117

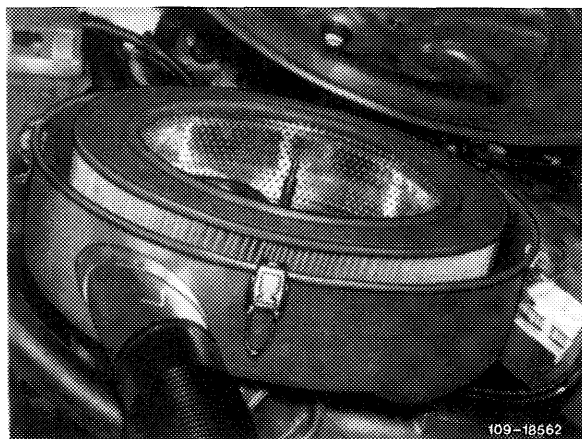

Engine 617.912