
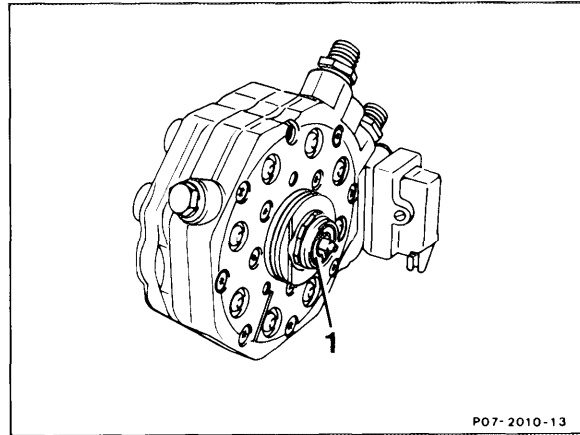



07.3-207 Renewing sealing ring for control piston

Preceding operation:
Renewing fuel distributor (07.3-205)

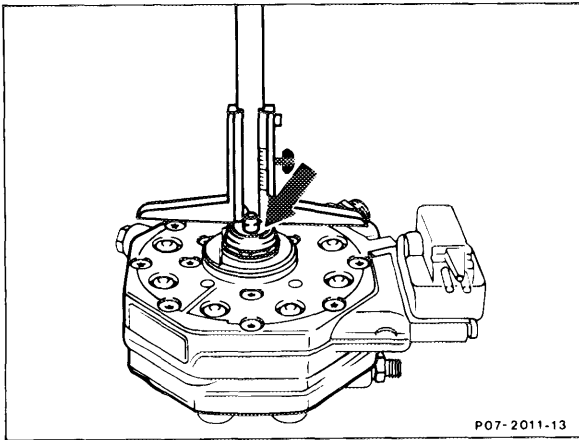

Position (arrow) of screw plug	measure with depth gauge and note. Mark position with scriber to be sure.
Screw plug (1)	remove with special tool.
Sealing ring of screw plug	renew, ensure proper seat of sealing ring.
Screw plug (1)	screw in until the distance measured prior to removal is obtained.
	
	Failure to do so will result in the control piston assuming a wrong basic position.
Idle speed	adjust

Special tool

