Version 1 (except model 116.036 and 123
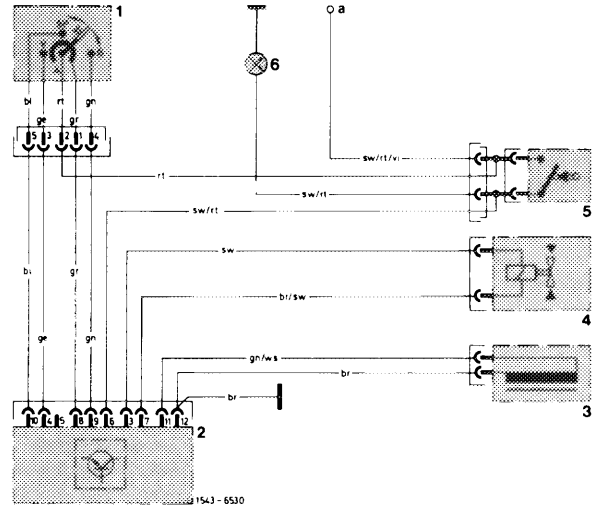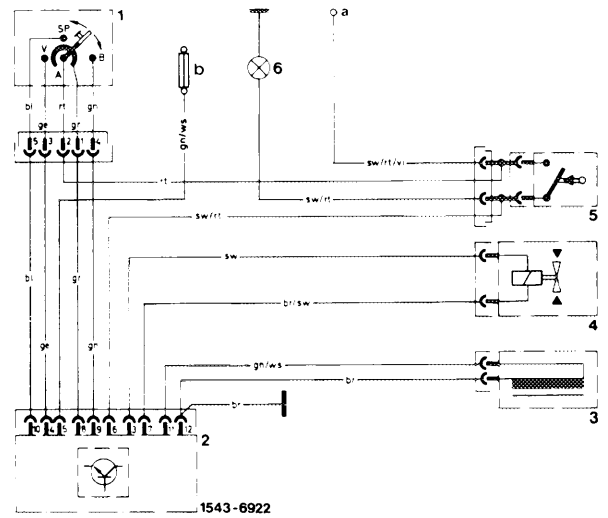
1 Switch
  SP = Resume
  V = Decel
  A = Off
  B = Accel

2 Control unir
3 Sensor
4 Actuator
5 Stop lamp switch
6 Stop lamp
a Terminal 15

Version 1 (model 116.036 up to chassis end No. 000 689)

1 Switch
  SP = Resume
  V = Decel
  A = Off
  B = Accel

2 Control unir
3 Sensor
4 Actuator
5 Stop lamp switch
6 Stop lamp
a Terminal 15
b Fuse 4 in main fuse box

Version 2 all models (model 123 with automatic transmission from start of production)

1 Switch
  SP = Resume
  V = Decel
  A = Off
  B = Accel

2 Control unir
3 Sensor
4 Actuator
5 Stop lamp switch
6 Stop lamp
a Terminal 15