


**Special tool**

---

Clamp




000 589 40 37 00

---

**Removal**

---

- 1 Pinch coolant hoses and pull off.
- 2 Pull TN choke out of carburetor housing after loosening fastening screws (arrows).

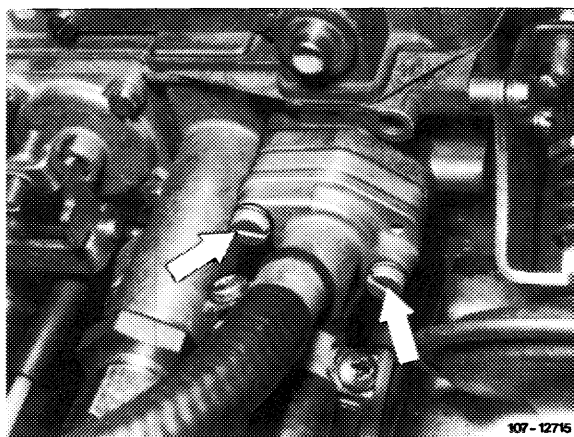

**Installation**

---

- 3 For installation proceed vice versa. Use new gasket and make sure that control window (arrow) is pointing upwards.

