



Removal

1 Pry bottom reveal molding toward center of car out of front panel pillar with a plastic wedge.

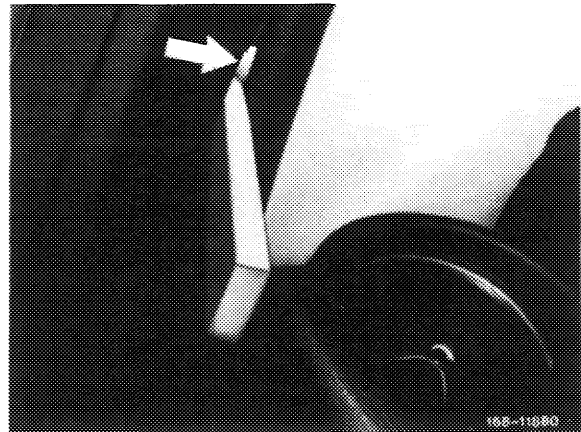

2 Pry upper reveal molding out of front wall pillar.

3 Press bottom reveal molding forward toward windshield, so that upper reveal molding can be lifted out of trim.

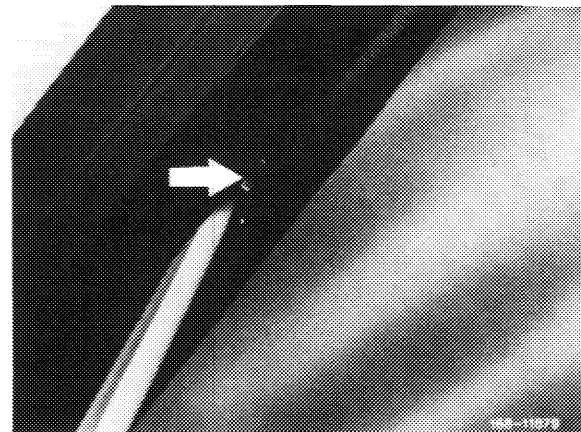

Installation

4 Install in reverse sequence.