

80—230 Removal and installation of vacuum element of tank filler neck flap


A. Sedan and coupe

Color code of vacuum lines for central interlock


Vacuum line	color code
Interlocking line (25)	yellow-red

Removal

- 1 Loosen oval head screws (30) for vacuum element and disconnect vacuum element.
- 2 Pull vacuum element together with control rod out of sleeve.

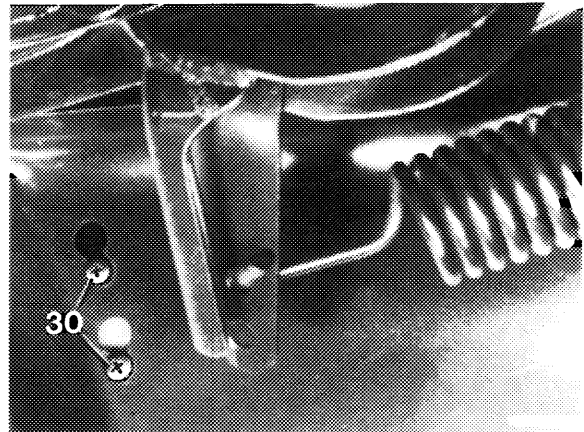

- 3 Pull connection (17) with interlocking line (25) from vacuum element (4).
- 4 Pull compression spring (18) from control rod.
- 5 Unscrew oval head screws (30).

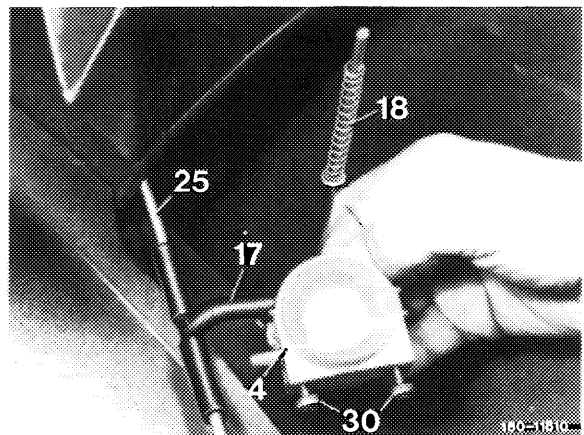

Installation

- 6 For installation proceed vice versa, while screwing oval head screws into vacuum element by half prior to installation.


B. T-sedan

Color code of vacuum lines for central interlock


Vacuum line	color code
Interlocking line (25)	yellow-red

Removal

- 1 Open paneling of trunk space at the right.

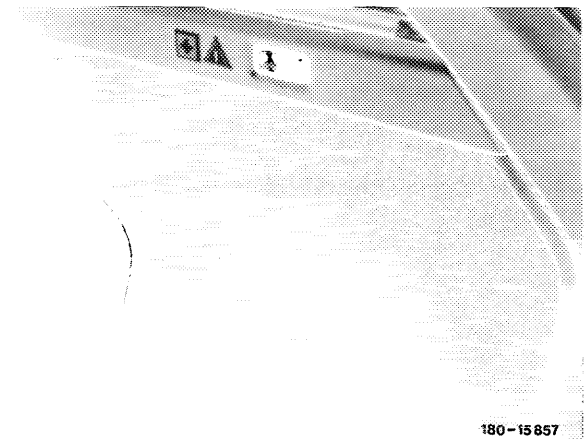

- 2 Pull connection (17) with interlocking line (25) from vacuum element (4).
- 3 Unscrew oval head screws (30) for vacuum element.

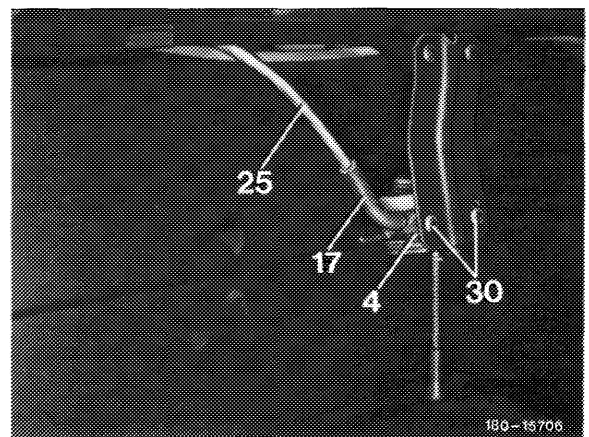

- 4 Pull vacuum element (4) with control rod out of sleeve (19).
- 5 Pull compression spring (18) from control rod.

Installation

- 6 For installation proceed vice versa.

