

**Note**

Plastic clips should be removed from packages which have been opened and placed in water in order to ensure that their elasticity is maintained.

**Trimstrip Above Light Unit**

---

- 1 Remove light unit (82–210).
- 2 Unscrew sheet metal screws on trimstrip.
- 3 Remove trimstrip.

**Trimstrip Laterally on Front Fender**

---

- 1 Unscrew front nut on trimstrip.
- 2 Push trimstrip in center out of clip hole by means of a plastic wedge.
- 3 Slide trimstrip forward and remove.

**Trimstrip on Windshield Post**

---

- 1 Remove coupe top or open roadster top.
- 2 Remove seal for side window from sealing rail on windshield post.
- 3 Unscrew the 5 screws on sealing rail.
- 4 Remove sealing rail.
- 5 Remove the 3 screws from trimstrip.
- 6 Remove trimstrip.

### **Trimstrip at Entrance**

---

- 1 Unscrew screw on trimstrip front and nut rear.
- 2 Push trimstrip from clip holes with plastic wedge and remove.

### **Trimstrip on Driver's Door**


---

- 1 Pull out sealing frame of driver's door at rear in trimstrip range.
- 2 Unscrew nut of trimstrip screw.
- 3 Push trimstrip out of clip holes with plastic wedge.
- 4 Remove trimstrip in rear direction.

### **Trimstrip on Upper Edge of Driver's Door**

---

- 1 Remove outside rear view mirror on driver's door (72–270).
- 2 Lift trimstrip from clips.

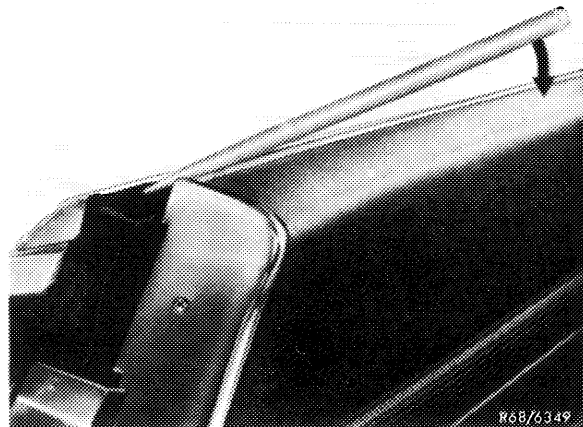

### **Trimstrip Laterally on Rear Fender**

---

- 1 Unscrew nut on trimstrip in wheel housing.
- 2 Slide trimstrip forward and remove.

### Trimstrip on Top of Coupe Top


---

- 1 Remove headlining on coupe top (68–430).
- 2 Remove foam rubber insert from top.
- 3 Drill pop rivets on trimstrip and remove.
- 4 Remove trimstrip.
- 5 Prior to assembly, glue paper tape to trimstrip as a protection against noise on outside surface.

### Trimstrip on Snap Lock of Trunk Lid


---

- 1 Pull out sealing frame of trunk lid in trimstrip range.
- 2 Remove rear lights.
- 3 Remove lower half of lock (2) on rear center panel.

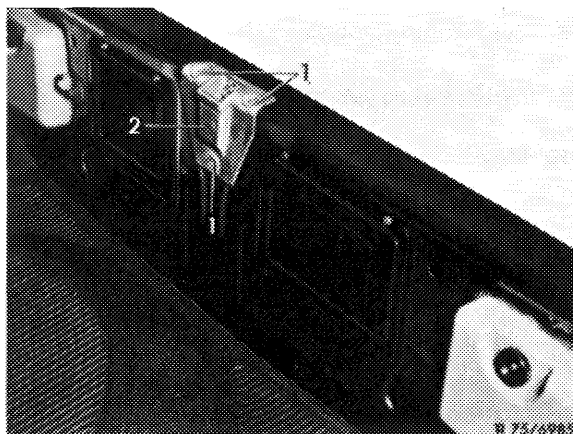

- 4 Unscrew fastening nuts (3) on trimstrip.
- 5 Remove three-part trimstrip with rubber shim.
- 6 For installation, proceed vice versa.

**Attention!** Watch out for water leaks when mounting parts.

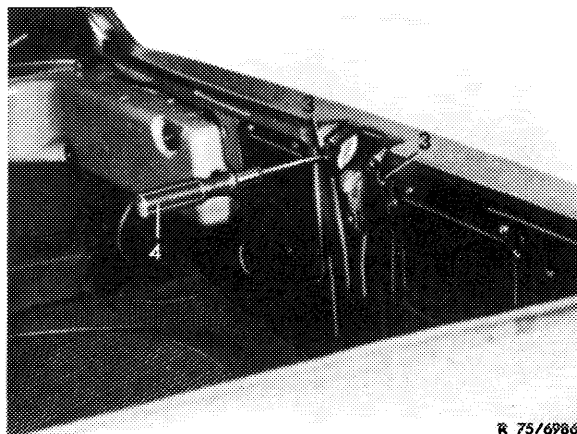

## **Trimstrip on Well Lid**

---

- 1** Unscrew fastening nuts of rosette.
- 2** Remove rosette and trimstrip cover.
- 3** Unscrew sealing nuts on trimstrip.
- 4** Remove trimstrip.
- 5** Lightly grease trimstrip shim with vaseline as a protection against noise.
- 6** Mount intermediate layer on trimstrip.
- 7** Slide square head screws into trimstrip.
- 8** Attach trimstrip outside first.
- 9** Tighten sealing nuts starting in center.
- 10** Mount trimstrip cover and rosette.