


Removal

- 1 Remove side wall in rear of vehicle (68–456).
- 2 Remove lateral molding strip on top (68–410).
- 3 Push trimstrip from rear crank window with plastic wedge.
- 4 Screw the two rear screws (1) and the lower screw (1) out of shutter (2). (Shutter is then held only by the upper screw (1)).
- 5 Remove ornamental frame in outward direction.

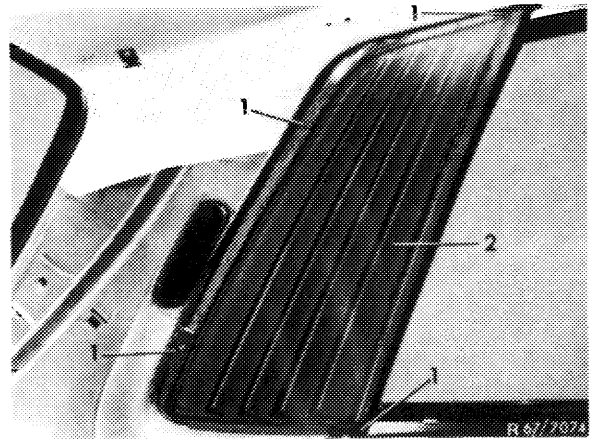

Installation

- 6 For installation proceed vice versa.