


Color code of vacuum lines for central interlock

Vacuum line	Color code		
	1st version	2nd version	3rd version
Suction line from distributor to vacuum supply tank (23)	yellow	grey-yellow	yellow-grey

Removal


1 Unscrew hex. nuts (63) from holding plate front right under fender.

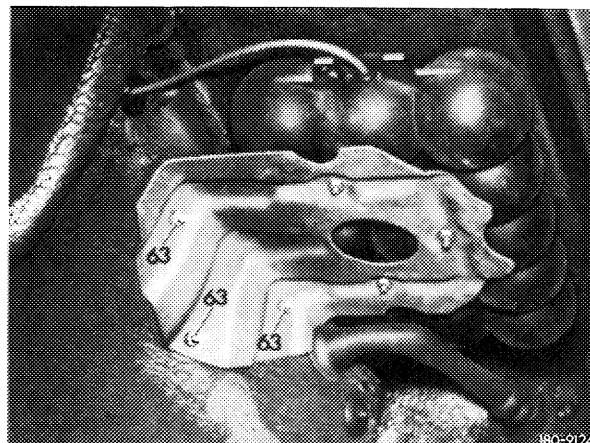

2 Remove vacuum supply tank (6) with bracket (64).


3 Unscrew hex. nuts (65) and remove bracket (64).

4 Pull suction line (23) out of seal.

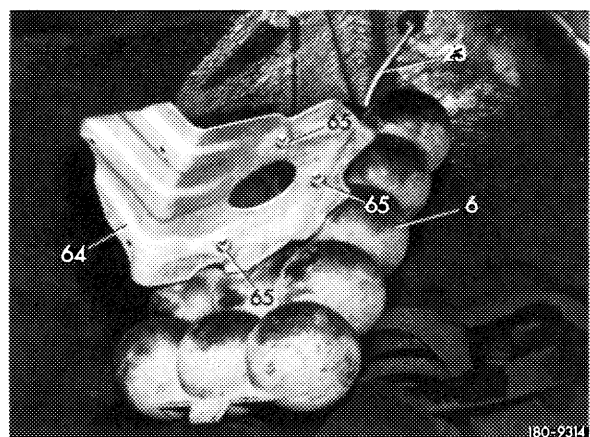

Installation

- 5 Push new seal into vacuum supply tank (6).
- 6 Slip vacuum line (23) into seal.
- 7 Screw bracket (64) to vacuum supply tank (6) by means of hex. nuts (65).

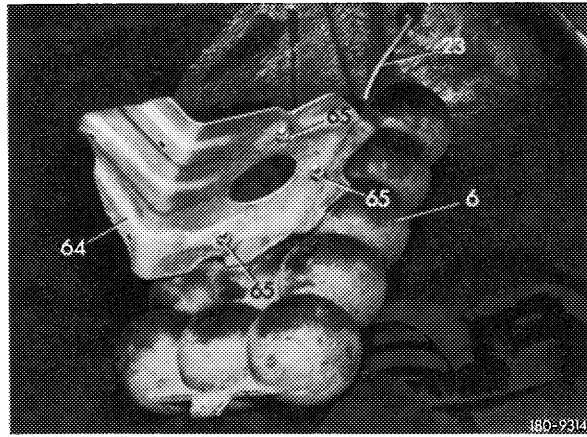

- 8 Screw vacuum supply tank (6) with bracket (64) to wheel house sheet metal by means of hex. nuts (63).

